


Maytag LDG33CA 05 - DOOR SWITCH, TEMP CONTROL & TERMINAL  
BLK

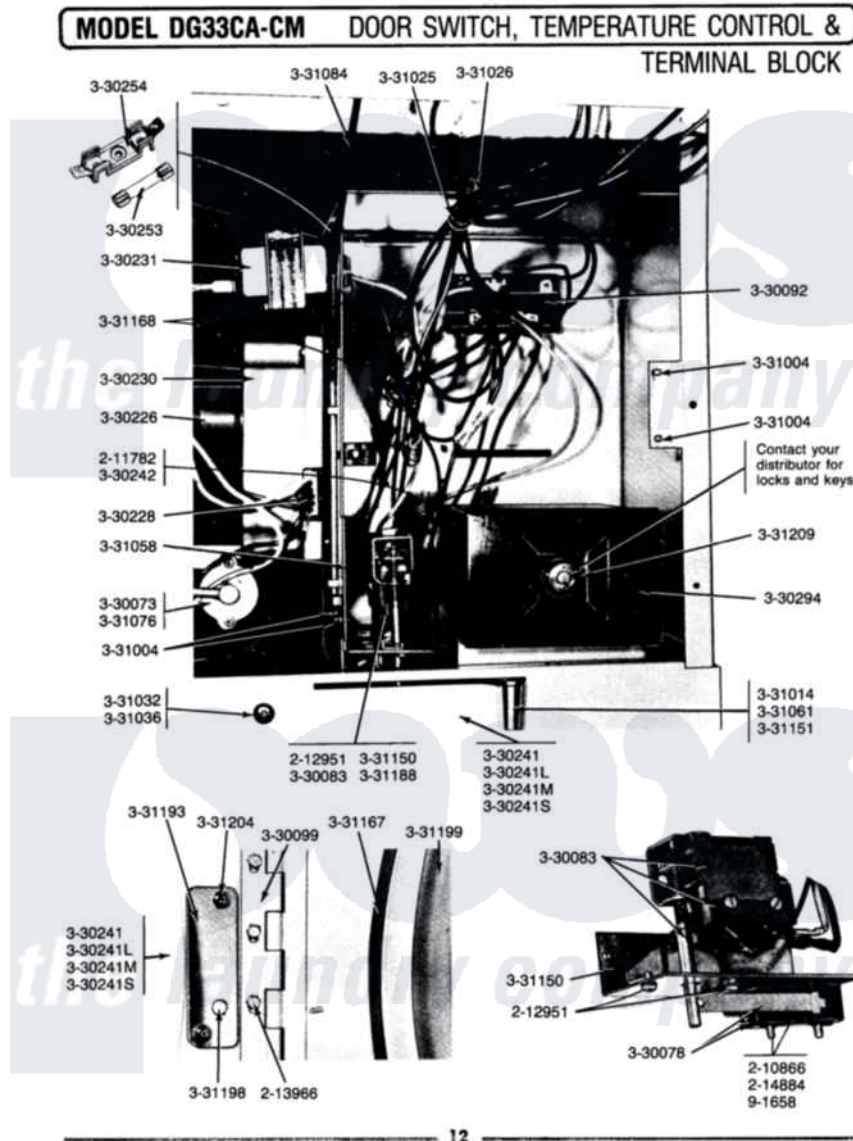

Maytag Commercial Maytag LDG33CA Dryer Parts Parts Diagram 05 - DOOR SWITCH, TEMP CONTROL & TERMINAL  
BLK

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	<a href="#">210866</a>			Nut, Twin Speed
002	NLA		Not Available	CAGE NUT
003	<a href="#">212951</a>			Screw, No.6-32 X 1/4 Inch
004	213966	<a href="#">3400014</a>		Screw
005	214884	<a href="#">213501</a>		Screw, No.6-20 X 1-1/8 Inch
006	<a href="#">Y330073</a>			Valve, Shut-Off
007	<a href="#">Y330078</a>			Cool-Down Bypass Switch
008	Y330083		Not Available	CONTROL, TEMPERATURE
009	<a href="#">Y330092</a>			Terminal Block
010	NLA		Not Available	HINGE
011	<a href="#">Y330226</a>			Wire, Ignition Control Assembly
012	<a href="#">Y330228</a>			Harness For Gas Valve
013	<a href="#">Y330230</a>			Ignition Control Assembly
014	<a href="#">Y330231</a>			Transformer

015	Y330232		Not Available	DOOR SWITCH
016	Y330241		Not Available	PANEL, FRONT (WHITE)
017	330241L		Not Available	(ALMOND)
018	NLA		Not Available	(HARVEST WHEAT)
019	Y330242		Not Available	VAULT ASSEMBLY
020	<a href="#">Y330253</a>			Fuse
021	<a href="#">Y330254</a>			Fuse Block
022	<a href="#">Y330294</a>			COIN BOX ASSEMBLY
023	NLA		Not Available	SCREW, BRACKET
024	331014	<a href="#">8281196</a>		Screw
025	NLA		Not Available	CABLE CLAMP
026	331026	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
027	331032	<a href="#">61002031</a>		Screw, Handle
028	<a href="#">331036</a>			Washer-Front Panel Screws
029	<a href="#">331058</a>			Grommet-Temp. Control Tubin
030	<a href="#">331061</a>			Knob For Temperature Contro
031	NLA		Not Available	GAS SUPPLY LINE-28 1/2 INCH
032	331084		Not Available	SUPPORT ROD FOR UPPER DOOR
033	NLA		Not Available	BRACKET-TEMPERATURE CONTROL
034	<a href="#">331151</a>			Lever-Temperature Control
035	<a href="#">331167</a>			Gasket For Door-Outer
036	NLA		Not Available	NUT, CONDUIT
037	NLA		Not Available	GROMMET, TEMP. CONTROL TUBIN
038	331193		Not Available	COVER FOR DOOR SWITCH BOX
039	331197		Not Available	SHIELD FOR DOOR SWITCH
040	<a href="#">331198</a>			Actuator For Door Switch
041	331199		Not Available	GASKET FOR DOOR GLASS
042	<a href="#">331201</a>			Door Switch Box
043	331204	<a href="#">61003351</a>		Screw, Handle To Frame
044	NLA		Not Available	SCREW
045	NLA		Not Available	TWIN FASTENER
046	NLA		Not Available	WASHER, COIN BOX LOCK
047	NLA		Not Available	TWIN FASTENER W/SCREWS

