 
 


Whirlpool CGM2761TQ2 Parts Diagram - 01 - TOP AND CONSOLE PARTS

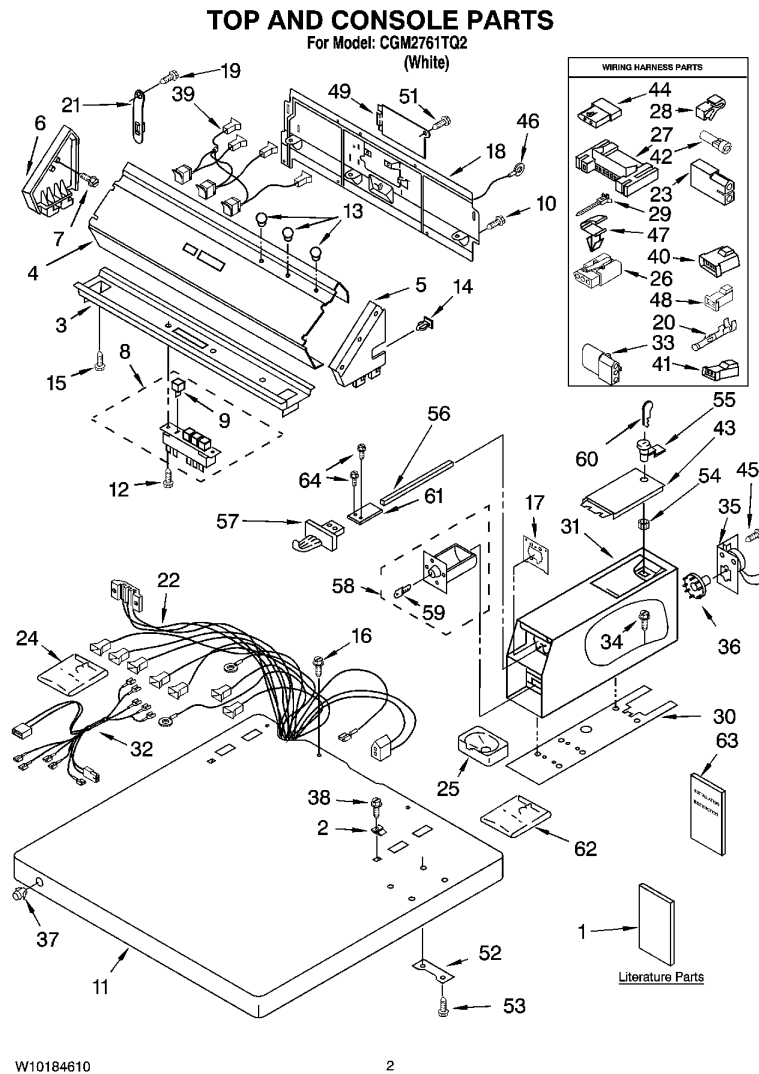


Item	Part Number	Part Description
1	W10184582	Instructions, Installation
1	8533569	Wiring Diagram
1	W10184610	Repair Parts List
2	357213	Nut-Pushin
3	3361029	Bracket, Control
4	8316634	Panel, Control
5	8316516	Cap, End (R.H.)
6	3949734	End Cap (L.H.)
7	97787	Screw, 11-16x3/4
8	8316437	Switch, Pushbutton (2)
9	8316433	Pushbutton (3)
10	693995	Screw, 8-18 x 3/8
11	3954665	Top
12	303921	Screw, 8-32 x 7/16
13	3348109	Lens Light (Amber)
14	689559	Nut, Push In
15	8533971	Screw, 8-18 x 5/16
16	343641	Screw, 10-16 x 1/2
17	3954761	PLATE, CHUTE ADAPTER ASSEMBLY (INCLUDES ITEMS 12 & 13)
18	3978608	Panel, Rear (Upper)
19	3390647	Screw 8-18 x 1/2
20	94614	Terminal (Female)
21	8568314	Strap, Console

Whirlpool CGM2761TQ2 Parts Diagram - 01 - TOP AND CONSOLE PARTS

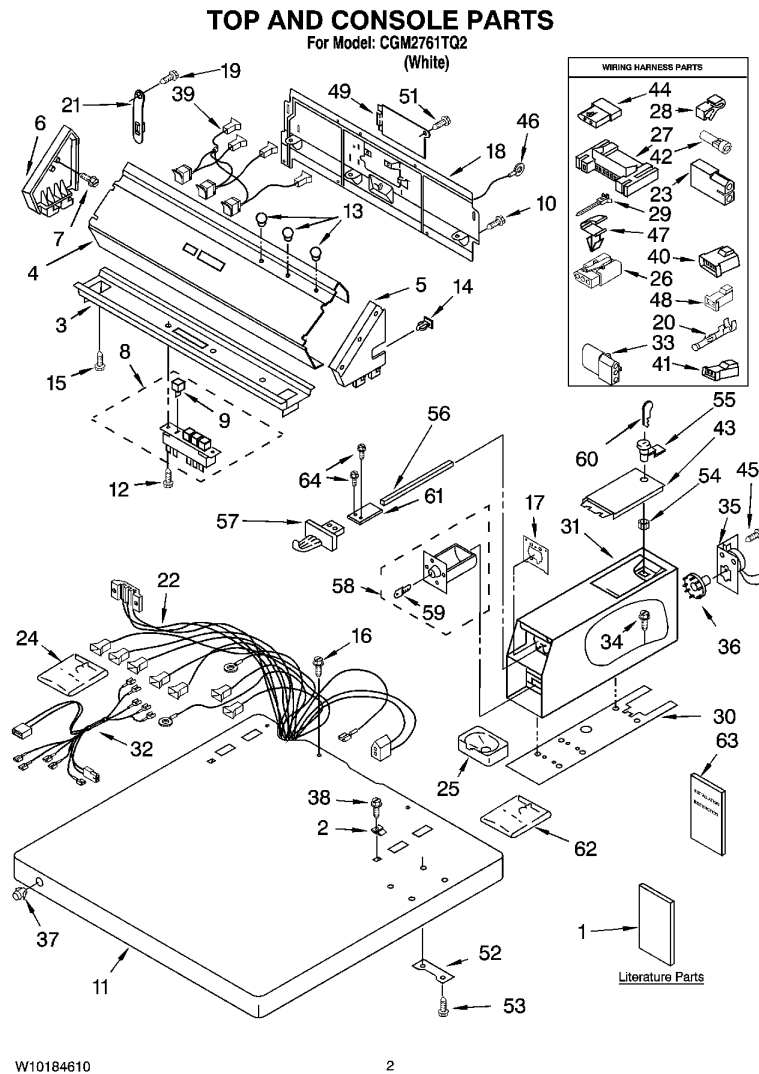

Item	Part Number	Part Description
39	8316640	Light, Indicator Assembly
40	3403498	Connector, 3 Position
41	3403499	Connector, 2-Position (Gas Valve)
42	351297	Plug, Harness
43	3351136	Door, Service
44	717253	Plug (2-Way)
45	339805	Screw, 10-32 X 3/16
46	3398893	Ground Wire
47	3394427	Clip, Harness Coin Mechanism Parts, May Be Ordered from Whirlpool Or
48	351296	Receptacle
49	8317340	Cover, Terminal Block
51	3390814	Screw (2)
52	3347825	Plate-Mounting (2)
53	98445	Screw, Thread Cutting
54	90406	Nut, Cage
54		
55	8316526	Security Lock/Key and Cam Assembly
56	8318517	Bolt, Coin Chute
57	8316520	Slide Mechanism (Vertical 8-Coin) (Dollar Vend)
57	8316264	Insert, Blank
57	8316265	Inserts (Not Shown) (25 Cent)
58	8316525	Money Box (Includes Item 18)
59		

 Whirlpool CGM2761TQ2 Parts Diagram - 01 - TOP AND CONSOLE PARTS

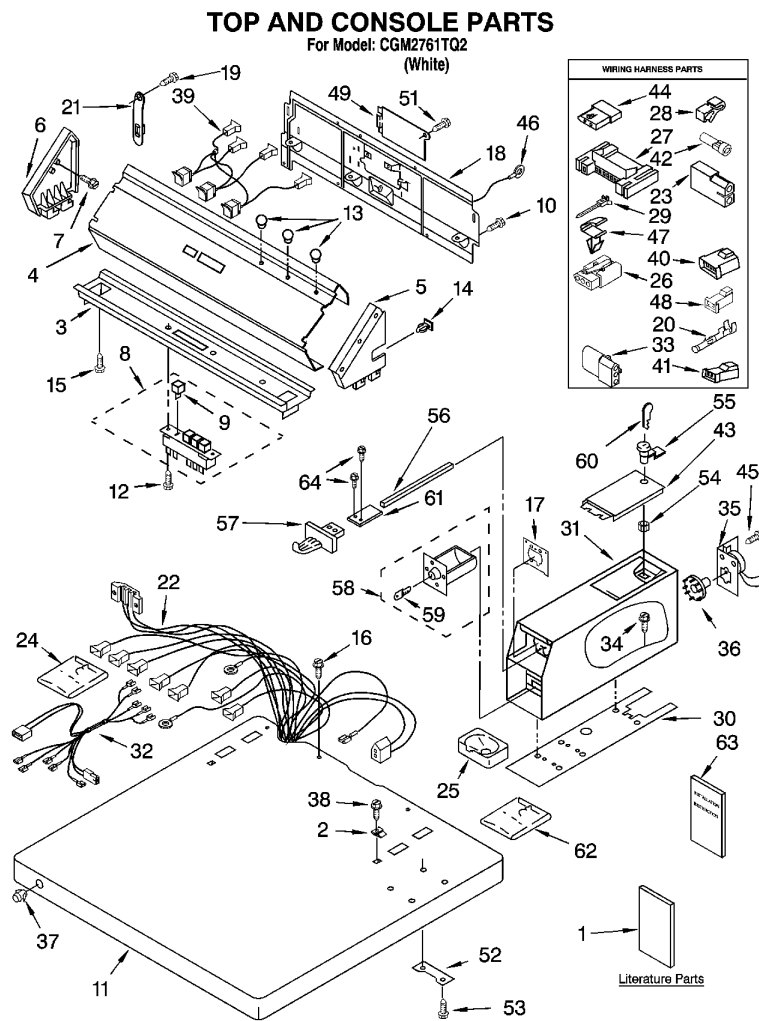

W10184610

2

Item	Part Number	Part Description
60		
61	8316523	Extension
62	8316524	Kit, Decal
63	8316532	Instructions, Coin Kit
64	3400029	Nut, Adapter Plate