


# Maytag DCZ1040AM 03 - DRUM

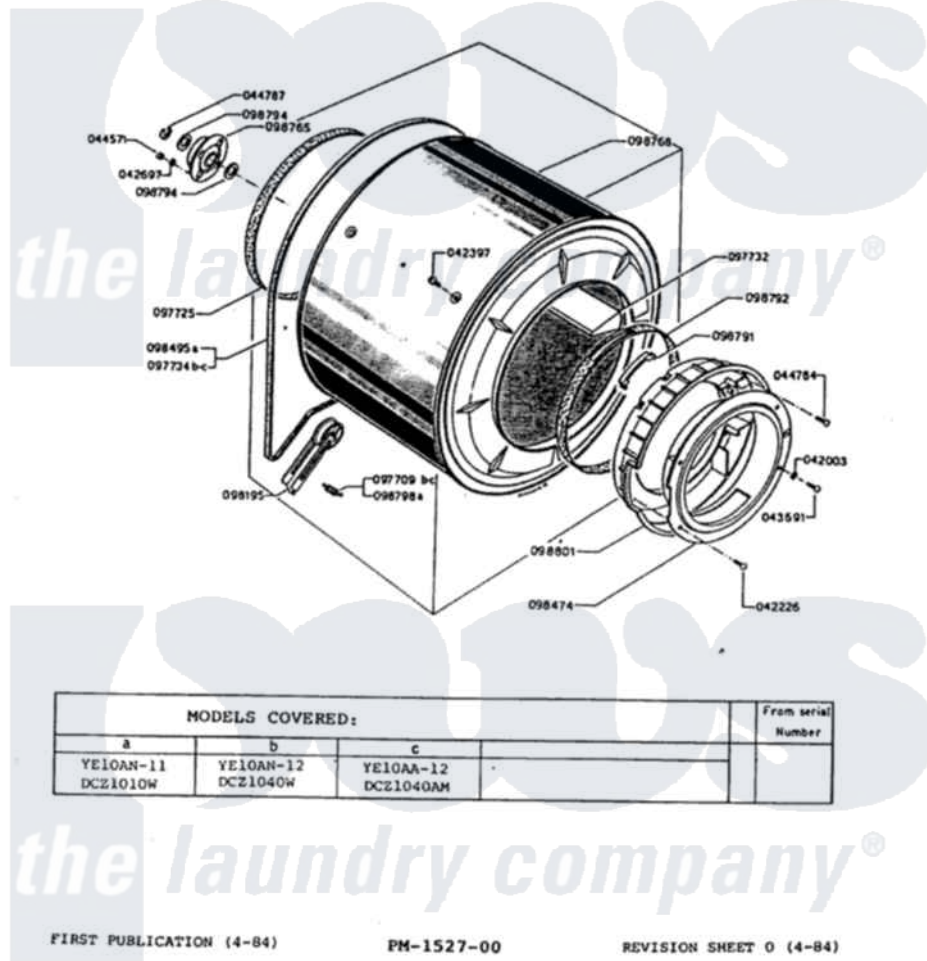

04

Maytag [Residential Maytag DCZ1040AM Stacked Washer and Dryer Parts](#) Parts Diagram 03 - DRUM  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	042003		Not Available	FLAT WASHER
2	042226		Not Available	SCREW
3	042397	<a href="#">8-1400-0-6</a>		Small Round Box
4	042697		Not Available	LOCKWASHER
5	043691		Not Available	SCREW
6	044571		Not Available	NUT
7	044784		Not Available	SCREW
8	044787		Not Available	SPRING RING
9	097709		Not Available	SPRING
10	097725		Not Available	REAR GASKET
11	097732		Not Available	DRUM PAD
12	097734		Not Available	DRUM BELT
13	098195		Not Available	IDLER PULLEY
14	098474		Not Available	DOOR FRAME
16	098765		Not Available	REAR BEARING
17	098768		Not Available	DRUM

18	098791	Not Available	BEARING
19	098792	Not Available	FRONT GASKET
20	098794	Not Available	SPACER WASHER
22	098801	Not Available	DOOR FLANGE

