


Maytag DG31CT 03 - TIMER ACCUMULATORS & TICKET CONTROL

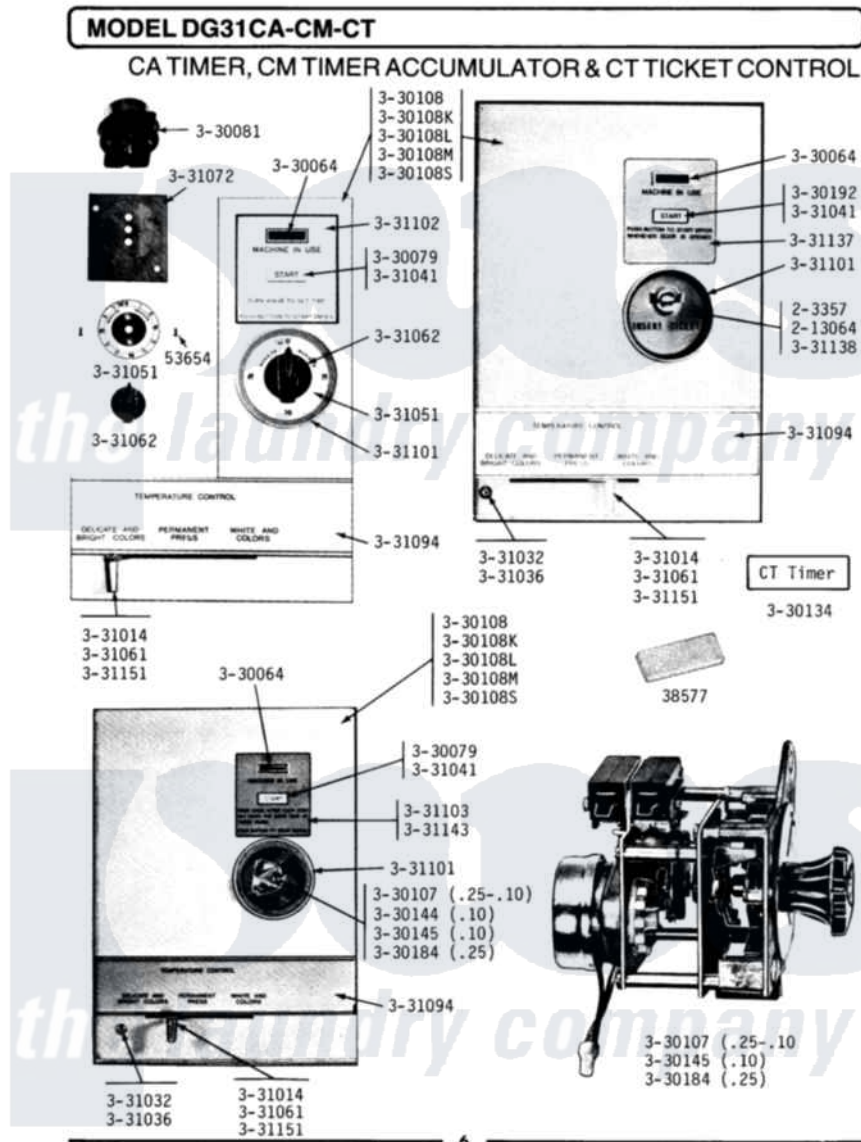

Maytag Residential Maytag DG31CT Dryer Parts Parts Diagram 03 - TIMER ACCUMULATORS & TICKET CONTROL
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	TOOL TO ADJUST TIMING SWITC
002	NLA		Not Available	SCREW, No.5-40 X 3/8
003	NLA		Not Available	PALNUT
004	NLA		Not Available	FRONT PLATE F/TICKET CONTRO
005	Y330064			Pilot Light
006	Y330079		Not Available	SWITCH, PUSH-TO-START
007	330081			Timer - CA 60 Minutes
008	NLA		Not Available	TIMER ACCUMULATOR - CM
009	NLA		Not Available	FRONT PANEL-WHITE
010	330108L		Not Available	FRONT PANEL-ALMOND
011	330108M		Not Available	FRONT PANEL-HARVEST WHEAT
012	NLA		Not Available	TIMER W/KNOB AND PIN
013	NLA		Not Available	MOUNTING PLATE (ACCUMULATOR)
014	Y330145		Not Available	CONTA ACCUMULATOR

014	1330143	Not Available	ASSEMBLY
015	330184		Timer Accumulator-25
016	Y330192	Not Available	SWITCH, PUSH TO START
017	331014	8281196	Screw
018	331032	61002031	Screw, Handle
019	331036		Washer-Front Panel Screws
020	331041		Button-Push-To-Start Switch
021	NLA	Not Available	TIMER DIAL - CA 60 MINUTES
022	331061		Knob For Temperature Contro
023	NLA	Not Available	KNOB FOR TIMER
024	NLA	Not Available	MOUNTING PLATE FOR TIMER
025	NLA	Not Available	TRIM BAR FOR UPPER PANEL
026	331101	Not Available	BEZEL FOR TIMER-ACCUMULATOR
027	NLA	Not Available	INSTRUCTION PLATE (CA)
028	NLA	Not Available	INSTRUCTION PLATE - CM
029	NLA	Not Available	INSTRUCTION PLATE-CT
030	NLA	Not Available	MOUNTING PLATE-TICKET CONT
031	NLA	Not Available	INSTRUCT LABEL - SINGLE COI
032	331151		Lever-Temperature Control

