



014	330143	Not Available	ASSEMBLY
015	<a href="#">330184</a>		Timer Accumulator-25
016	Y330192	Not Available	SWITCH, PUSH TO START
017	331014	<a href="#">8281196</a>	Screw
018	331032	<a href="#">61002031</a>	Screw, Handle
019	<a href="#">331036</a>		Washer-Front Panel Screws
020	<a href="#">331041</a>		Button-Push-To-Start Switch
NI	NLA	Not Available	TIMER DIAL - CA 60 MINUTES
022	<a href="#">331061</a>		Knob For Temperature Contro
NI	NLA	Not Available	KNOB, TIMER
"	NLA	Not Available	MOUNTING PLATE, TIMER
"	NLA	Not Available	TRIM BAR, UPPER PANEL
026	331101	Not Available	BEZEL FOR TIMER-ACCUMULATOR
NI	NLA	Not Available	INSTRUCTION PLATE
"	NLA	Not Available	PART NOT USED
"	NLA	Not Available	PART NOT USED
"	NLA	Not Available	MOUNTING PLATE-TICKET CONT
"	NLA	Not Available	INSTRUCT LABEL - SINGLE COI
032	<a href="#">331151</a>		Lever-Temperature Control

