


Maytag GDG34CD 03 - ELECTRONIC CONTROL ASSEMBLY

MODEL DG34CD-CQ

CD-CQ ELECTRONIC CONTROL ASSEMBLY

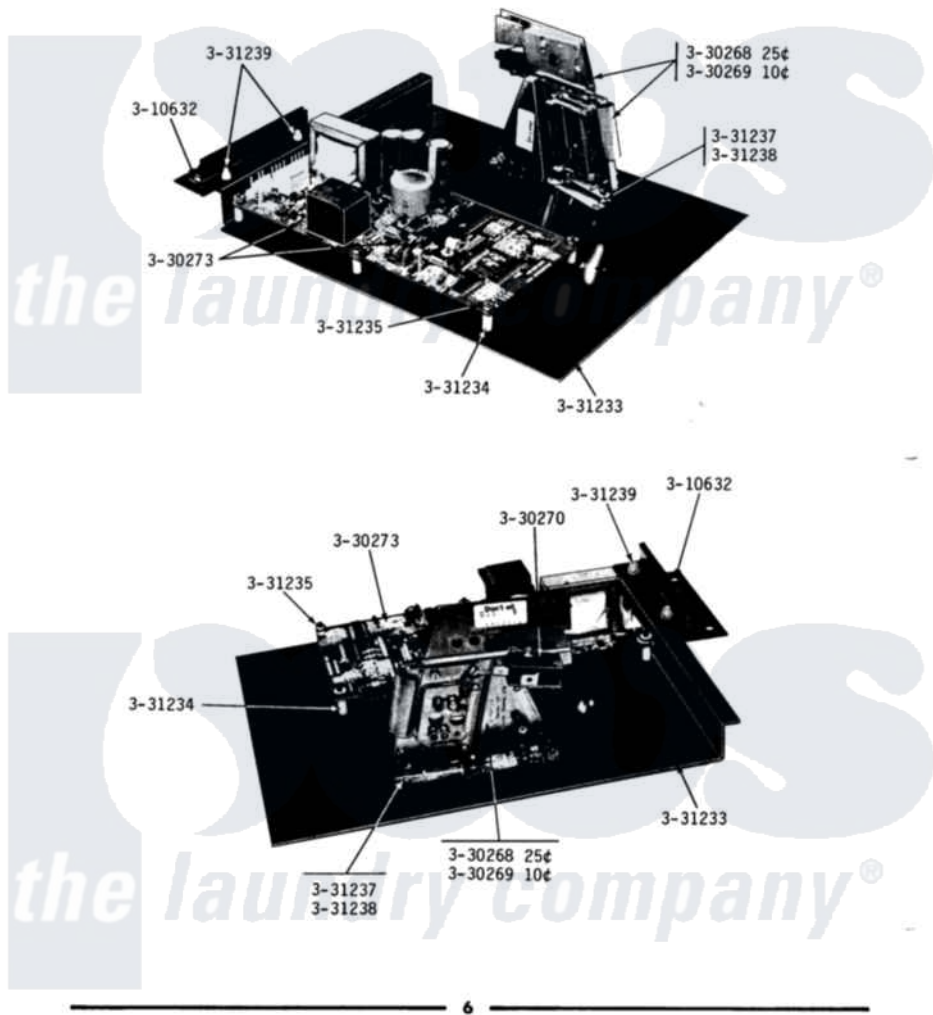

Maytag Residential Maytag GDG34CD Dryer Parts Parts Diagram 03 - ELECTRONIC CONTROL ASSEMBLY

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
001	Y310632	1163839		Screw
NI	Y330264		Not Available	WIRE HARNESS
"	Y330265		Not Available	WIRE HARNESS-DUAL CONTROL
"	Y330266		Not Available	MEMBRANE SWITCH
005	Y330268		Not Available	COIN ACCEPTOR ASSEMBLY \$.25
NI	NLA		Not Available	COIN ACCEPTOR ASSEMBLY \$.10
007	Y330270		Not Available	COIN SWITCH
008	36001001			Printed Circuit Board
"	36001002			Sensor
"	Y330273	Y330316		Electronic
"	Y330315			Switch Assembly
"	Y330319		Not Available	WIRE ASSEMBLY
"	Y330320			Harness, Heat Sensor
009	331233			Plate For Electronic Contro

010	331234		Spacer For Circuit Board
011	331235	701719	Nut, Hex
NI	NLA		Not Available
			BAIL FOR COIN RETURN
013	331237		Screw
NI	NLA		Not Available
			LOCK WASHER
"	NLA		Not Available
			BUMPER
"	NLA		Not Available
			LABEL - \$.25
"	NLA		Not Available
			LABEL - \$.10-\$.25

