


Maytag MAT26PCAAG 03 - CONTROL CENTER

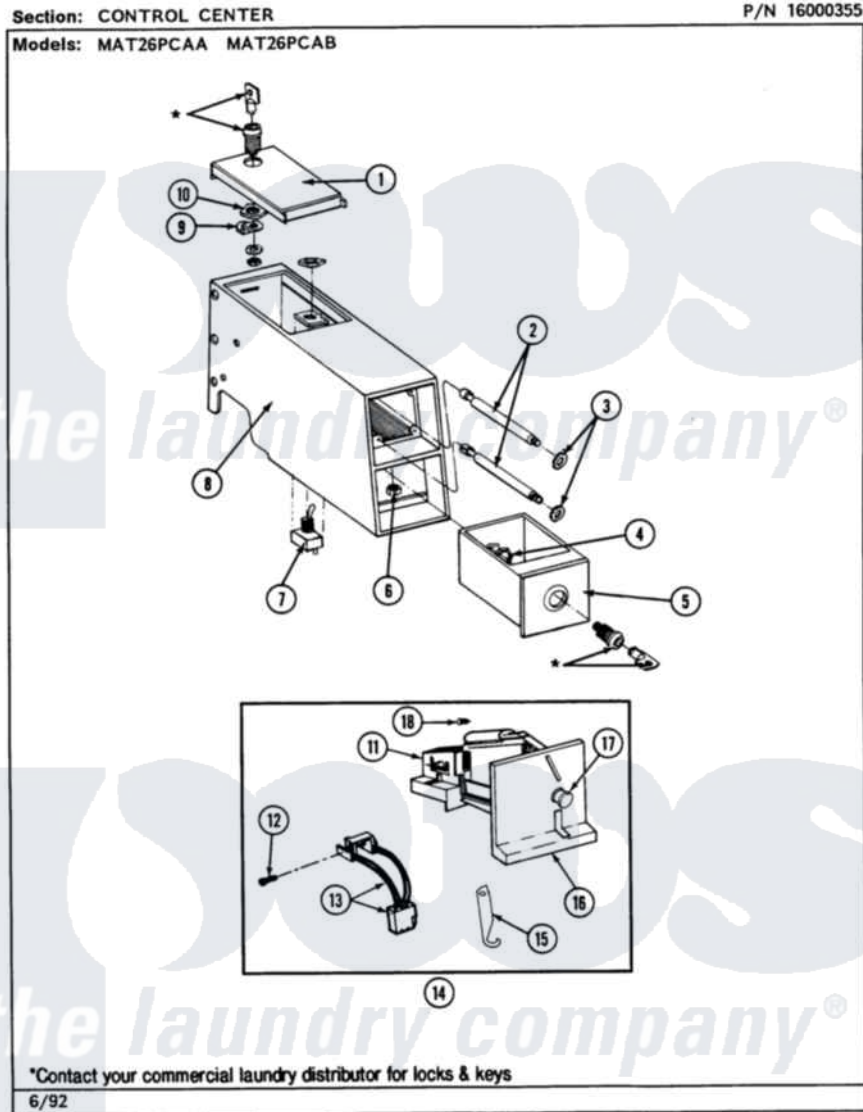

6

Maytag Residential Maytag MAT26PCAAG Washer Parts Parts Diagram 03 - CONTROL CENTER
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|------------------------|---------------------------|---------------|----------------------------|
| 001 | 203188 | | Not Available | TIMER ACCESS DOOR (WHT) |
| " | 203188L | | Not Available | ACCESS DOOR-ALMOND |
| " | 203188M | | Not Available | ACCESS DOOR-HARVEST WHEAT |
| 002 | 213035 | | | Bolt, Locking |
| 003 | 910181 | | | Lockwasher, Terminal Block |
| 004 | 212328 | W10139762 | | Hex Nut, 3/4-27 |
| 005 | 207912 | 208884 | | Coin Box K |
| " | 207912L | 208884 | | Coin Box K |
| " | NLA | | Not Available | (H. WHEAT) |
| 006 | Y052740 | 62739 | | Nut, Lock |
| 007 | 206794 | | Not Available | SWITCH (W/NUT) |
| 008 | 207940 | 22001407 | | Case, Coin Slide |
| " | 207940L | 22001408 | | (ALM) |
| " | NLA | | Not Available | (H. WHEAT) |
| 009 | 213750 | W10133266 | | Cam-Lock |

| | | | |
|-----|------------------------|---------------------------|------------------------|
| 010 | 212328 | W10139762 | Hex Nut, 3/4-27 |
| 011 | 207947 | | Rejector, Coin |
| 012 | 314665 | | Screw, Switch Assembly |
| 013 | 206799 | | Optic Switch Assembly |
| 014 | 207948 | | Coin Drop Assembly |
| 015 | 216011 | | Spring, Return Button |
| 016 | 216010 | Y208306 | Kit- Mtg C |
| 017 | 216009 | | BUTTON, RETURN |
| 018 | NLA | Not Available | SCREW |

