


# Whirlpool TAWS800PQ0 03 - AGITATOR, BASKET AND TUB PARTS

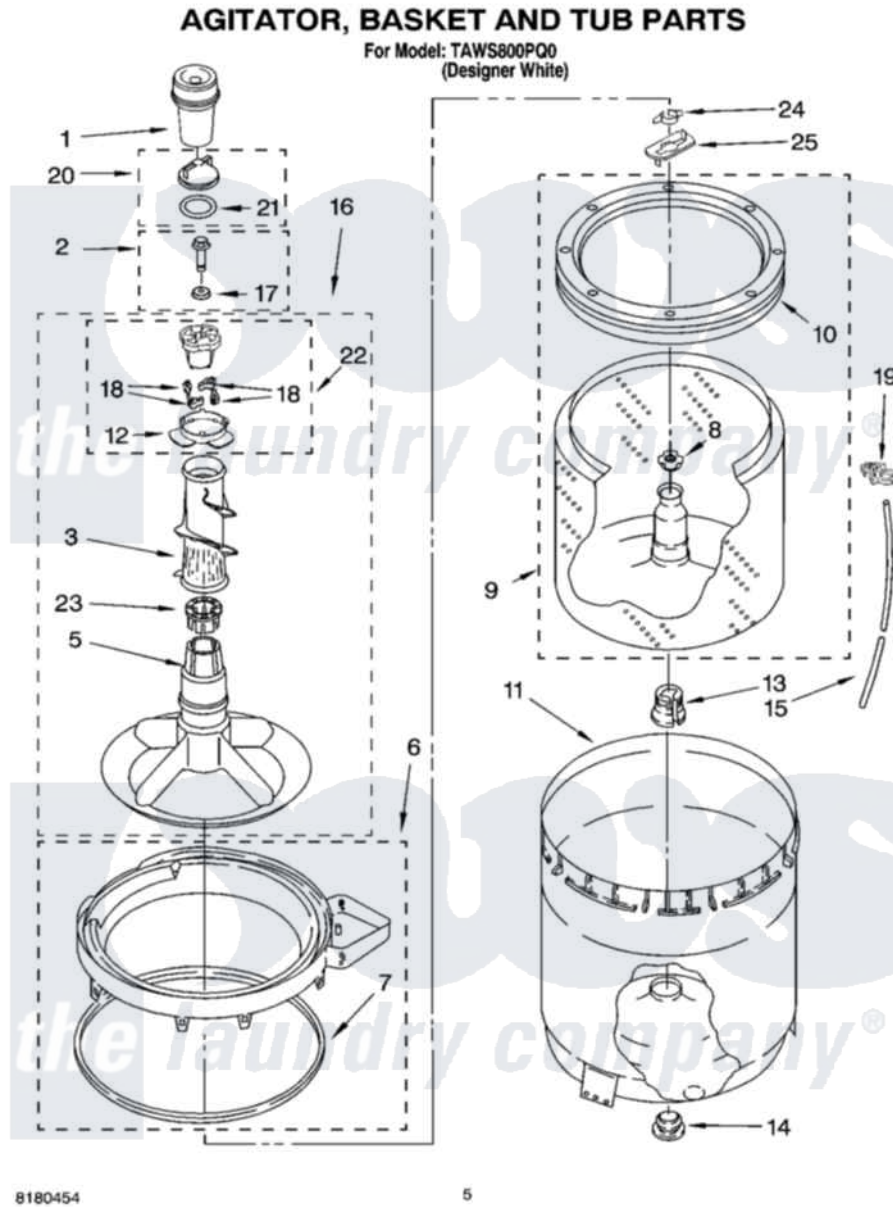

8180454

5

Whirlpool Residential Whirlpool TAWS800PQ0 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">63580</a>			Dispenser, Fabric Softener
2	<a href="#">358237</a>			Screw And Washer
3	<a href="#">3348752</a>			Mover, Clothes
5	<a href="#">3347288</a>			Agitator
6	8528150	<a href="#">W10445870</a>		Ring-Tub
7	<a href="#">3976308</a>			Gasket, Tub Ring
8	<a href="#">21366</a>			Nut, Spanner
9	8526016	<a href="#">W10389328</a>		Clothes Container, Assembly
10	8519788	<a href="#">387240</a>		Ring, Balance
11	<a href="#">63849</a>			Strain Relief, Power Cord
12	<a href="#">3363661</a>			Bearing, Driven Cam
13	<a href="#">389140</a>			Tub Block, Basket Drive
14	<a href="#">383727</a>			Gasket, Centerpod
15	3347780	<a href="#">353244</a>		Hose, Pressure Switch
16	3348117	<a href="#">285565</a>		Agitator
17	<a href="#">3949550</a>			Washer

18	3366877	<a href="#">80040</a>	Dog-Agitator
19	<a href="#">2219077</a>		Clip, Pressure Switch Hose
20	3354733	<a href="#">W10074580</a>	Cap, Barrier
21	3348855	<a href="#">W10072840</a>	Fabric Softener
22	3363663	<a href="#">285811</a>	Cam-Agitator
23	3350389	<a href="#">285587</a>	Washer
24	<a href="#">3354845</a>		Clip, Agitator
25	3355921	<a href="#">8543666</a>	Washer, Agitator

