Commercial Topload Washers

Refer to Page 3 for Model Numbers

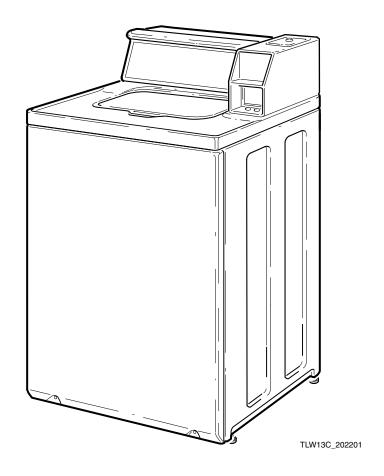




Table of Contents

Title	Page
Parts Ordering Information	2
Serial Plate Location	
Model Identification	
Coin Drop, Meter Case and Service Door	
Electronic Coin Drop	
Control Panel, Control Hood and Controls (Drawing 1 of 4)	
Control Panel, Control Hood and Controls (Drawing 2 of 4)	
Control Panel, Control Hood and Controls (Drawing 3 of 4)	
Control Panel, Control Hood and Controls (Drawing 4 of 4)	
Control Hood Security Kit	
Lid and Cabinet Top	18
Lid Switch	20
Fill Hose, Mixing Valve-to-Tub Cover Hose, Mixing Valve and Bracket	22
Motor, Mounting Bracket, Belt, Pump and Idler Assembly (Drawing 1 of 2)	24
Motor, Mounting Bracket, Belt, Pump and Idler Assembly (Drawing 2 of 2)	26
Agitator, Drive Bell, Hub and Lip Seal Kit and Washtub	28
Outer Tub, Cover, Bearing and Seal Housing, Pressure Hose and Counterweight	30
Transmission Assembly	32
Drain Hoses and Siphon Break Kit	34
Weldment and Bearing Assembly, Brake and Pulley	36
Front Panel, Base Assembly and Cabinet Kit	38
Mixing Valve and Motor Disconnect Blocks, Terminals and Terminal Extractor Tool	40
Lead-In Cord	42
Terminals	44
Shipping Materials and Special Tools	46
Special Tools	48
Wire Harnesses and Wires	50
Parts Index	53

© Copyright 2020, Alliance Laundry Systems LLC

All rights reserved. No part of the contents of this book may be reproduced or transmitted in any form or by any means without the expressed written consent of the publisher.

Parts Ordering Information


If literature or replacement parts are required, contact the source from whom the machine was purchased or contact Alliance Laundry Systems at (920) 748-3950 for the name and address of the nearest authorized parts distributor.

For technical assistance, call the number listed below:

(920) 748-3121 Ripon, Wisconsin

Serial Plate Location

When calling or writing about your product, be sure to mention model and serial numbers. Model and serial numbers are located on serial plate(s) as shown.

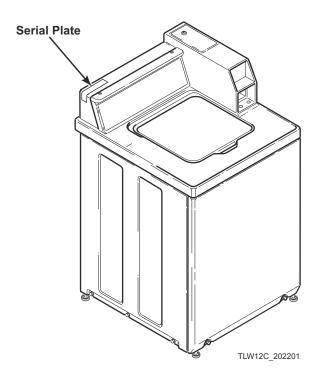

Model Identification

Information in this manual is applicable to these washer models:

 HWNLX2SP111CW01
 SWNLC2PP111TW01

 HWNLE2SP111CW01
 SWNLC2PP111TW02


 HWNLY2SP111CW01
 SWNLC2SP111TW01

 SWNLC2SP111TW01
 SWNLC2SP111TW01

SWNLC2PP111TW02 SWNLC2PP111TWNA SWNLC2SP111TQ01 SWNLC2SP111TW01 SWNLC2SP111TW02 SWNLC2SP111TWNA SWNLX2PP111TW02 SWNLX2SP111TW01 SWNLX2SP111TW01 SWNLX2SP301AW01 SWNLY2PP111TW01 SWNLY2PP111TWNA SWNLY2SP111TWNA SWNLY2SP111TWNA SWNLY2SP111TWNA

Coin Drop, Meter Case and Service Door

Models HWNLX2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CWNA, SWNLC2PP111TW01, SWNLC2PP111TW02, SWNLC2PP111TWNA, SWNLC2SP111TQ01, SWNLC2SP111TW01, SWNLC2SP111TW02, SWNLC2SP111TW04, SWNLX2SP111TW02, SWNLX2SP111TW01, SWNLX2SP111TW02 and SWNLX2SP301AW01

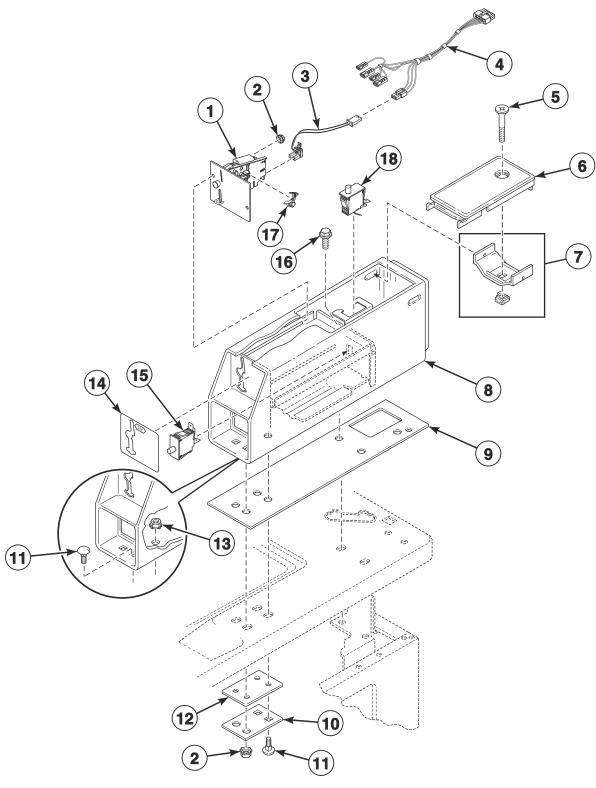


TLW1621P_202201

Coin Drop, Meter Case and Service Door

REF	PART NO.	DESCRIPTION	COMMENTS
1	70441601P	Coin Drop	Single; U.S.A. \$.25
	38464P	Coin Drop Assembly	Single; Canada .25
	70441602	Coin Drop Assembly	Dual; Canada .25 and 1.00
	38467	Coin Drop Assembly	Dual; Australia .20 and 1.00
	70447301	Coin Drop Assembly	Dual; Australia 1.00 and 2.00
	70482401	Coin Drop Assembly	Dual; New Zealand 1.00 and 2.00
	38462P	Coin Drop Assembly	Token 118-1; .880 diameter x .079 thick; Brass
	38463	Coin Drop Assembly	Token 118-5; .990 diameter x .081 thick; Silver
	38963P	Coin Drop	Token 118-16 not available; Replacement for 38963P Coin Drop only
2	29786	Nut	
3	200674P	Opto Coupler	
4	802905	Harness Assembly	Dual coin; Models HWNLX2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CWNA, SWNLX2PP111TW02, SWNLX2SP111TW01, SWNLX2SP111TW02 and SWNLX2SP301AW01
	802904P	Harness Assembly	All other models
5	D503673	Screw	All models except SWNLC2PP111TW02, SWNLC2SP111TW02, SWNLX2PP111TW02 and SWNLX2SP111TW02 through Serial No. 1009027902
6	803043WP	Service Door Assembly	Models SWNLC2SP111TW02, SWNLX2PP111TW02 and
			SWNLX2SP111TW02 through Serial No. 1009027902
	39874QP	Service Door Assembly	Model SWNLC2SP111TQ01
	39874WP	Service Door Assembly	All other models
7	204616	Meter Case Locking Bracket Kit	All models except SWNLC2PP111TW02, SWNLC2SP111TW02, SWNLX2PP111TW02 and SWNLX2SP111TW02 through Serial No. 1009027902
8	807401W	Meter Case Assembly Kit	Models SWNLC2PP111TW02, SWNLC2SP111TW02, SWNLX2PP111TW02 and SWNLX2SP111TW02
	803578P	Coin Box Extension Kit	Use with 803063W Meter Case Assembly to extend shorter 7 inch coin boxes; Models SWNLC2PP111TW02, SWNLC2SP111TW02, SWNLX2PP111TW02 and SWNLX2SP111TW02 starting Serial No. 1009027903
	802505W	Meter Case Assembly	Models HWNLE2SP111CW01 and HWNLE2SP111CWNA
	202877Q	Meter Case Assembly	Model SWNLC2SP111TQ01
	202877W	Meter Case Assembly	All other models
9	26354	Meter Case Gasket	
10	35525	Meter Case Lockdown Bracket	
11	203798	Bolt	
12	35526	Meter Case Bracket Gasket	
13	802337	Nut	
14	202123	Single Overlay	Models SWNLC2PP111TW02 and SWNLC2SP111TW02 through Serial No. 1009027902
	38717	Single Overlay	Models SWNLC2PP111TW02 and SWNLC2SP111TW02 starting Serial No. 1009027903; Models SWNLC2PP111TW01, SWNLC2PP111TWNA, SWNLC2SP111TQ01, SWNLC2SP111TW01 and SWNLC2SP111TWNA
15	D512973	Switch	Used through Serial No. 1810000001
	70529301	Switch	Used starting Serial No. 1810000001
16	36048	Screw	
17	201595P	Wire Guard	Anti-stringing security device
18	D512973	Switch	Used through Serial No. 1810000001

Electronic Coin Drop

Models HWNLX2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CWNA, SWNLC2PP111TW01, SWNLC2PP111TW02, SWNLC2PP111TWNA, SWNLC2SP111TQ01, SWNLC2SP111TW01, SWNLC2SP111TW02, SWNLC2SP111TW02, SWNLX2SP111TW01, SWNLX2SP111TW02 and SWNLX2SP301AW01

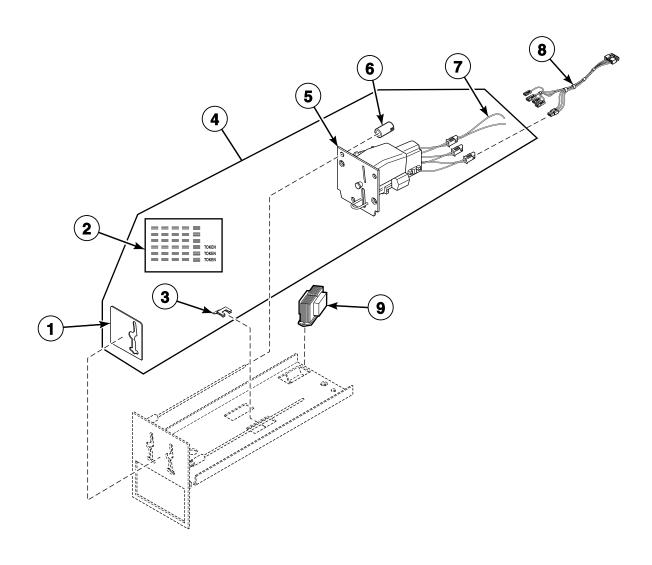


TLW1638P_202201

Electronic Coin Drop

REF	PART NO.	DESCRIPTION	COMMENTS
1	201091	Overlay	
2	38725	Coin Identification Paper	
3	201572	Clip	
4	CK115	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; United States and Canada coins; Models SWNLC2PP111TW01, SWNLC2PP111TWNA, SWNLC2SP111TQ01, SWNLC2SP111TW01, SWNLC2SP111TW02 and SWNLC2SP111TWNA also order items 8 and 9
	CK099	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Australia, New Zealand, Hong Kong and South Korea coins
	CK100	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Euro and Great Britain coins
	CK101	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Euro, Denmark and Norway coins
	CK103	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Euro, Lithuania and Latvia coins
	CK108	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; South African 1, 2, 5 rand coins
	CK109	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Euro coins
	CK110	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Mexico, Ecuador and United States coins
	CK113	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Japan and Taiwan coins
	CK116	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Malaysia and China coins
	CK117	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Russia coins
	CK118	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Philippine coins
	CK120	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Chile coins
	CK121	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Singapore coins
5	70294103P	Electronic Coin Drop Assembly	Euro and Great Britain coins
	70294104	Electronic Coin Drop Assembly	Euro, Denmark and Norway coins
	70294106	Electronic Coin Drop Assembly	Mexico, Ecuador and United States coins
	70294107	Electronic Coin Drop Assembly	Euro, Lithuania and Latvia coins
	70294110	Electronic Coin Drop Assembly	South African 1, 2, 5 rand coins
	70294111	Electronic Coin Drop Assembly	Euro coins
	70513311	Electronic Coin Drop Assembly	Malaysia and China coins
	70294117	Electronic Coin Drop Assembly	Russia coins
	70294120	Electronic Coin Drop Assembly	Chile coins
	70294121	Electronic Coin Drop Assembly	Singapore coins
6	201216	Nut	
7	201104	Coin Drop Wire Harness	
8	802905	Harness Assembly	Electronic coin drop requires this harness. If unit is not factory-equipped with this harness, it must be ordered separately.
9	201375P	Transformer	Electronic coin drop requires this transformer. If unit is not factory-equipped with this transformer, it must be ordered separately.

Control Panel, Control Hood and Controls (Drawing 1 of 4)

Models HWNLX2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CWNA, SWNLC2PP111TW01, SWNLC2PP111TW02, SWNLC2PP111TWNA, SWNLC2SP111TQ01, SWNLC2SP111TW01, SWNLC2SP111TW02, SWNLC2SP111TW04, SWNLX2SP111TW02, SWNLX2SP111TW01 and SWNLX2SP111TW02

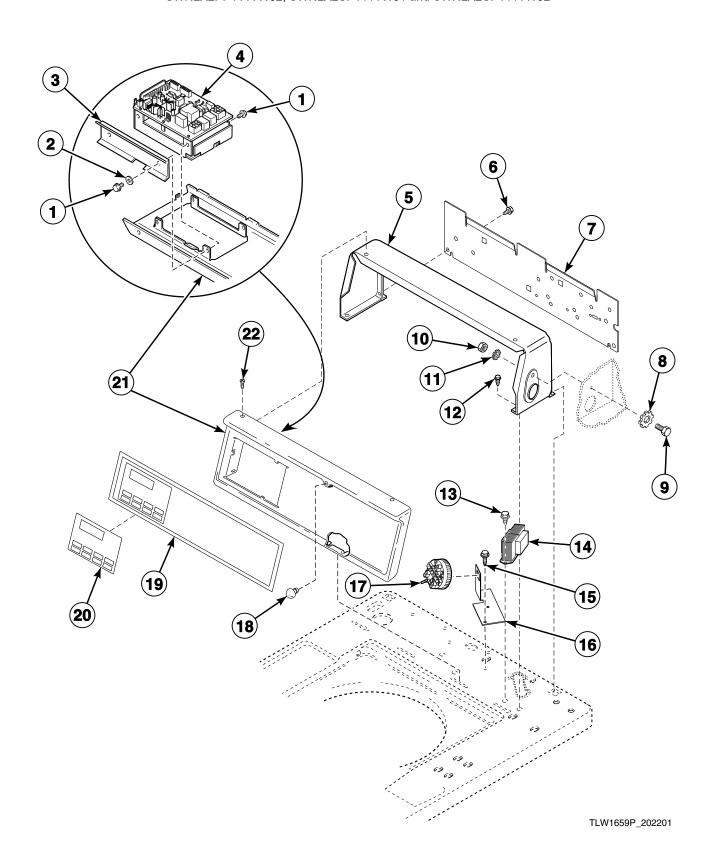


Control Panel, Control Hood and Controls (Drawing 1 of 4)

202331	REF	PART NO.	DESCRIPTION	COMMENTS
NK201 Network Retrofit Kit Wired		202331	Options Label	
NK301 Wireless Network Kit NK220 Network Controller Kit Wired		202332	Options Label	All other models
NK220		NK201	Network Retrofit Kit	Wired
NK320		NK301	Wireless Network Kit	
NK330		NK220	Network Controller Kit	Wired
1		NK320	Ethernet Gateway Kit	Wireless
2 200608 Washer		NK330	USB Gateway Kit	Wireless
3	1	D501524	Screw	
4 202311P Control Assembly	2	200608	Washer	
5 37075Q Control Hood Model SWNLC2SP111TQ01 37075W Control Hood All other models 6 23222 Screw 7 38267 Hood Back Panel 8 M400017 Washer 9 02916 Screw 10 52566 Nut 11 02431 Washer 12 D501086 Screw 13 D503661 Screw 14 201375P Transformer Some models may have jumper wire attached to transformer, Models MNNLX2SP111CWNA, SWNLX2SP111TW01, HWNLE2SP111CWNA, SWNLX2SP111TW02, SWNLX2SP111TW02, SWNLX2SP111TW02, SWNLX2SP111TW02, SWNLX2SP111TW02, SWNLX2SP111TW02, SWNLX2SP111TW02, SWNLX2SP111TW02, SWNLX2SP11TW01, HWNLE2SP11TW01, HWNLE2SP11TW01, HWNLE2SP11TW01, HWNLE2SP11TW01, HWNLE2SP11TW01, HWNLE2SP1TW01, HWNLE2SPTW01, HWNLE2SPTW01, HWNLE2SPTW01, HWNLE2SPTW01, HWNLE2SPTW01, HWNLE2SPTW01, HW	3	210053	Control Shield	
37075W Control Hood All other models	4	202311P	Control Assembly	
6 23222 Screw 7 38267 Hood Back Panel 8 M400017 Washer 9 02916 Screw 10 52566 Nut 11 02431 Washer 12 D501086 Screw 13 D503661 Screw 14 201375P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer; Models HWNLX2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111TW02, SWNLX2SP111TW01 and SWNLX2SP111TW02, SWNLX2SP111TW01 and SWNLX2SP111TW02. 201018P Transformer All other models 15 23962 Screw 16 201789 Pressure Switch Bracket 17 201997P Pressure Switch Models through Serial No. 1110007358 803638P Pressure Switch Models through Serial No. 1110007358 18 202469 Control Panel Bumper Extra thick Models HWNL2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01 Models HWNLE2SP111CW01, HWNLE2SP111CW01 202416 Control Panel Overlay Models HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE	5	37075Q	Control Hood	Model SWNLC2SP111TQ01
7 38267 Hood Back Panel 8 M400017 Washer 9 02916 Screw 10 52566 Nut 11 02431 Washer 12 D501086 Screw 13 D503661 Screw 14 201375P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer, Models HWNLX2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, MWNLX2SP111TW02 and SWNLX2SP111TW02 15 23962 Screw 16 201789 Pressure Switch Bracket 17 201997P Pressure Switch Models through Serial No. 1110007358 803638P Pressure Switch Models starting Serial No. 1110007359 803637 Pressure Switch Use for higher water level on models through Serial No. 1110007359 18 202469 Control Panel Bumper Extra thick 19 202417 Control Overlay Models HWNLX2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CW0A </td <td></td> <td>37075W</td> <td>Control Hood</td> <td>All other models</td>		37075W	Control Hood	All other models
8 M400017 Washer 9 02916 Screw 10 52566 Nut 11 02431 Washer 12 D503661 Screw 13 D503661 Screw 14 201375P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer, Models HWNLX2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111TW02 and SWNLX2SP111TW02 and SWNLX2SP111TW02 and SWNLX2SP111TW02 and SWNLX2SP111TW02 and SWNLX2SP111TW02 15 23962 Screw 16 201789 Pressure Switch Bracket Models through Serial No. 1110007358 17 201997P Pressure Switch Models through Serial No. 1110007359 803638P Pressure Switch Use for higher water level on models through Serial No. 1110007358 18 202469 Control Panel Bumper Extra thick 19 202417 Control Overlay Models HWNLX2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CW0	6	23222	Screw	
9 02916 Screw 10 52566 Nut 11 02431 Washer 12 D501086 Screw 13 D503661 Screw 14 201375P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer. Models HWNLX2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CWNA, SWNLX2SP111TW02, SWNLX2SP111TW02 and SWNLX2SP111TW02. 210018P Transformer All other models 15 23962 Screw 16 201789 Pressure Switch Bracket 17 201997P Pressure Switch Models through Serial No. 1110007358 803638P Pressure Switch Models starting Serial No. 1110007359 803637 Pressure Switch Use for higher water level on models through Serial No. 1110007358 18 202469 Control Panel Bumper Extra thick 19 202417 Control Overlay Models HWNLX2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CW01 and HWNLE2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CW01 and HWNLE2SP111CW01 and HWNLE2SP111CW01 and HWNLE2SP111CW01 and HWNLE2SP111CW01 and HWNLE2SP111CW01	7	38267	Hood Back Panel	
10 52566 Nut 11 02431 Washer 12 D501086 Screw 13 D503661 Screw 14 201375P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer. Models HWNLX2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111TW02 and SWNLX2SP111TW02, SWNLX2SP111TW01 and SWNLX2SP111TW02, SWNLX2SP111TW01 and SWNLX2SP111TW02, SWNLX2SP111TW01 and SWNLX2SP111TW02 15 23962 Screw 16 201789 Pressure Switch Bracket 17 201997P Pressure Switch Models starting Serial No. 1110007358 803638P Pressure Switch Models starting Serial No. 1110007359 903637 Pressure Switch Use for higher water level on models through Serial No. 1110007358 18 202469 Control Panel Bumper Extra thick 19 202417 Control Overlay Models HWNLX2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CW01 and HWNLE2SP111CW01, HWNLE2SP111CW01 and HWNL	8	M400017	Washer	
11 02431 Washer 12 D501086 Screw 13 D503661 Screw 14 201375P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer. Discard jumper when replacing transformer. Discard jumper wire when replacing transformer. Disc	9	02916	Screw	
12 D501086 Screw 13 D503661 Screw 14 201375P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer, Models HWNLX2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW0A, SWNLX2SP111TW02 and SWNLX2SP111TW02 15 23962 Screw 16 201789 Pressure Switch Bracket 17 201997P Pressure Switch Bracket 17 201997P Pressure Switch Models through Serial No. 1110007358 803638P Pressure Switch Use for higher water level on models through Serial No. 1110007359 803637 Pressure Switch Use for higher water level on models through Serial No. 1110007358 18 202469 Control Panel Bumper Extra thick M400795 Bumper Extra thick 19 202417 Control Overlay Models HWNLX2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CW01 20 20309 Control Sticker Overlay French/English; Models HWNLX2SP111CW01, HWNLE2SP111CW0A 21 210042Q Control Panel Assembly Model SWNLC2SP111TQ01 21 210042Q	10	52566	Nut	
13 D503661 Screw 14 201375P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer; Models HWNLX2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111TW02, SWNLX2SP111TW02 and SWNLX2SP111TW02 210018P Transformer All other models 15 23962 Screw 16 201789 Pressure Switch Bracket 17 201997P Pressure Switch Models through Serial No. 1110007358 803638P Pressure Switch Use for higher water level on models through Serial No. 1110007359 803637 Pressure Switch Use for higher water level on models through Serial No. 1110007358 18 202469 Control Panel Bumper M400795 Bumper Extra thick 19 202417 Control Overlay Models HWNLX2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CW01 and HWNLE2SP111CW01 20 202309 Control Sticker Overlay French/English; Models HWNLX2SP111CW04 21 210042Q Control Panel Assembly Model SWNLC2SP111TQ01 21 210042W Control Panel Assembly All other models 22	11	02431	Washer	
14 201375P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer; Models HWNLX2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111TW02 awnLX2SP111TW02 210018P Transformer All other models 15 23962 Screw 16 201789 Pressure Switch Bracket 17 201997P Pressure Switch Models through Serial No. 1110007358 803638P Pressure Switch Models starting Serial No. 1110007359 803637 Pressure Switch Use for higher water level on models through Serial No. 1110007358 18 202469 Control Panel Bumper M400795 Bumper Extra thick 19 202417 Control Overlay Models HWNLX2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CW01 and HWNLE2SP111CW01 and HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CW01 and HWNLE2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111	12	D501086	Screw	
transformer, Discard jumper wire when replacing transformer; Models HWNLX2SP111CW01, HWNLE2SP111CWN01, HWNLE2SP111CWN01, HWNLE2SP111TW02, SWNLX2SP111TW01 and SWNLX2SP111TW02 and SWNLX2SP111TW02 and SWNLX2SP111TW02 and SWNLX2SP111TW02 and SWNLX2SP111TW02 and SWNLX2SP11TW02 and SWNLX2SP11TW02 and SWNLX2SP11TW02 and SWNLX2SP11TW02 and SWNLX2SP11TW02 and SWNLX2SP11TW01 and SWNLXSSP11TW01 and SWNLXSSP11TW01 and SWNLXSSP11TW01 and SWNLXSSP1TW01 and SWNLXSSP1TW01 and HWNLESSP1TW01, HWNL	13	D503661	Screw	
210018P Transformer All other models	14	201375P	Transformer	transformer. Discard jumper wire when replacing transformer; Models HWNLX2SP111CW01, HWNLE2SP111CWNA, SWNLX2PP111TW02, SWNLX2SP111TW01 and
16 201789 Pressure Switch Bracket 17 201997P Pressure Switch Models through Serial No. 1110007358 803638P Pressure Switch Models starting Serial No. 1110007359 803637 Pressure Switch Use for higher water level on models through Serial No. 1110007358 18 202469 Control Panel Bumper M400795 Bumper Extra thick 19 202417 Control Overlay Models HWNLX2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CW01 202416 Control Panel Overlay All other models 20 202309 Control Sticker Overlay French/English; Models HWNLX2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CW0A 21 210042Q Control Panel Assembly Model SWNLC2SP111TQ01 21 210042W Control Panel Assembly All other models 22 52864 Screw Phillips head		210018P	Transformer	All other models
17 201997P Pressure Switch Models through Serial No. 1110007358 803638P Pressure Switch Models starting Serial No. 1110007359 803637 Pressure Switch Use for higher water level on models through Serial No. 1110007358 18 202469 Control Panel Bumper M400795 Bumper Extra thick 19 202417 Control Overlay Models HWNLX2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CW0A 202416 Control Panel Overlay All other models 20 202309 Control Sticker Overlay French/English; Models HWNLX2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CW01 and HWNLE2SP111CW0A 21 210042Q Control Panel Assembly Model SWNLC2SP111TQ01 21 210042W Control Panel Assembly All other models 22 52864 Screw Phillips head	15	23962	Screw	
803638P Pressure Switch Models starting Serial No. 1110007359 803637 Pressure Switch Use for higher water level on models through Serial No. 1110007358 18	16	201789	Pressure Switch Bracket	
803637 Pressure Switch Use for higher water level on models through Serial No. 1110007358 18	17	201997P	Pressure Switch	Models through Serial No. 1110007358
1110007358 18 202469 Control Panel Bumper M400795 Bumper Extra thick 19 202417 Control Overlay Models HWNLX2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CWNA 20 202416 Control Panel Overlay All other models 20 202309 Control Sticker Overlay French/English; Models HWNLX2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CWNA 21 210042Q Control Panel Assembly Model SWNLC2SP111TQ01 21 210042W Control Panel Assembly All other models 22 52864 Screw Phillips head		803638P	Pressure Switch	Models starting Serial No. 1110007359
M400795BumperExtra thick19202417Control OverlayModels HWNLX2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CWNA202416Control Panel OverlayAll other models20202309Control Sticker OverlayFrench/English; Models HWNLX2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CWNA21210042QControl Panel AssemblyModel SWNLC2SP111TQ01210042WControl Panel AssemblyAll other models2252864ScrewPhillips head		803637	Pressure Switch	
19202417Control OverlayModels HWNLX2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CWNA202416Control Panel OverlayAll other models20202309Control Sticker OverlayFrench/English; Models HWNLX2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CWNA21210042QControl Panel AssemblyModel SWNLC2SP111TQ01210042WControl Panel AssemblyAll other models2252864ScrewPhillips head	18	202469	Control Panel Bumper	
and HWNLE2SP111CWNA 202416 Control Panel Overlay All other models 20 202309 Control Sticker Overlay French/English; Models HWNLX2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CWNA 21 210042Q Control Panel Assembly Model SWNLC2SP111TQ01 210042W Control Panel Assembly All other models 22 52864 Screw Phillips head		M400795	Bumper	Extra thick
20 202309 Control Sticker Overlay French/English; Models HWNLX2SP111CW01, HWNLE2SP111CW01 and HWNLE2SP111CWNA 21 210042Q Control Panel Assembly Model SWNLC2SP111TQ01 210042W Control Panel Assembly All other models 22 52864 Screw Phillips head	19	202417		
HWNLE2SP111CW01 and HWNLE2SP111CWNA 21 210042Q Control Panel Assembly Model SWNLC2SP111TQ01 210042W Control Panel Assembly All other models 22 52864 Screw Phillips head		202416	Control Panel Overlay	All other models
210042W Control Panel Assembly All other models 22 52864 Screw Phillips head	20	202309	Control Sticker Overlay	•
22 52864 Screw Phillips head	21	210042Q	Control Panel Assembly	Model SWNLC2SP111TQ01
		210042W	Control Panel Assembly	All other models
	22	52864	Screw	Phillips head
		35528	Screw	

Control Panel, Control Hood and Controls (Drawing 2 of 4) Models HWNLY2SP111CW01, SWNLY2PP111TW01, SWNLY2PP111TWNA,

SWNLY2SP111TW01 and SWNLY2SP111TWNA

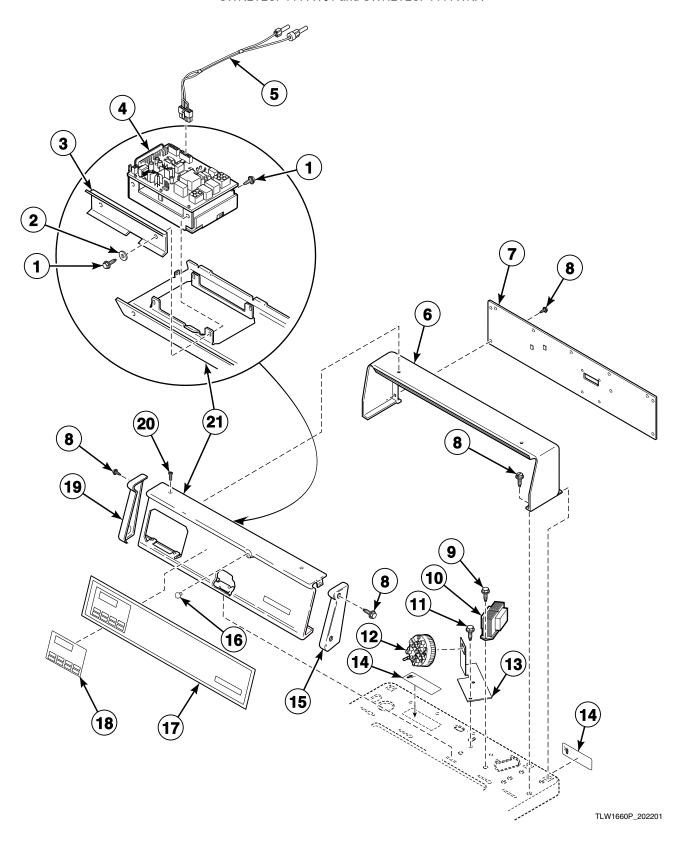


Control Panel, Control Hood and Controls (Drawing 2 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
	202331	Options Label	Model HWNLY2SP111CW01
	202332	Options Label	All other models
	NK201	Network Retrofit Kit	Wired
	NK301	Wireless Network Kit	
	NK220	Network Controller Kit	Wired
	NK320	Ethernet Gateway Kit	Wireless
	NK330	USB Gateway Kit	Wireless
1	D501524	Screw	
2	200608	Washer	
3	210053	Control Shield	
4	202311P	Control Assembly	
5	800680	Diagnostic Wire Harness Assembly	
6	210142W	Control Hood	
7	210143	Rear Panel	
8	D501086	Screw	
9	D503661	Screw	
10	201375P	Transformer	Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer.
11	23962	Screw	transformer.
12	201997P	Pressure Switch	Models through Serial No. 1110007358
12	803638P	Pressure Switch	Models starting Serial No. 1110007359
	803637	Pressure Switch	Use for higher water level on models through Serial No. 1110007358
13	201789	Pressure Switch Bracket	
14	D500316	Warning Label	Model HWNLY2SP111CW01
	D505281	Disconnect Power Warning Label	All other models
15	210108W	End Cap	Right
16	202469	Control Panel Bumper	
	M400795	Bumper	Extra thick
17	202418	Control Overlay	Model HWNLY2SP111CW01
	202415	Control Overlay	All other models
18	202309	Control Sticker Overlay	French/English; Model HWNLY2SP111CW01
19	210109W	End Cap	Left
20	52864	Screw	
21	210137W	Control Panel Assembly	

Control Panel, Control Hood and Controls (Drawing 3 of 4)


Model SWNLX2SP301AW01

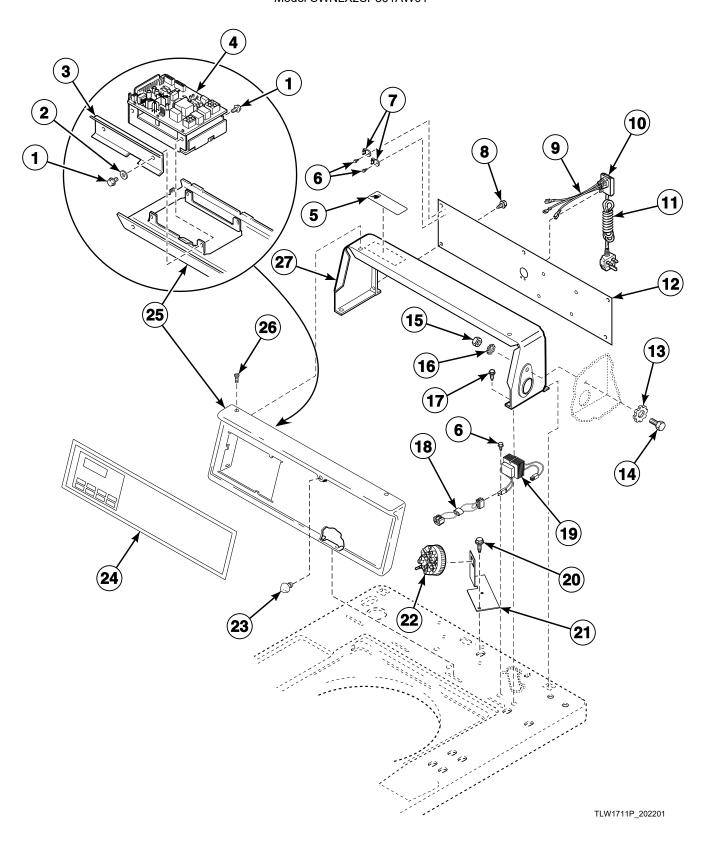

Control Panel, Control Hood and Controls (Drawing 3 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
	202332	Options Label	
	NK201	Network Retrofit Kit	Wired
	NK301	Wireless Network Kit	
	NK220	Network Controller Kit	Wired
	NK320	Ethernet Gateway Kit	Wireless
	NK330	USB Gateway Kit	Wireless
1	D501524	Screw	
2	200608	Washer	
3	210053	Control Shield	
4	202311P	Control Assembly	
5	D511021	Shock Warning Label	
6	D503661	Screw	
7	210100	Resistor	
8	23222	Screw	
9	201405P	Lead-In Wire Harness Assembly	
10	39922	Cable Connection Box	
11	39931	Power Cord Assembly	
12	39920	Hood Back Panel	
13	M400017	Washer	
14	02916	Screw	
15	52566	Nut	
16	02431	Washer	
17	D501086	Screw	
18	M413507	Jumper Configuration Assembly	
19	803527P	Transformer	
20	23962	Screw	
21	201789	Pressure Switch Bracket	
22	803638P	Pressure Switch	
	803637	Pressure Switch	Use for higher water level on models through Serial No. 1110007358
23	202469	Control Panel Bumper	
	M400795	Bumper	Extra thick
24	202416	Control Panel Overlay	
25	210042W	Control Panel Assembly	
26	52864	Screw	Phillips head
	35528	Screw	Torx head
27	37075W	Control Hood	

Control Panel, Control Hood and Controls (Drawing 4 of 4) Model SWNLY2SP301NW22

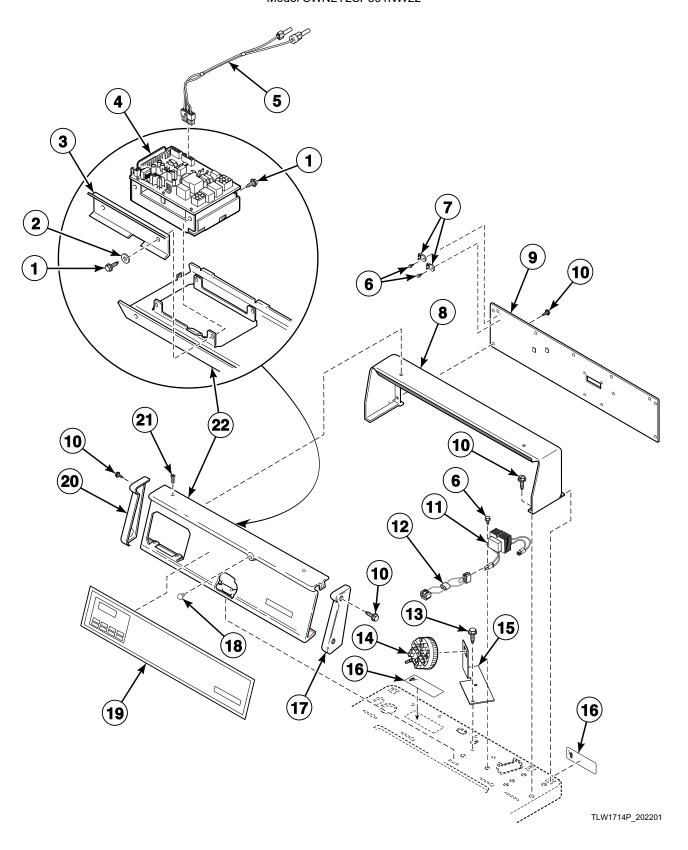


Control Panel, Control Hood and Controls (Drawing 4 of 4)

REF	PART NO.	DESCRIPTION	COMMENTS
	202332	Options Label	
	NK201	Network Retrofit Kit	Wired
	NK301	Wireless Network Kit	
	NK220	Network Controller Kit	Wired
	NK320	Ethernet Gateway Kit	Wireless
	NK330	USB Gateway Kit	Wireless
1	D501524	Screw	
2	200608	Washer	
3	210053	Control Shield	
4	202311P	Control Assembly	
5	800680	Diagnostic Wire Harness Assembly	
6	D503661	Screw	
7	210100	Resistor	
8	210142W	Control Hood	
9	210143	Rear Panel	
10	D501086	Screw	
11	803527P	Transformer	
12	M413507	Jumper Configuration Assembly	
13	23962	Screw	
14	803638P	Pressure Switch	
	803637	Pressure Switch	Use for higher water level on models through Serial No. 1110007358
15	201789	Pressure Switch Bracket	
16	D505281	Disconnect Power Warning Label	
17	210108W	End Cap	Right
18	202469	Control Panel Bumper	
	M400795	Bumper	Extra thick
19	202415	Control Overlay	
20	210109W	End Cap	Left
21	52864	Screw	
22	210137W	Control Panel Assembly	

Control Hood Security Kit

Models HWNLX2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CWNA, SWNLC2PP111TW01, SWNLC2PP111TW02, SWNLC2PP111TWNA, SWNLC2SP111TQ01, SWNLC2SP111TW01, SWNLC2SP111TW02, SWNLC2SP111TW02, SWNLX2SP111TW01, SWNLX2SP111TW02 and SWNLX2SP301AW01

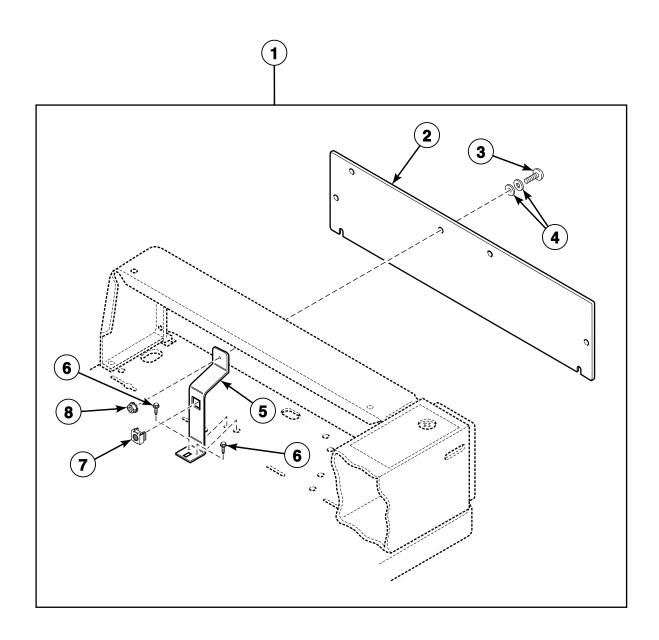


FLW963P_202201

Control Hood Security Kit

REF	PART NO.	DESCRIPTION	COMMENTS
1	904P3	Security Kit	Includes items 2-8
2	201919	Rear Panel	
3	32184	Bolt	
4	25100	Washer	
5	201918	Bracket	
6	D503688	Screw	
7	204616	Meter Case Locking Bracket Kit	
8	23951	Nut	


Lid and Cabinet Top

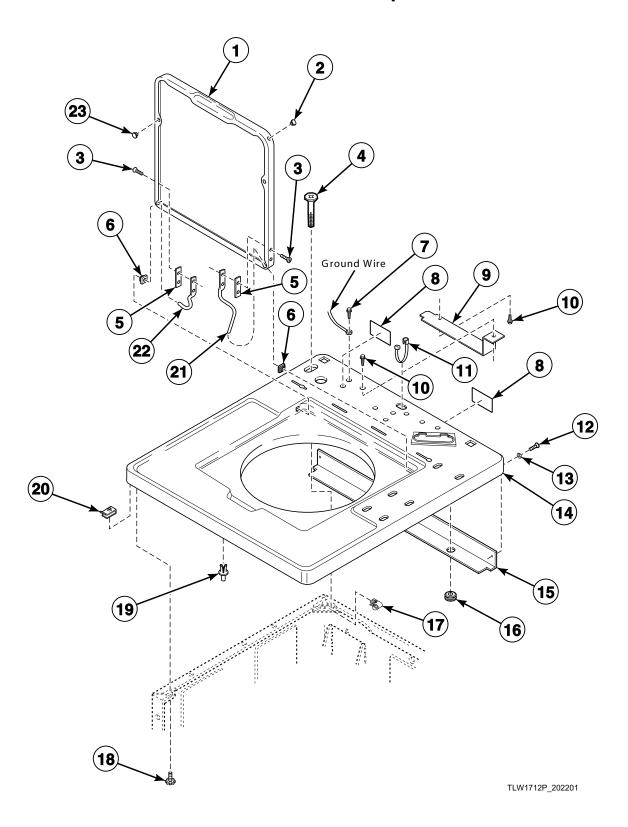

Lid and Cabinet Top

REF	PART NO.	DESCRIPTION	COMMENTS
1	201761WP	Lid	Models HWNLX2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CWNA and HWNLY2SP111CW01
	201460QP	Lid and Carton Assembly	Model SWNLC2SP111TQ01
	204615W	Lid	All other models
2	34153	Lid Plug	
3	34337	Screw	
4	D503673	Screw	Optional; For added security
5	34338	Hinge Gasket	
6	33446	Bushing	
7	52909	Screw	
8	D500316	Warning Label	Models HWNLX2SP111CW01, HWNLE2SP111CW01, HWNLE2SP111CWNA and HWNLY2SP111CW01
	D505281	Disconnect Power Warning Label	All other models
9	202083	Bracket	
10	23962	Screw	
11	38384	Strain Relief	
12	431287	Screw	Model SWNLX2SP301AW01
13	39249	Washer	Model SWNLX2SP301AW01
14	210173WP	Top Assembly	Models HWNLY2SP111CW01, SWNLY2PP111TW01, SWNLY2PP111TWNA, SWNLY2SP111TW01, SWNLY2SP111TWNA and SWNLY2SP301NW22
	39167QP	Тор	Model SWNLC2SP111TQ01
	39167WP	Тор	All other models
15	39744	Top Shield	Model SWNLX2SP301AW01
16	80262	Grommet	Model SWNLX2SP301AW01
17	27222	Nut	Optional; For added security
18	23008	Screw	
19	56534	Support Barrel	
20	36020	Nut	
21	36437	Lid Hinge	Right
22	36438	Lid Hinge	Left
23	21685	Bumper	

Lid Switch

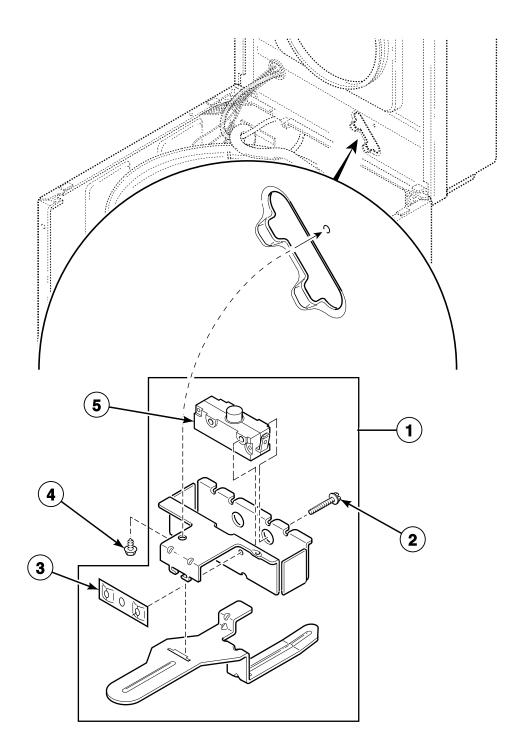


TLW1832B_202201

Lid Switch

REF	PART NO.	DESCRIPTION	COMMENTS
1	37631	Lid Switch Assembly	
2	M402574	Screw	
3	M400981	Nut	
4	23962	Screw	
5	33445	Switch	


Fill Hose, Mixing Valve-to-Tub Cover Hose, Mixing Valve and Bracket

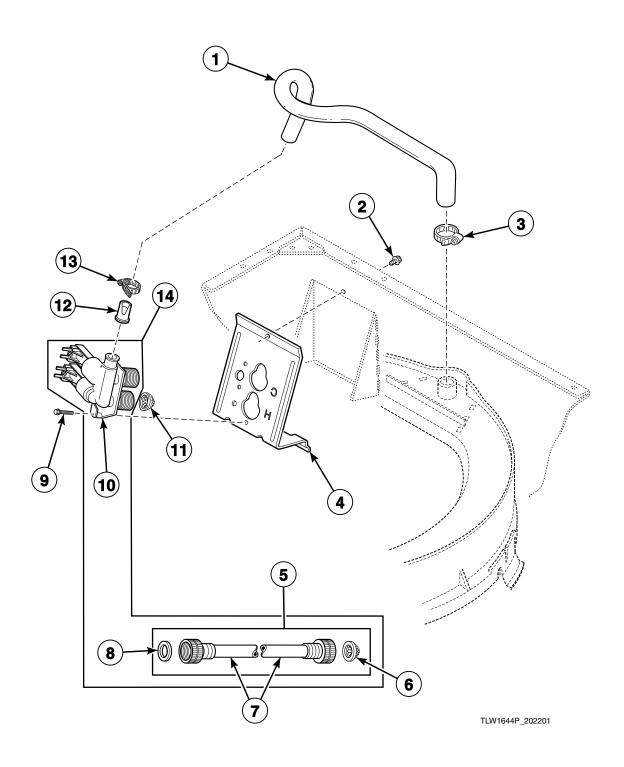

Fill Hose, Mixing Valve-to-Tub Cover Hose, Mixing Valve and Bracket

REF	PART NO.	DESCRIPTION	COMMENTS
1	38155	Mixing Valve-to-Tub Cover Hose	
2	33562	Screw	
3	800803	Hose Clamp	
4	39407	Mixing Valve Mounting Bracket	
5	F200116	Water Hose	5 feet; Hose is equipped with 2 standard hose couplings; Includes items 6 and 8
	38349P	Fill Hose Kit	5 feet; Hose is equipped with 1 metric and 1 standard hose coupling; Includes item 8
6	803615	Washer	Filter screen
	802254	Washer	Flow restrictor; Water pressure reducer; Available for water pressure up to but not exceeding 120 psi
7	20617	Fill Hose	8 feet; Hose is equipped with 2 standard hose couplings
	37380	Fill Hose	8 feet; Hose is equipped with 1 metric and 1 standard hose coupling
	20618	Fill Hose	10 feet; Hose is equipped with 2 standard hose couplings
	37381	Fill Hose	10 feet; Hose is equipped with 1 metric and 1 standard hose coupling
8	20290	Washer	
9	39397	Screw	
10	201468P	Mixing Valve	Models HWNLE2SP111CW01 and HWNLE2SP111CWNA
	39070P	Mixing Valve	Models SWNLX2SP301AW01 and SWNLY2SP301NW22
	201402P	Mixing Valve	All other models
11	24122	Mixing Valve Screen	
12	34500	Backflow Preventer	
13	36801	Hose Clamp	
14	RB150001	Mixing Valve Kit	Includes 201402P Mixing Valve and 2 of item 5


Motor, Mounting Bracket, Belt, Pump and Idler Assembly (Drawing 1 of 2)

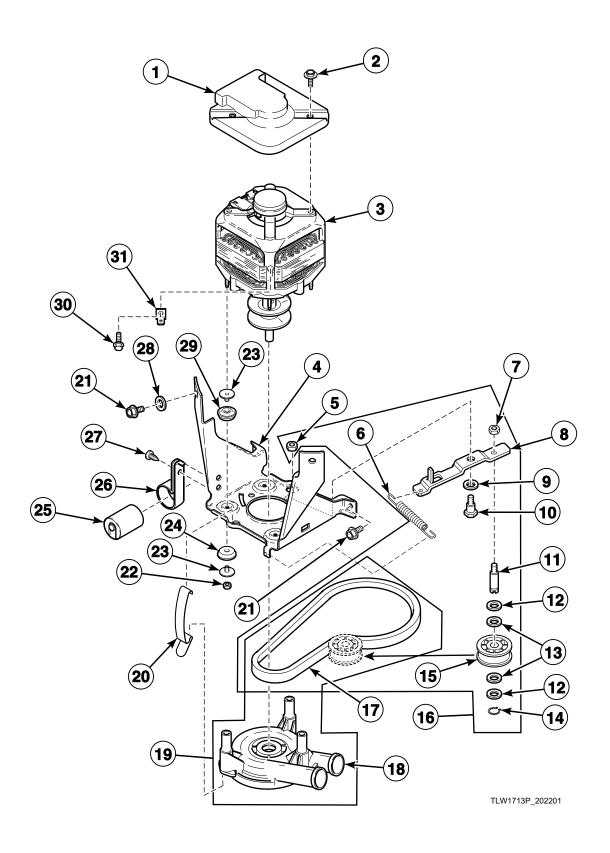

Motor, Mounting Bracket, Belt, Pump and Idler Assembly (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	34754	Motor Shield	
2	36639	Screw	
3	201433P	Motor Kit	Models SWNLX2SP301AW01 and SWNLY2SP301NW22
	38034P	Motor Kit	All other models
4	200941	Motor Mount Bracket	
5	52566	Nut	
6	201189	Idler Lever Spring	
	202032	Idler Lever Spring	Use on units experiencing low RPM
7	28803	Nut	
8	38011	ldler Lever	
9	81392	Washer	
10	27229	Screw	
11	210186	ldler Shaft	
12	D504082	Washer	
13	52549	Washer	Nylatron
14	23748	Retaining Ring	
15	38225P	ldler Pulley	
16	959P3	ldler Lever Kit	Includes items 5-15 and 17
17	200923	Agitate and Spin Belt	Models SWNLX2SP301AW01 and SWNLY2SP301NW22
	38174	Agitate and Spin Belt	All other models
18	201566P	Pump	
	201442P	Pump Assembly	Heavy duty
19	RB150003	Belt and Pump Kit	Includes items 17 and 201566P Pump
20	210202	Spring Clip	
21	35369	Screw	
22	35423	Nut	
23	38325	Isolator Post	
24	204062	Isolator Assembly	
25	37377	Capacitor	All models except SWNLX2SP301AW01 and SWNLY2SP301NW22
26	37535	Capacitor Clamp	All models except SWNLX2SP301AW01 and SWNLY2SP301NW22
27	52909	Screw	All models except SWNLX2SP301AW01 and SWNLY2SP301NW22
28	37772	Washer	
29	204449	Motor Mount	
30	20530	Screw	Models SWNLX2SP301AW01 and SWNLY2SP301NW22
31	00177	Male Tab Terminal	Models SWNLX2SP301AW01 and SWNLY2SP301NW22
-			


Motor, Mounting Bracket, Belt, Pump and Idler Assembly (Drawing 2 of 2)

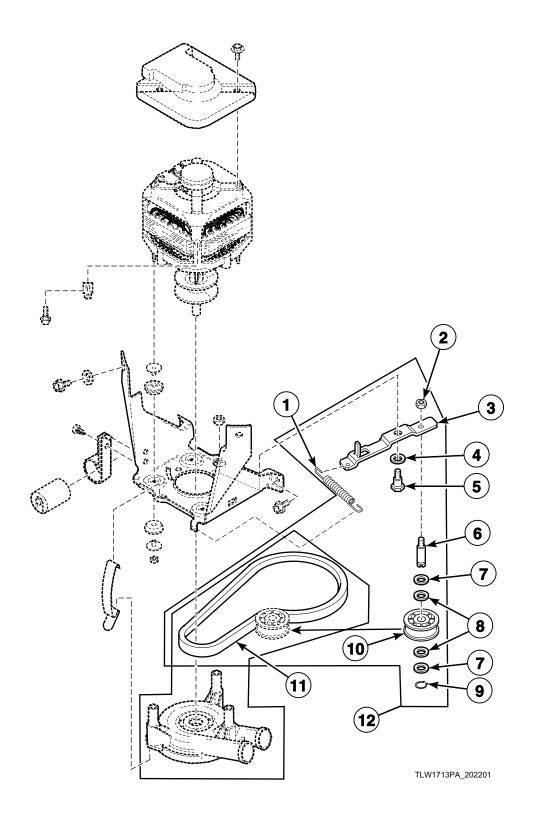

Motor, Mounting Bracket, Belt, Pump and Idler Assembly (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
1	201189	Idler Lever Spring	
	202032	Idler Lever Spring	Use on units experiencing low RPM
2	28803	Nut	
3	38011	ldler Lever	
4	81392	Washer	
5	27229	Screw	
6	210186	ldler Shaft	
7	D504082	Washer	
8	52549	Washer	Nylatron
9	23748	Retaining Ring	
10	38225P	Idler Pulley	
11	200923	Agitate and Spin Belt	Models SWNLX2SP301AW01 and SWNLY2SP301NW22
	38174	Agitate and Spin Belt	All other models
12	202972	Idler Lever and Belt Kit	Models SWNLX2SP301AW01 and SWNLY2SP301NW22

Agitator, Drive Bell, Hub and Lip Seal Kit and Washtub

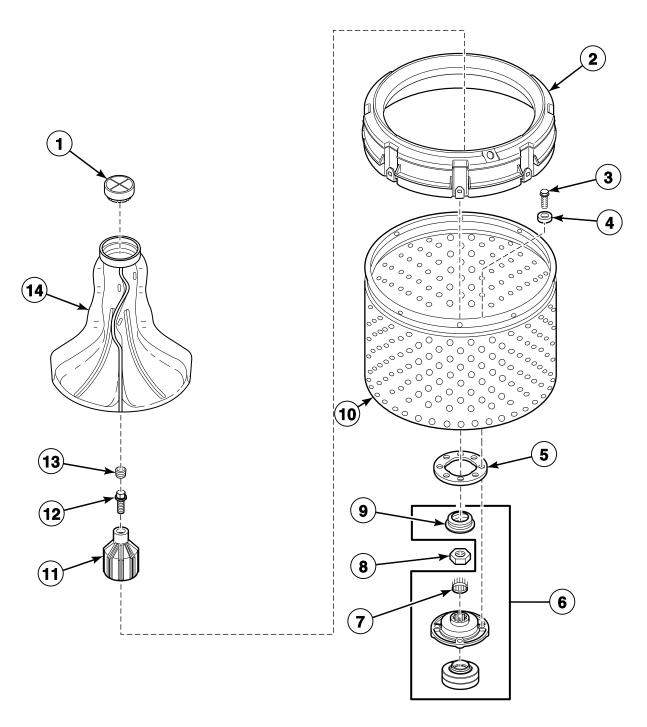


TLW1483P_202201

Agitator, Drive Bell, Hub and Lip Seal Kit and Washtub

REF	PART NO.	DESCRIPTION	COMMENTS
1	36515	Agitator Cap	
2	39836	Balance Ring Assembly	
3	27202	Screw	
4	28094	Washer	Rubber; Use with porcelain washtub
5	39122	Washtub Gasket	
6	766P3A	Hub and Lip Seal Kit	DO NOT use any sealant other than 200996P Sealant; Includes item 11 and installation tool
	200996P	Sealant	Use with hub and lip seal kit
7	29728	Spline Insert	
8	29220	Nut	
9	36425	Bell and Transmission Tube Seal	
	36765P	Grease	Use with bell and transmission tube seal
10	39250P	Tub Kit	Blue porcelain; Models SWNLC2PP111TW01, SWNLC2PP111TW02, SWNLC2PP111TWNA, SWNLX2PP111TW02, SWNLY2PP111TW01 and SWNLY2PP111TWNA
	719P3	Washtub Kit	Stainless steel; All other models
11	39508P	Drive Bell and Seal Kit	Includes items 9, 12 and 13
12	39432	Screw	
13	36511	Bell Plug	
14	33174	Agitator	


Outer Tub, Cover, Bearing and Seal Housing, Pressure Hose and Counterweight

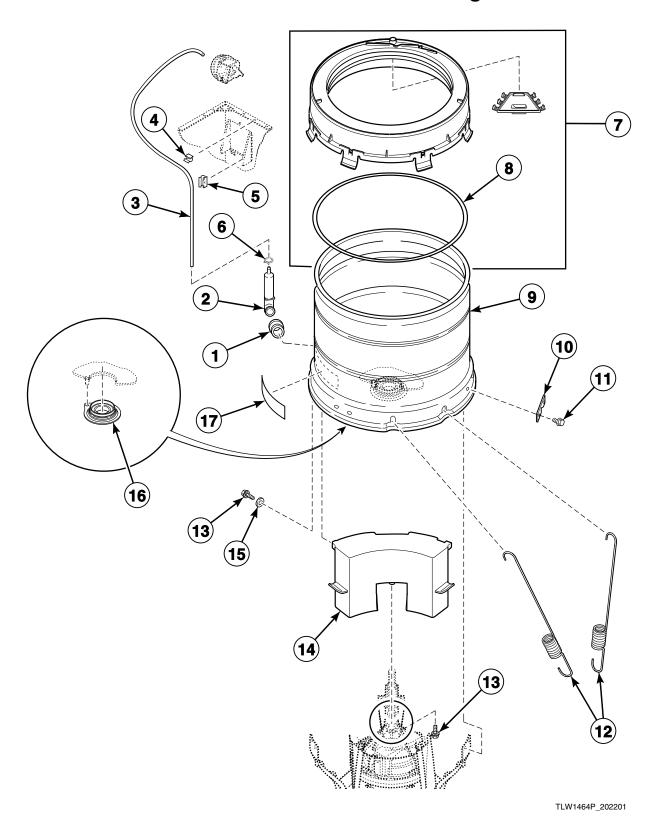

Outer Tub, Cover, Bearing and Seal Housing, Pressure Hose and Counterweight

REF	PART NO.	DESCRIPTION	COMMENTS
1	29175	Grommet	
2	30907	Pressure Bulb	
3	202700	Tubing	31 inch
4	21036	Cable Clip	
5	36985	Hose Clip	
6	39282	Hose Clamp	
7	38573	Tub Cover and Gasket Assembly	Includes item 8
8	38359	Tub Cover Gasket	
9	203603P	Outer Tub Assembly	
	636P3	Outer Tub Flange Kit	Use to replace outer tub flange due to flange damage or corrosion
10	27926	Leg Plate	
11	35369	Screw	
12	201521	Leg Spring	Marked with green paint. Use to replace the two rear springs closest to counterweight; Models SWNLX2SP301AW01 and SWNLY2SP301NW22
	37575	Leg Spring	
13	39566	Screw	
14	38769	Counterweight Assembly	
15	39249	Washer	
16	766P3A	Hub and Lip Seal Kit	
	200996P	Sealant	Use with hub and lip seal kit
17	D500049	Warning Label	


Transmission Assembly

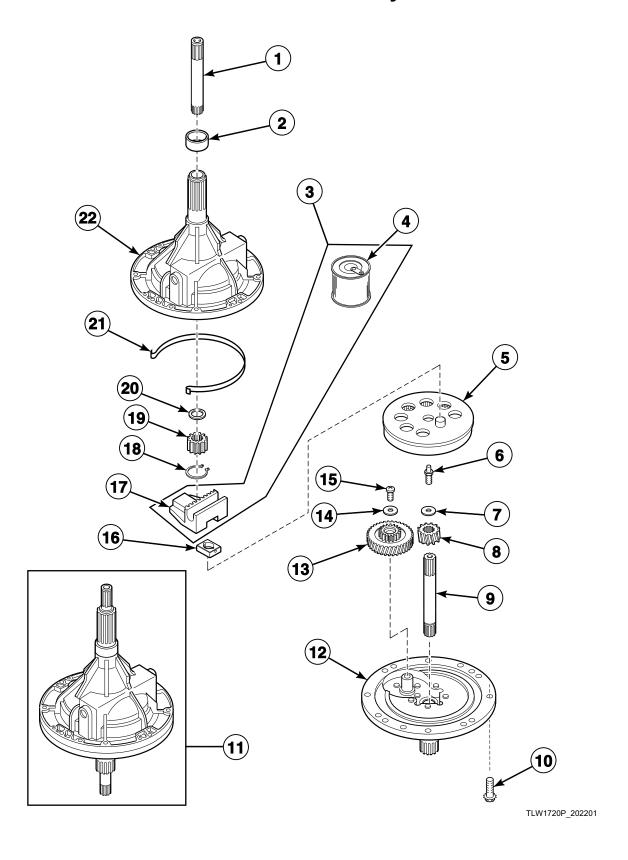

Transmission Assembly

27604P Anti-Seize Compound Apply to the smooth area of both the upper transmission shafts 37577P Transmission Sealant Use between transmission case and cover transmission case and cov	r
1 36570P Output Shaft 2 201212 Hub Spacer 3 RB150004 Transmission Rebuild Kit Includes items 4, 17 and 37577P Transmis 4 27243P Transmission Oil 1 fill 5 26577 Gear and Stud Assembly 6 201773 Screw	
2 201212 Hub Spacer 3 RB150004 Transmission Rebuild Kit Includes items 4, 17 and 37577P Transmis 4 27243P Transmission Oil 1 fill 5 26577 Gear and Stud Assembly 6 201773 Screw	ssion Sealant
3 RB150004 Transmission Rebuild Kit Includes items 4, 17 and 37577P Transmis 4 27243P Transmission Oil 1 fill 5 26577 Gear and Stud Assembly 6 201773 Screw	ssion Sealant
4 27243P Transmission Oil 1 fill 5 26577 Gear and Stud Assembly 6 201773 Screw	ssion Sealant
5 26577 Gear and Stud Assembly 6 201773 Screw	
6 201773 Screw	
7 26509 Washer	
1 2000 Machon	
8 37405 Drive Pinion	
9 38268P Input Shaft	
10 32814 Screw	
11 38165P Transmission Assembly	
12 37471 Transmission Cover Assembly	
13 37404P Reduction Gear	
14 29260 Washer	
15 29273 Screw	
16 26493 Slide	
17 201664 Rack	
18 27197 Retaining Ring	
19 27003 Agitator Pinion	
20 35092 Washer	
21 38864 Gear Sleeve	
22 33223P Transmission Case Assembly	

Drain Hoses and Siphon Break Kit

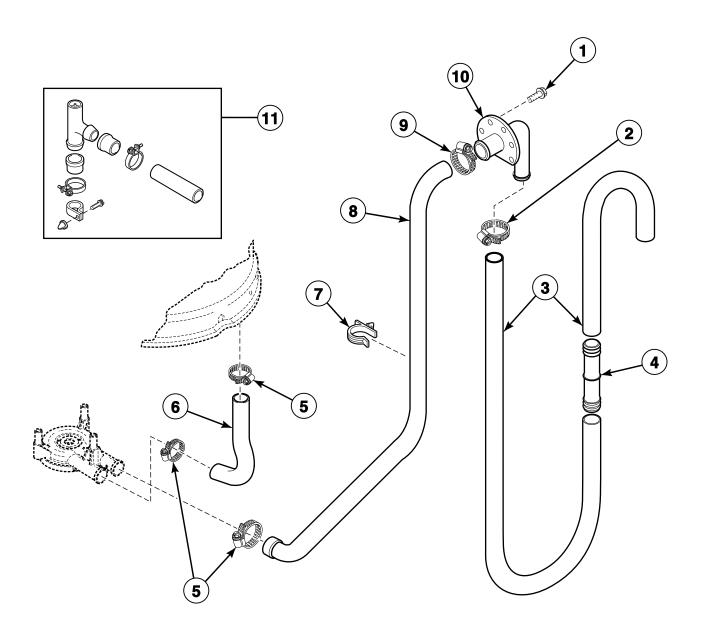


W354P_202201

Drain Hoses and Siphon Break Kit

REF	PART NO.	DESCRIPTION	COMMENTS
1	52909	Screw	
2	20211	Hose Clamp	
3	28293	Drain Hose	
4	25863	Hose Coupler	If drain hose must be shortened, cut hose between molded end and molded elbow; Use (1) 25863 Hose Coupler to splice hose
5	F200204	Hose Clamp	
6	38351	Tub-to-Pump Hose	
7	39177	Hose Retainer Clip	
8	38273	Pump-to-Drain Elbow Hose	
9	20391	Hose Clamp	
10	35766	Drain Hose Elbow	Models SWNLX2SP301AW01 and SWNLY2SP301NW22
	36990	Drain Hose Elbow	All other models
11	562P3	Siphon Break Kit	Siphon break kit must be installed in drain hose if drain receptacle is lower than cabinet top of washer

Weldment and Bearing Assembly, Brake and Pulley

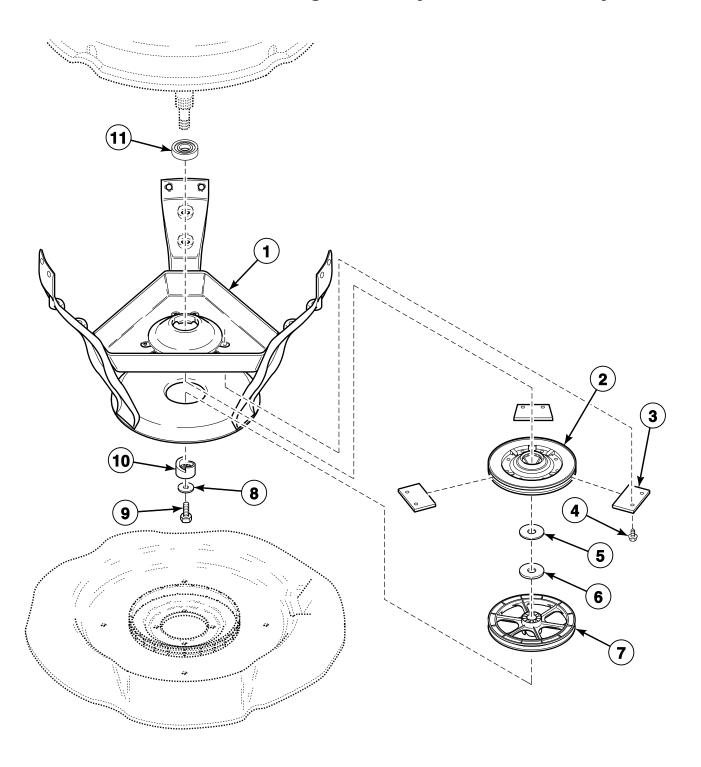


W333P_202201

Weldment and Bearing Assembly, Brake and Pulley

REF	PART NO.	DESCRIPTION	COMMENTS
1	39253	Weldment and Bearing Assembly	
2	38505P	Brake Kit	
3	735P3	Brake Pad Kit	Includes 3 pads
	204253	Silicone Grease	Apply small amount to each new brake pad
4	39739	Screw	
5	35535	Washer	Thin
6	27015	Washer	Thick
7	204942	Pulley	Models SWNLX2SP301AW01 and
			SWNLY2SP301NW22
	204486	Pulley	All other models
8	26509	Washer	
9	27220	Screw	
10	38008	Helix	
11	28944RP	Lower Bearing	


Front Panel, Base Assembly and Cabinet Kit

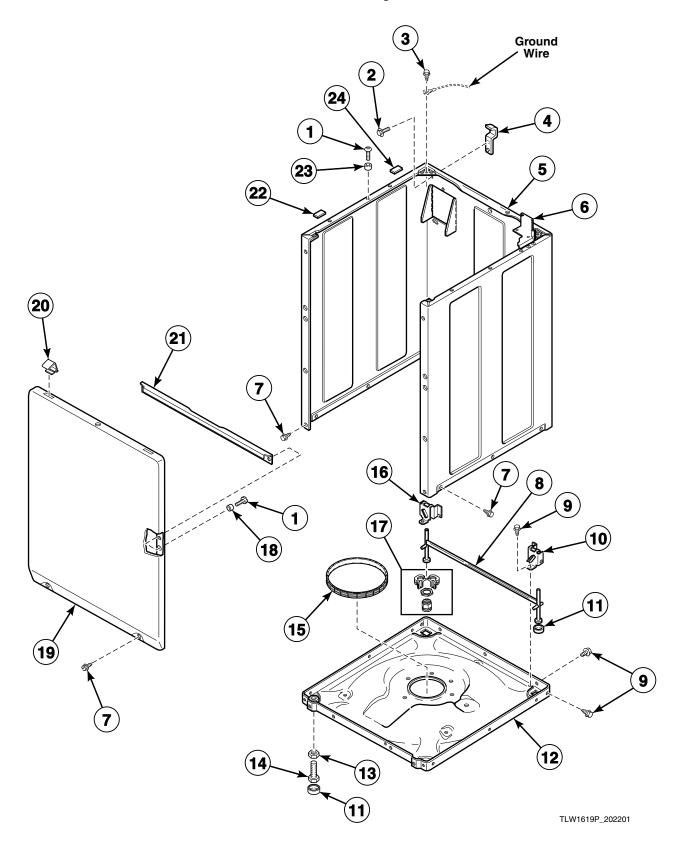

Front Panel, Base Assembly and Cabinet Kit

REF	PART NO.	DESCRIPTION	COMMENTS
	122P4P	Porcelain Touch-Up Paint	White
	370P4P	Porcelain Touch-Up Paint	Bisque
1	39733	Screw	
2	51780	Screw	
3	52909	Screw	
4	27103	Hold-Down Lug Hinge	
5	38612QP	Service Cabinet Kit	Model SWNLC2SP111TQ01
	38612WP	Service Cabinet Kit	All other models
6	35915	Meter Case Mounting Bracket Assembly	
7	27196	Screw	Slotted hex head
	431287	Screw	Torx head
8	34443	Leg and Stabilizer Assembly	
9	35148	Screw	
10	36036	Bracket	Right
11	34318	Rubber Foot	
12	39788	Base Assembly	
13	21899	Nut	
14	34319	Leveling Leg	
15	37937	Friction Ring	
16	36037	Bracket	Left
17	566P3	Adjustable Leg Extension Kit	Provides adjustment capabilities to rear self-leveling legs
18	28102	Panel Locator	
19	38335QP	Front Panel	Model SWNLC2SP111TQ01
	204870	Front Panel	All other models
20	35865	Hold-Down Clip	
21	35097	Front Panel Brace	
22	56128	Bumper Pad	
23	56079	Panel Locator	
24	36226	Bumper Pad	


Mixing Valve and Motor Disconnect Blocks, Terminals and Terminal Extractor Tool

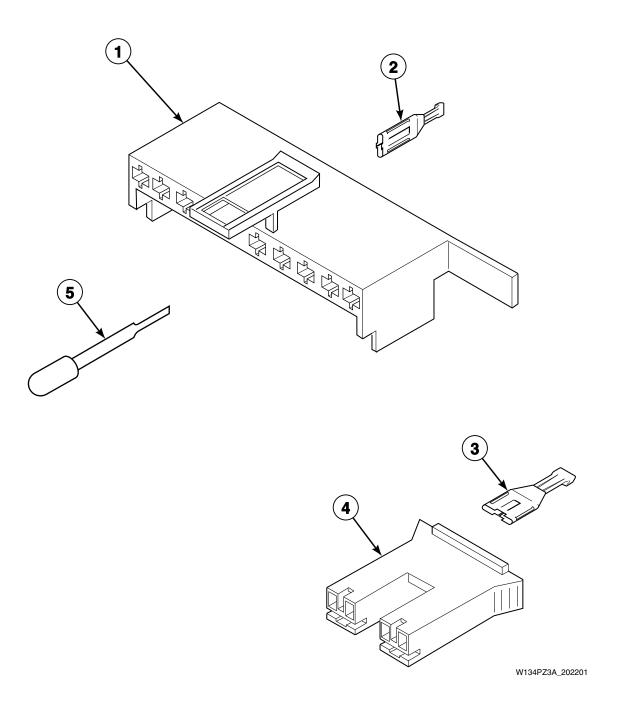

Mixing Valve and Motor Disconnect Blocks, Terminals and Terminal Extractor Tool

REF	PART NO.	DESCRIPTION	COMMENTS	
1	34677	10 Circuit Plug	Motor	
2	00188	Female Terminal	For 1 or 2 wire application	
3	00121	Female Spade Terminal	1/4 inch	
4	34675	Mixing Valve Plug	Natural	
	34676	Mixing Valve Plug	Red	
5	283P4	Terminal Extractor Tool		

Lead-In Cord

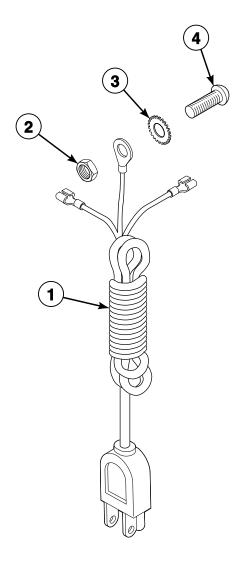


TLW1089P_202201

Lead-In Cord

REF	PART NO.	DESCRIPTION	COMMENTS
1	39931	Power Cord Assembly	Model SWNLX2SP301AW01
	38362P	Lead-In Cord	Model SWNLY2SP301NW22
	34458	Lead-In Cord	All other models
2	03673	Nut	
3	21735	Washer	
4	20267	Screw	

Terminals

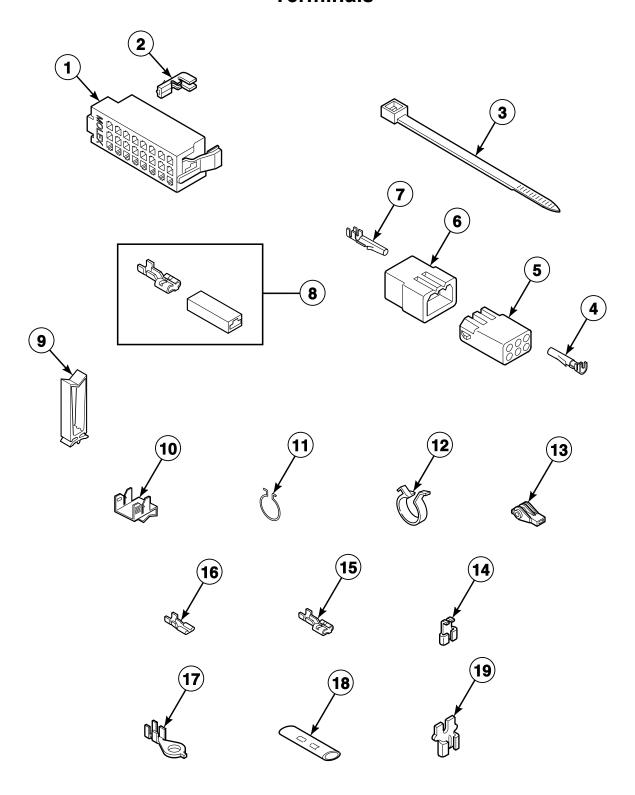



TLW1645P_202201

Terminals

REF	PART NO.	DESCRIPTION	COMMENTS
1	32746	24 Position Housing	Right; Black
	34123	24 Position Housing	Left; White
2	00188	Female Terminal	Used for 1 or 2 wire application
3	55881	Harness Strap	
4	00117	Female Pin Terminal	
5	26301	1 Circuit Receptacle	
	26708	6 Circuit Receptacle	
	26163	9 Circuit Receptacle	
6	26302	1 Circuit Plug	
	23041	6 Circuit Plug	
	23033	9 Circuit Plug	
7	00116	Male Pin Terminal	
8	00359	Insulated Female Spade Terminal	
9	70366201	Wire Clip	
10	00161	Grounding Clip	
11	51291	Wire Clip	
12	D504034	Wire Clip	
13	70210	Insulator	
14	00120	Female Flag Terminal	
15	00223	Female Spade Terminal	Large spade
16	00112	Female Spade Terminal	Small spade
17	00110	Ring Terminal	Small shank
18	21091	Connector	
19	F140562	Connector	

Shipping Materials and Special Tools

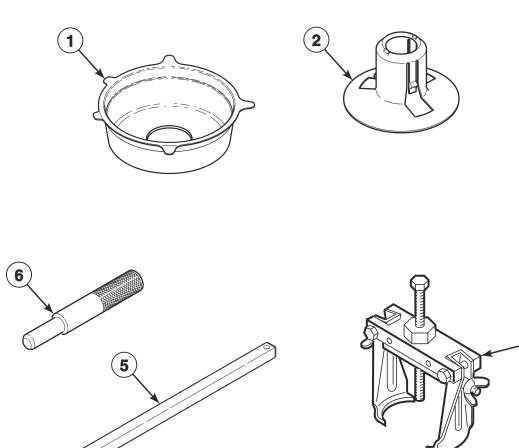


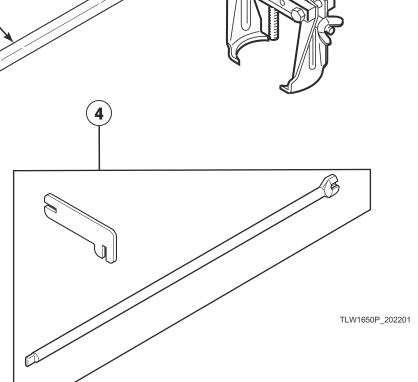

Shipping Materials and Special Tools

REF	PART NO.	DESCRIPTION	COMMENTS
1	200552	Shipping Brace	Install whenever moving washer; Remove before use
2	38149	Shipping Plug	Install whenever moving washer; Remove before use
3	294P4	Agitator Drive Bell Puller	For removal and installation of drive bell to transmission shaft
4	CK096	Mounting Tool Kit	Use to install and remove electronic coin drops
5	310P4	Ratchet Extension Tool	1/4 inch; Use to install and remove non-electronic coin drops
6	305P4	Transmission Pin Tool	Use pin tools in place of dowel pins when reassembling transmission cover and case; 2 required

Special Tools

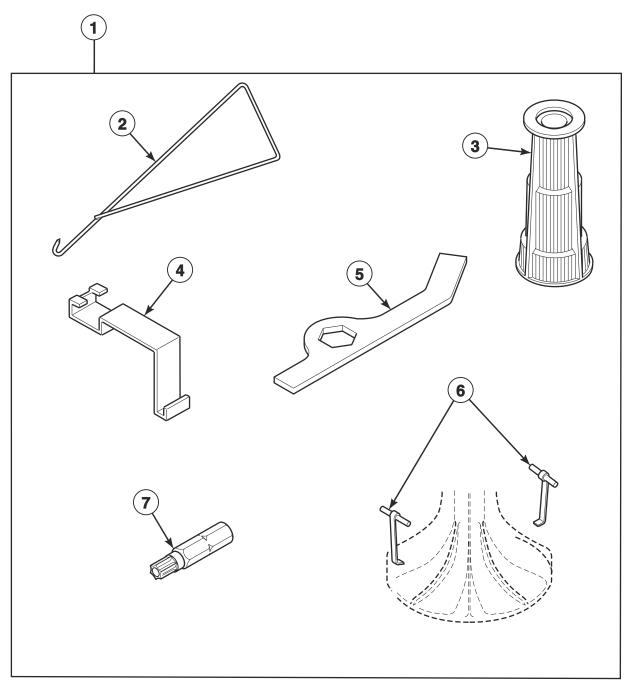


TLW1818P_202201

Special Tools

REF	PART NO.	DESCRIPTION	COMMENTS
1	725P3	Tool Kit	Includes items 2-7
2	321P4	Spring Hook Tool	For removal of centering springs from outer tub
3	293P4	Drive Bell Seal Tool	For installation of 36425 Bell and Transmission Tube Seal
4	273P4	Tub Cover Removal Tool	Use to install 38359 Tub Cover Gasket in outer tub cover
5	306P4	Hex Wrench Tool	For removal of locknut from washtub hub
6	254P4P	Agitator Hook	Use to remove agitator from drive bell; Set of 2
7	281P4	Torx Bit	T15; For removal and installation of control hood security screws
	282P4	Torx Bit	T25; For removal and installation of front panel security screws

Wire Harnesses and Wires

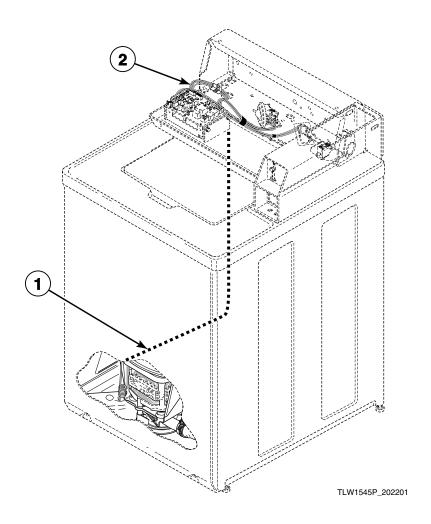

Wire Harnesses and Wires

REF	PART NO.	DESCRIPTION	COMMENTS
	45001	18 Gauge Wire	Black; Order wire by foot and terminals as required
	45380	12 Gauge Wire	Orange; Order wire by foot and terminals as required
1	201466	Base Wire Harness Assembly	Models SWNLX2SP301AW01 and SWNLY2SP301NW22
	38661P	Wire Harness Assembly	Base; All other models
2	202042	Wire Harness Assembly	Hood; Models SWNLX2SP301AW01 and SWNLY2SP301NW22
	202041	Wire Harness Assembly	Hood; All other models; Models through Serial No. 1110007358
	202375	Wire Harness Assembly	Hood; All other models; Models starting Serial No. 1110007359

NOTE: Individual wires are not available separately. Order complete harness, or order wire by the foot. When applying terminals to wires, it is recommended that the terminals be soldered to the wires.

Notes

Parts Index

A		С	
Adjustable Leg Extension Kit 566P3	39	Cable Clip 21036	31
Agitate and Spin Belt 200923	25, 27	Cable Connection Box 39922	
38174	25, 27	Capacitor 37377	25
33174	29	Capacitor Clamp	
Agitator Cap 36515	29	37535	25
Agitator Drive Bell Puller 294P4	47	201572 Coin Box Extension Kit	7
Agitator Hook		803578P	5
254P4P Agitator Pinion 27003	-	Coin Drop 38963P 70441601P	5
Anti-Seize Compound	33	Coin Drop Assembly	
27604P	33	38462P	5
		38464P 38467	
В		70441602 70447301	
Backflow Preventer 34500	22	70482401	
Balance Ring Assembly 39836		Coin Drop Wire Harness 201104	7
Base Assembly 39788		Coin Identification Paper 38725	7
Base Wire Harness Assembly		Connector F140562	45
201466 Bell and Transmission Tube Seal	51	21091	45
36425	29	Control Assembly 202311P	9, 11, 13, 15
Bell Plug 36511	29	Control Hood 210142W	11. 15
Belt and Pump Kit RB150003	25	37075Q 37075W	
Bolt		Control Overlay	·
203798 32184		202415 202417	9
Bracket 201918	17	202418	11
202083		Control Panel Assembly 210042Q	9
36036 36037		210042W 210137W	
Brake Kit 38505P		Control Panel Bumper 202469	·
Brake Pad Kit 735P3		Control Panel Overlay	
Bumper	31	202416 Control Shield	9, 13
M400795		210053	9, 11, 13, 15
Bumper Pad		Control Sticker Overlay 202309	9, 11
36226 56128		Counterweight Assembly 38769	31
Bushing	40	55.55	

53

_	00188	41. 45
D	Fill Hose	,
Diagnostic Wire Harness Assembly	20617	23
800680 11, 15	20618	23
Disconnect Power Warning Label	37380	
D505281 11, 15, 19	37381	23
Drain Hose	Fill Hose Kit	
28293	38349P	23
Drain Hose Elbow	Friction Ring	
35766	37937	39
36990	Front Panel	
Drive Bell and Seal Kit	204870	
39508P	38335QP	39
Drive Bell Seal Tool	Front Panel Brace	
293P449	35097	39
Drive Pinion		
37405		
01 +00		
	G	
	Gear and Stud Assembly	
E	26577	33
	Gear Sleeve	
Electronic Coin Drop Assembly	38864	33
70294103P7	Grease	
70294104	36765P	29
70294106		20
70294107 7	Grommet 29175	31
70294110 7	80262	
70294117 7		19
70294120	Grounding Clip 00161	15
70294121	00101	43
70513311		
Electronic Coin Drop Kit	_	
CK099	Н	
CK1007	• •	
CK1017	Harness Assembly	
CK1037	802904P	
CK108 7	802905	5, 7
CK1097	Harness Strap	
CK110 7	55881	45
CK113 7	Helix	
CK115 7	38008	37
CK116	Hex Wrench Tool	
CK117 7	306P4	49
CK118	Hinge Gasket	
CK120	34338	19
CK1217	Hold-Down Clip	
End Cap	35865	39
210108W	Hold-Down Lug Hinge	
,,	27103	39
Ethernet Gateway Kit	Hood Back Panel	
NK320 9, 11, 13, 15	38267	q
	39920	

F	Hose Clamp F200204	35
1	20211	
Female Flag Terminal	20391	
00120	36801	
Female Pin Terminal	39282	
0011745	800803	
Female Spade Terminal	Hose Clip	20
0011245	36985	31
00121		
0022345	Hose Coupler 25863	35

Hose Retainer Clip 39177	35	Lid and Carton Assembly 201460QP	10
Housing, 24 Position		Lid Hinge	
32746	45	36437	19
34123		36438	
Hub and Lip Seal Kit 766P3A	29 31	Lid Plug 34153	10
	20, 01	Lid Switch Assembly	
Hub Spacer 201212	33	37631	21
		Lower Bearing	
		28944RP	37
I			
ldler Lever		A.4	
38011	25, 27	M	
Idler Lever and Belt Kit	•	Male Pin Terminal	
202972	27	00116	45
Idler Lever Kit		Male Tab Terminal	
959P3	25	00177	25
Idler Lever Spring		Meter Case Assembly	
201189	25, 27	202877Q	5
202032		202877W	5
Idler Pulley		802505W	5
38225P	25, 27	Meter Case Assembly Kit	
Idler Shaft		807401W	5
210186	25, 27	Meter Case Bracket Gasket	
Input Shaft		35526	5
38268P	33	Meter Case Gasket	
Insulated Female Spade Terminal		26354	5
00359	45	Meter Case Lockdown Bracket	
Insulator		35525	5
70210	45	Meter Case Locking Bracket Kit	
Isolator Assembly		204616	5, 17
204062	25	Meter Case Mounting Bracket Assembly	
Isolator Post		35915	39
38325	25	Mixing Valve	
		201402P	
		201468P	
		39070P	23
J		Mixing Valve Kit	
Jumper Configuration Assembly		RB150001	23
M413507	13, 15	Mixing Valve Mounting Bracket	
	•	39407	23
		Mixing Valve Plug	
		34675	
L		34676	41
Lead-In Cord		Mixing Valve Screen	0.0
34458	43	24122	23
38362P	43	Mixing Valve-to-Tub Cover Hose	0.0
Lead-In Wire Harness Assembly		38155	23
201405P	13	Motor Kit	0.5
Leg and Stabilizer Assembly		201433P	
34443	39	38034P	20
Leg Plate		Motor Mount	25
27926	31	204449	20
Leg Spring		Motor Mount Bracket 200941	0.5
201521			25
37575		Motor Shield	0.5
Leveling Leg		34754	25
34319	39	Mounting Tool Kit CK096	47
Lid		CK090	47
201761WP	-		
204615W	19		

		Pressure Switch Bracket	
N		201789	9, 11, 13, 15
		Pulley 204486	27
Network Controller Kit	0 44 40 45	204466	
NK220	9, 11, 13, 15		
Network Retrofit Kit	0 44 40 45	Pump 201566P	25
NK201			25
Nut		Pump Assembly	0.5
M400981		201442P	25
03673		Pump-to-Drain Elbow Hose	0.5
201216		38273	35
21899			
23951			_
27222		R	
28803 29220		K	
29786	_	Rack	
35423		201664	33
36020		Ratchet Extension Tool	
52566		310P4	47
802337	-, -, -	Rear Panel	
002007		201919	17
		210143	
			11, 13
0		Receptacle, 1 Circuit 26301	45
Ontiona Labol		Receptacle, 6 Circuit	
Options Label 202331	0 11	26708	45
202332		Receptacle, 9 Circuit	
		26163	45
Opto Coupler 200674P	F		
	5	Reduction Gear 37404P	22
Outer Tub Assembly	24		33
203603P	31	Resistor	40.45
Outer Tub Flange Kit		210100	13, 15
636P3	31	Retaining Ring	
Output Shaft		23748	
36570P	33	27197	33
Overlay		Ring Terminal	
201091	7	00110	45
		Rubber Foot 34318	30
_	_	34310	
P			
Panel Locator		S	
28102	39	3	
56079	39	Screw	
Plug, 1 Circuit		D501086	
26302	45	D501524	9, 11, 13, 15
Plug, 10 Circuit		D503661	9, 11, 13, 15
34677	41	D503673	- ,
		D503688	
Plug, 6 Circuit	45	M402574	
	45	02916	-, -
Plug, 9 Circuit	45	201773	
23033	45	20267	
Porcelain Touch-Up Paint		20530	
122P4P		23008	
370P4	39	23222	
Power Cord Assembly		23962	
39931	13, 43	27196	
Pressure Bulb		27202	
30907	31	27220	
Pressure Switch		27229	
201997P	9, 11	29273 32814	
803637		33562	
803638P		34337	
	, , -, -	J4JJ1	19

N/A items do not appear in index.

202201

	35148	39	Top Assembly	
		25, 31	210173WP	19
	35528	9, 13	Top Shield	
	36048	5	39744	19
	36639	25	Torx Bit	
	39397	23	281P4	//0
	39432	29	282P4	
	39566	31		49
	39733	39	Transformer	
	39739	37	201375P	
		19, 39	210018P	
		39	803527P	13, 15
			Transmission Assembly	
		19, 25, 35, 39	38165P	33
		10, 20, 00, 00	Transmission Case Assembly	
Sealar		29, 31	33223P	33
		29, 31		
Securi			Transmission Cover Assembly 37471	22
	904P3	17		
Service	e Cabinet Kit		Transmission Oil	
	38612QP	39	27243P	33
	38612WP	39	Transmission Pin Tool	
Service	e Door Assembly		305P4	47
		5	Transmission Rebuild Kit	
		5	RB150004	33
		5		
			Transmission Sealant 37577P	22
Shippii	ng Brace	47		აა
	200552	47	Tub Cover and Gasket Assembly	
Shippii	ng Plug		38573	31
	38149	47	Tub Cover Gasket	
Shock	Warning Label		38359	31
	D511021	13	Tub Cover Removal Tool	
	e Grease		273P4	49
		37		
			Tub Kit 39250P	20
Single	Overlay	_		29
		5	Tubing	
	38/1/	5	202700	31
	n Break Kit		Tub-to-Pump Hose	
·	562P3	35	38351	35
Slide				
	26493	33		
Spline				
Spilite	20728	29	U	
		29		
Spring		0.5	USB Gateway Kit	
	210202	25	NK33Ó	9, 11, 13, 15
Spring	Hook Tool			
	321P4	49		
Strain	Relief			
		19	W	
Sunna	rt Barrel			
		19	Warning Label	
		19	Ď500049	
Switch		_	D500316	11, 19
		5	Washer	
		2 <u>1</u>	D504082	25, 27
	70529301	5	M400017	9, 13
			02431	9, 13
			200608	
_			20290	
T			21735	
			25100	
	al Extractor Tool		26509	
	283P4	41	27015	,
Tool Ki			28094	
		49	29260	
Тор			35092	
,op	39167QP	19	35535	
		19	აესაე	31
	OO 107 VVI	13		

37772	2		25
	9		
52549	9	25,	27
8022	54	· · · · · · · · · · · · · · · · · · ·	23
	15		
	2		
Washtub Ga	asket	,	
	2		29
Washtub Kit			
719P	3		29
Water Hose			
F200	116		23
Weldment a	nd Bearing Assembly		
3925	3		37
Wire Clip			
	034		45
	1		
70366	6201		45
Wire Guard			
	95P		5
Wire Harnes			
20204	41		51
	42		
	75		
	1P		
Wireless Ne			
NK30)1 §	9, 11, 13,	15
Wire, 12 Ga	uge		
45380	0		51
Wire, 18 Ga	uae		
4500	1		51