Electronic Control

Washer and Dryer Troubleshooting Guide

Model numbers in this manual are shown on Page 2.

WASH RINSE SOAK SPIN PRICE TIME REMAINING	
FABRICS AND TEMPERATURES	DRYING DOOR OPEN COOL DOWN PRICE TIME REMAINING
HOT WARM COLD	RICS AND TEMPERATURES





WARNING

- Failure to install, maintain, and/or operate this product according to the manufacturer's instructions may result in conditions which can produce serious injury, death and/or property damage.
- Do not repair or replace any part of the product or attempt any servicing unless specifically recommended or published in this Service Manual and that you understand and have the skills to carry out.
- Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the product is properly grounded and to reduce the risk of fire, electric shock, serious injury, or death.



WARNING

Repairs that are made to your products by unqualified persons can result in hazards due to improper assembly or adjustments subjecting you, or the inexperienced person making such repairs, to the risk of serious injury, electrical shock, or death.

W007



CAUTION

If you or an unqualified person perform service on your product, you must assume the responsibility for any personal injury or property damage which may result. The manufacturer will not be responsible for any injury or property damage arising from improper service and/or service procedures.

NOTE: The WARNINGS and IMPORTANT INSTRUCTIONS appearing in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and carefulness are factors which CANNOT be built into these products. These factors MUST BE supplied by the person(s) installing, maintaining or operating the product.

Always contact your dealer, distributor, service agent or the manufacturer about any problems or conditions you do not understand.

Recognize Safety Symbols, Words and Labels

- **ADANGER** Immediate hazards which WILL result in serious injury or death.
- **AWARNING** Hazards or unsafe practices which COULD result in serious injury or death.
- **ACAUTION** Hazards or unsafe practices which COULD result in minor or moderate injury or product or property damage.

© Copyright 1999, Alliance Laundry Systems LLC

All rights reserved. No part of the contents of this book may be reproduced or transmitted in any form or by any means without the expressed written consent of the publisher.

Model Identification

Information in this manual is applicable to these washer and dryer models:

WASHER MODELS	DRYER MODELS		
EAJ920	EEC290	HDE607	SSE507
EAJ921	EEC591	HDE707	SSE517
EA2820	EEJ907	HDG509	SSE607
EA2821	EE2807	HDG609	SSE707
EA2920	EE2907	HDG709	SSE717
EA2921	EE3807	HFE507	SSG409
EA3820	EE3907	HFE707	SSG419
EA3821	EE5807	HFG509	SSG509
EA3920	EE5817	HFG709	SSG519
EA3921	EE5907	HSE517	SSG609
EC2921	EE5917	HSE617	SSG709
HWT521	EE6807	HSE7U17	SSG719
HWT621	EE6817	HSG519	ZEC290
HWT721	EE6907	HSG619	ZEC591
SWT420	EE6917	HSG719	ZEJ907
SWT421	EGC290	SDE407	ZE2907
SWT520	EGC591	SDE507	ZE3807
SWT521	EGJ909	SDE607	ZE5917
SWT620	EG2809	SDE707	ZE6817
SWT621	EG2909	SDG409	ZGC290
SWT720	EG3809	SDG509	ZGC591
SWT721	EG3909	SDG609	ZGJ909
XA2820	EG5809	SDG709	ZG2909
XA2821	EG5819	SFE507	ZG3809
ZAJ920	EG5909	SFE607	ZG5919
ZAJ921	EG5919	SFE707	ZG6819
ZA2920	EG6809	SFG509	
ZA2921	EG6819	SFG609	
ZA3821	EG6909	SFG709	
ZC2921	EG6919	SSE407	
	HDE507	SSE417	

Table of Contents

Model Identification2		
Section 1 Electronic Control Error Code Listing	5	
Section 2 Troubleshooting	7	
Cannot Perform Infrared Communication Coins Ignored When Entered	7 8	
Washer Electronic Control Has No Visible Display	9	
Dryer Electronic Control Has No Visible Display	10	
Washer No Fill Analysis	12	
Washer No Motor Run — Agitate Analysis No Motor Run — Spin Analysis Overflow Analysis	14 16 18	
Gas Dryer No Motor Run — "Door Open" Analysis No Motor Run — "Push Start" Analysis No Heat Analysis	20 22 24	
Electric Dryer No Motor Run — "Door Open" Analysis No Motor Run — "Push Start" Analysis No Heat Analysis	26 28 30	
Washer Audit Switch Function Analysis	32	
Dryer Audit Switch Function Analysis	33	

NOTE: All voltage checks in this Troubleshooting Guide are 120 Volts. There should be little variation from this voltage range.

Section 1 Electronic Control Error Code Listing

Listed below are some of the error codes that may appear on the Electronic Control.

"E:00"	General Error		
"E:01"	Proximity Error	Micro-wand IIIe is improperly aimed at Infrared communicator (angle or distance): Reaim Micro-wand IIIe.	
"E:02"	IR Communication Disconnection	Micro-wand IIIe prematurely pulled away from Electronic Control during infrared communication: Maintain infrared connection between Micro-wand IIIe and Electronic Control during communication.	
"E:05"	Invalid Value Communication	Invalid code downloaded from Micro-wand IIIe to Electronic Control:	
"E:07"	Inoperative Control	Replace Electronic Control.	
"E:08"	Inoperative Control	Replace Electronic Control.	
"E:09"	Proximity Error	Micro-wand IIIe is improperly aimed at Infrared communicator (angle or distance): Reaim Micro-wand IIIe.	
"E:0A"	Proximity Error	Micro-wand IIIe is improperly aimed at Infrared communicator (angle or distance): Reaim Micro-wand IIIe.	
"E:0B"	IR Communication Disconnection	Micro-wand IIIe prematurely pulled away from Electronic Control during infrared communication: Maintain infrared connection between Micro-wand IIIe and Electronic Control during communication.	
"E:0C"	IR Communication Disconnection	Micro-wand IIIe prematurely pulled away from Electronic Control during infrared communication: Maintain infrared connection between Micro-wand IIIe and Electronic Control during communication.	
"E:0d"	Pressure Switch Error	1. Check fill and drain hoses for improper installation and kinks.	
		2. Check fill electrical circuit: Replace inoperative switches or wires.	
"E:0F"	IR Communicator Programmed Off	Reprogram infrared communicator on.	
"Err"	Coin Error	1. Inoperative coin sensor: Run the Coin Drop Diagnostic test.	
		2. Coin drop obstruction: Check coin drop area and remove any obstructions.	
		3. Customer tampering: Evaluate security procedures.	
"OP"	Open Thermistor	Physical opening in the thermistor circuit: Change thermistor.	
"SH"	Shorted Thermistor	Dead short in the thermistor circuit: Change thermistor.	

NOTE: Disconnecting power to the unit may clear the error display.

Section 2 Troubleshooting

CANNOT PERFORM INFRARED COMMUNICATION



COINS IGNORED WHEN ENTERED



W368S

ELECTRONIC CONTROL HAS NO VISIBLE DISPLAY



W369S

ELECTRONIC CONTROL HAS NO VISIBLE DISPLAY



D203S

NO FILL ANALYSIS





NO MOTOR RUN — AGITATE ANALYSIS



W372S



NO MOTOR RUN - SPIN ANALYSIS





OVERFLOW ANALYSIS





W377S

NO MOTOR RUN - "DOOR OPEN" ANALYSIS





NO MOTOR RUN — "PUSH START" ANALYSIS





NO HEAT ANALYSIS





NO MOTOR RUN — "DOOR OPEN" ANALYSIS





NO MOTOR RUN — "PUSH START" ANALYSIS





NO HEAT ANALYSIS





AUDIT SWITCH FUNCTION ANALYSIS



AUDIT SWITCH FUNCTION ANALYSIS

