


Whirlpool CG2951XYN0 02 - TOP AND CONSOLE

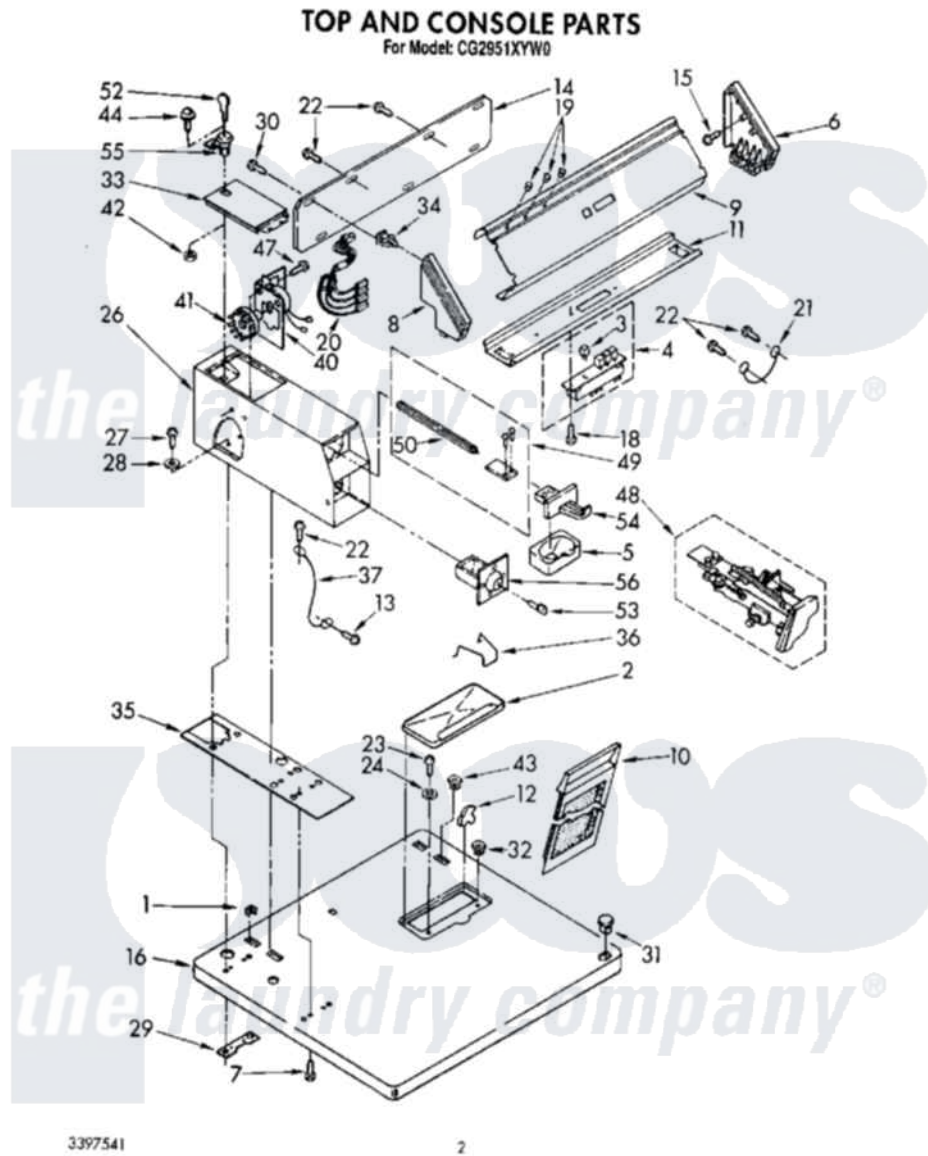

Whirlpool [Commercial Whirlpool CG2951XYN0 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	358472			Stop, Push-In Top
2	688150	697367		Cover
"	689310	697368		Cover
"	689313		Not Available	Cover, Lint Screen (Golden Harvest)
3	3348587			Button, Pushbutton
4	3394732	3394075		Switch, Pushbutton
5	385421			Funnel, Coin
6	63795	285653		Endcap
7	98445			Screw, 10-16 X 3/4
8	3347710	3347718		End Cap
9	3393405	3387362		Panel, Control
10	690634	339392		Screen, Lint
11	3392280	3949733		Bracket, Control
12	339230	3978606		Hinge, Lint Lid
"	339229	W10044470		Hinge, RH
13	339805			Screw, 10-32 X 3/16

14	3387978		Panel, Rear Console
15	355326	Not Available	Screw, End Cap To Bracket (4)
16	3397289	3402300	Top
"	3397290	3402301	Top
"	3397291		Top
18	9424101	965173	Screw, 8 X 3/8 Phlps. Round Hd.
19	3348109		Lens Light
20	3388650	Not Available	Lights, Indicator (240 Volts)
21	690853		Wire, Ground
22	343641	681414	Screw, 10AB X 1/2
23	688983	487240	Screw, For Mtg. Service Capacitor
24	237446	487596	Washer
26	3395378	8527844	Case
"	3395379	279995	Case
"	3395380	Not Available	Case, Meter (Golden Harvest)
27	3349065		Bolt, Meter Case Mounting
28	138485		Washer, 5/16
29	3347825	3353813	Plate, Mounting
30	64211	388326	Screw, 8-18 X 1.25
31	387371		Lock, Plug Also Available
32	98460		Nut, Push-In
33	3351136		Service Door Assembly
"	3351137	Not Available	Door, Service (For Almond Model)
"	3351138	285880	Door
34	689559		Nut, Push-In
35	3348850	3954812	Cushion, Meter Case
36	3352295		Guide, Drawer
37	340025	687133	Wire
40	3387975	279737	Timer
41	3387974		Timing Cam
"	343777		Timing Cam
42	90406		Cage Nut, 5/16-18
43	358473		Nut, Push-In
44	358409		Screw And Washer
47	339805		Screw, 10-32 X 3/16

