


# Amana HZ1070 03 - FAN ASSY, DRUM AND LINT SCREEN

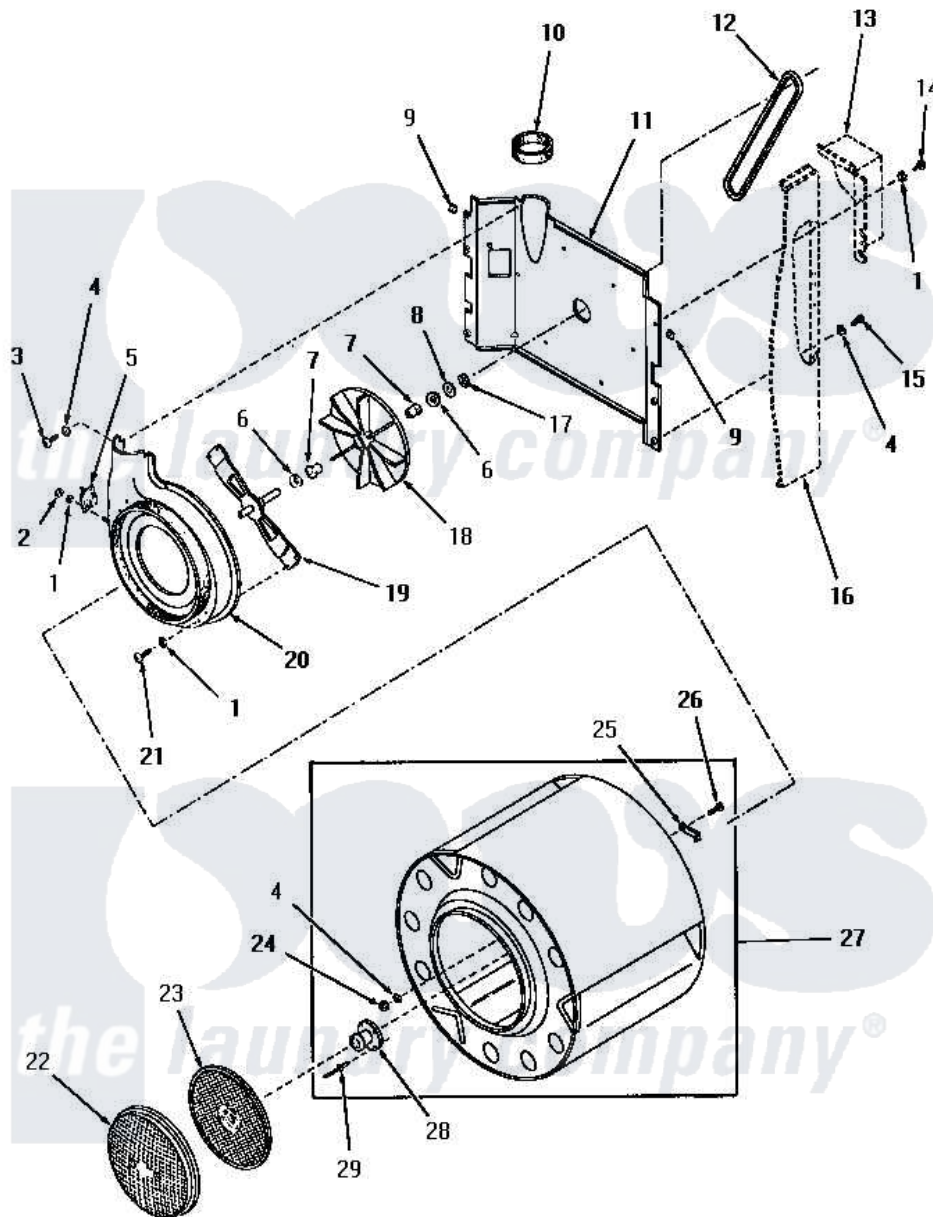

Amana Residential Amana HZ1070 Dryer Parts Parts Diagram 03 - FAN ASSY, DRUM AND LINT SCREEN  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	Y20278		Not Available	LOCKWASHER
2	M540064		Not Available	NUT
3	M540007		Not Available	SCREW
4	<a href="#">03815</a>			Lockwasher, No.10 Ext Shk
5	M540095		Not Available	THERMOSTAT xREPLACE
6	M540088		Not Available	WASHER
7	M540089		Not Available	BEARING
8	M540092		Not Available	WASHER
9	<a href="#">54038</a>			NUt, Speed U-Type
10	M540141		Not Available	FELT SEAL
11	M540091		Not Available	FAN SUPPORT
12	M540094		Not Available	BELT xREPLACE
13	Y00000000		Not Available	SEE NOTE REAR PANEL
14	M540004		Not Available	SCREW
15	M540011		Not Available	SCREW
16	Y00000000		Not Available	SEE NOTE CABINET ASSEMBLY

17	<a href="#">23748</a>		Ring, Retaining
18	M540090	Not Available	ASSY,FAN xREPLACE
19	M540087	Not Available	SPINDLE,FAN xREPLACE
20	M540230	Not Available	FAN HOUSING
21	M540212	Not Available	SCREW
22	M540101	Not Available	HOUSING,LINT SCREEN xREPLACE
23	M540196	Not Available	SCREEN,LINT xREPLACE
24	03673	Not Available	NUT
25	M540098	Not Available	GROUND STRAP
26	<a href="#">20267</a>		Screw, 10-24 X 3/8 Round
27	M540159	Not Available	DRUM ASSEMBLY
28	M540166	Not Available	ASSY,BEARING xREPLACE
29	M540117	Not Available	POP RIVET

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>