


# Crosley CW18C1 03 - EXTERIOR (ORIG. REV. A-B)

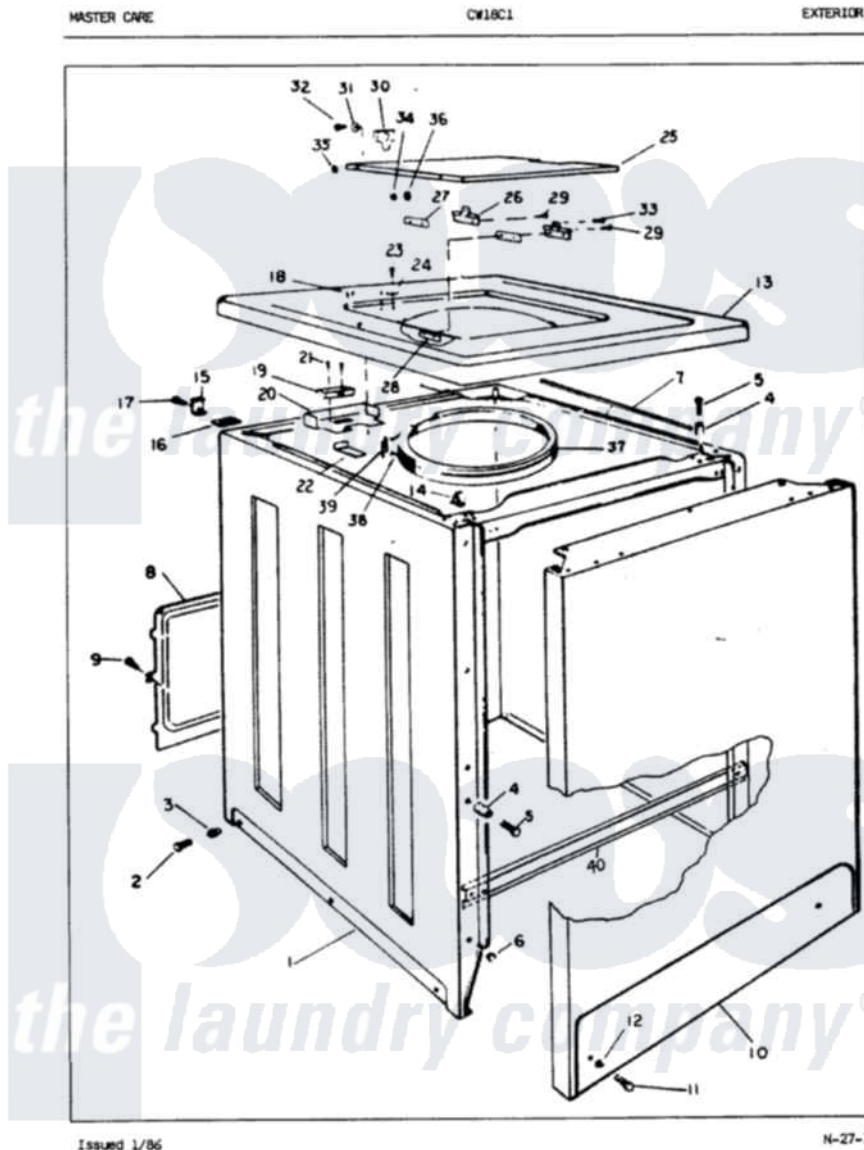

Crosley Residential Crosley CW18C1 Washer Parts Parts Diagram 03 - EXTERIOR (ORIG. REV. A-B)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-0061		Not Available	CABINET BODY
2	25-7001	<a href="#">308685</a>		Side Trim )
3	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE WASHER (PURCHASE LOCALLY)
"	25-7458	<a href="#">308685</a>		Side Trim )
"	33-2088		Not Available	SLEEVE
4	<a href="#">34-9701</a>			Guide, Cabinet
5	<a href="#">25-6109</a>			Screw
6	<a href="#">33-2653</a>			Bumper, Cabinet
7	33-9948		Not Available	CUSHION STRIP
8	33-8687		Not Available	REAR SHIELD
9	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW-PURCHASE LOCALLY
10	35-0056		Not Available	FRONT PANEL
11	25-7001	<a href="#">308685</a>		Side Trim )
				NOT REQUIRED PART OR

12	W10124350		Not Available	SEE NOTE WASHER (PURCHASE LOCALLY)
13	35-0063		Not Available	CABINET TOP
14	<a href="#">25-7285</a>			Clip
15	33-7450	<a href="#">35-2846</a>		Hinge, Cabinet Top
16	<a href="#">33-0930</a>			Pad, Top Hinge
17	25-7732	<a href="#">681414</a>		Screw, 10AB X 1/2
18	<a href="#">33-2653</a>			Bumper, Cabinet
19	33-9064	<a href="#">12001187</a>		Kit, Lid Switch Assembly
20	33-8289	<a href="#">12001187</a>		Kit, Lid Switch Assembly
21	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW- PURCHASE LOCALLY
22	33-8828	<a href="#">12001187</a>		Kit, Lid Switch Assembly
23	25-7463	<a href="#">7101P012-60</a>		Screw
24	<a href="#">25-7436</a>			Nylite Washer
25	33-9278		Not Available	CLOTHES DOOR
26	<a href="#">33-6956</a>			Hinge
27	<a href="#">33-6957</a>			Hinge Pad
28	33-8058		Not Available	SPEEDNUT
29	25-7455	<a href="#">99002757</a>		Screw
30	<a href="#">43-0057</a>			Actuator, Door Switch
31	<a href="#">25-7436</a>			Nylite Washer
32	<a href="#">25-7438</a>			Screw
33	25-7455	<a href="#">99002757</a>		Screw
34	25-7086	<a href="#">Y0308025</a>		Washer, Stainless Steel
35	<a href="#">25-7436</a>			Nylite Washer
36	25-8057		Not Available	PLASTIC NUT
37	33-9399		Not Available	SPLASH GUARD
38	33-6093		Not Available	RETAINING RING
39	<a href="#">33-0767</a>			Spring
40	25-7752	<a href="#">3196169</a>		Screw, Element
"	35-0445		Not Available	CABT BRACE

