


Crosley CW18P6W 14 - TUB (REV. E-G)

SECTION: TUB
MODEL: CW18P6

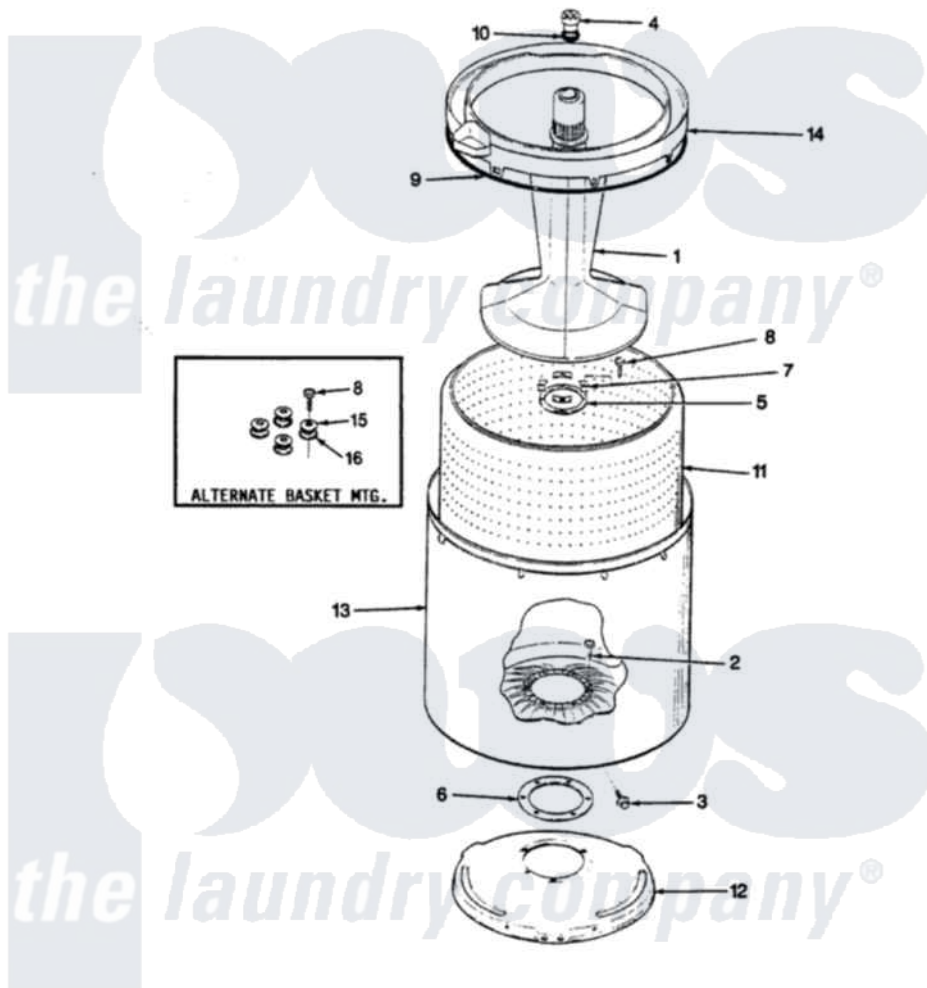

Issue Date: 6/90

Crosley [Residential Crosley CW18P6W Washer Parts](#) Parts Diagram 14 - TUB (REV. E-G)
Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|--------------------------|---------------|------------------------|
| 1 | 35-2456 | 33-4352 | | Agitator |
| 2 | 35-2062 | 21001063 | | Screw, Shoulder |
| 3 | 25-7914 | 22002933 | | Screw |
| 4 | 33-6241 | | | Cap |
| 5 | 33-8959 | | | Gasket |
| 6 | 35-2061 | | | Gasket, Tub To Housing |
| 7 | 35-8799 | | Not Available | REINFORCEMENT PLATE |
| 8 | 25-7783 | 4356852 | | Screw |
| 9 | 35-2328 | | | Seal, Tub Top |
| 10 | 25-7330 | | | Rubber Washer |
| 11 | 35-2529 | | Not Available | TUB SUPPORT |
| " | 35-2381 | | Not Available | BASKET ASSY-WHITE |
| 13 | 35-2038 | | | Tub |
| 14 | 35-2034 | | Not Available | TOP, TUB |
| 15 | 25-7921 | | Not Available | STEEL WASHER |
| 16 | 25-7922 | | | Cork Washer |