


Crosley CW20P6WC 03 - CONTROL PANEL

Section: BACKGUARD
Models: CW20P6C

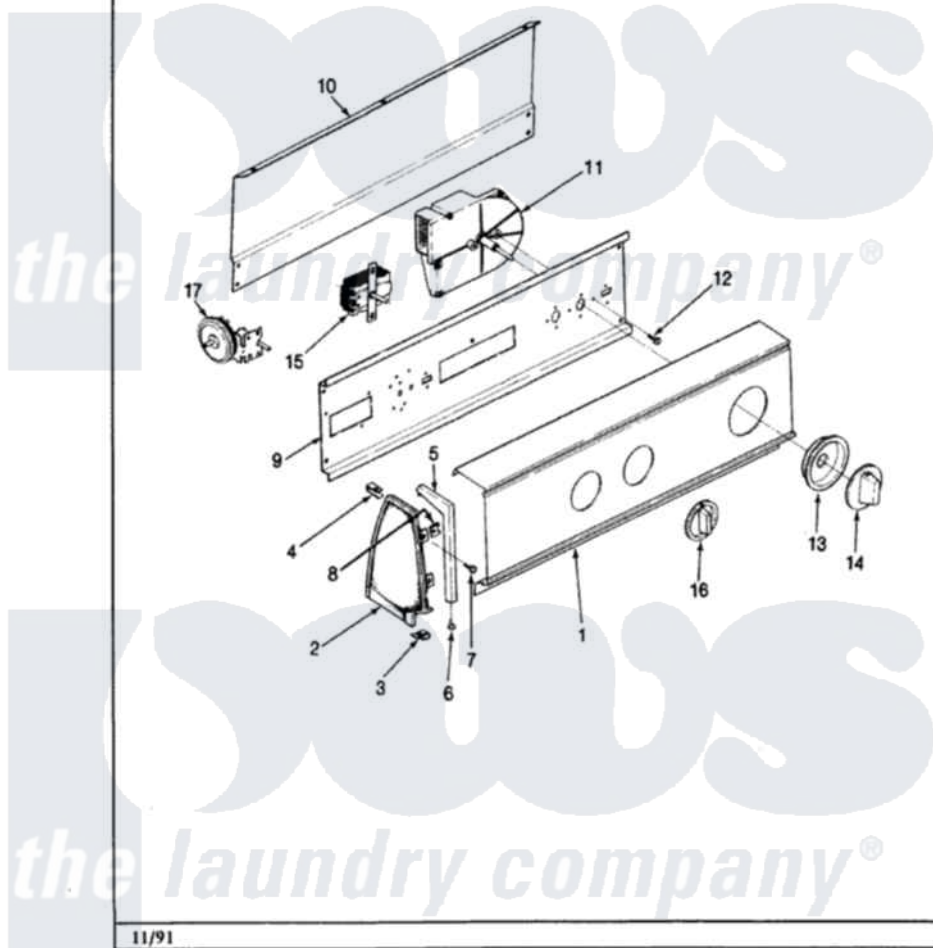

Crosley [Residential Crosley CW20P6WC Washer Parts](#) Parts Diagram 03 - CONTROL PANEL
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7793			Screw
"	35-2182		Not Available	CONTROL PANEL
"	25-7702			Speedclip, End Cap To Control Panel
2	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
3	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
8	25-7702			Speedclip, End Cap To Control Panel
9	53-1676			Shield, Control

10	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2688	21001460	Shield, Rear
"	25-3457		Screw, Sems
11	35-2749		Timer
12	25-0088	489483	Screw 10-32 X 1/2
13	35-0180	12500058	Knob Ski
14	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-0498	12500058	Knob Ski
15	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2801	21001554	Switch, Water Level
16	35-2185	21001283	Knob, Selector----Piq
17	35-2617	35-0119	Rotary Switch
NI	35-2458-3	Not Available	MANUAL, USE & CARE

