


Crosley CW22B7M 07 - TUB

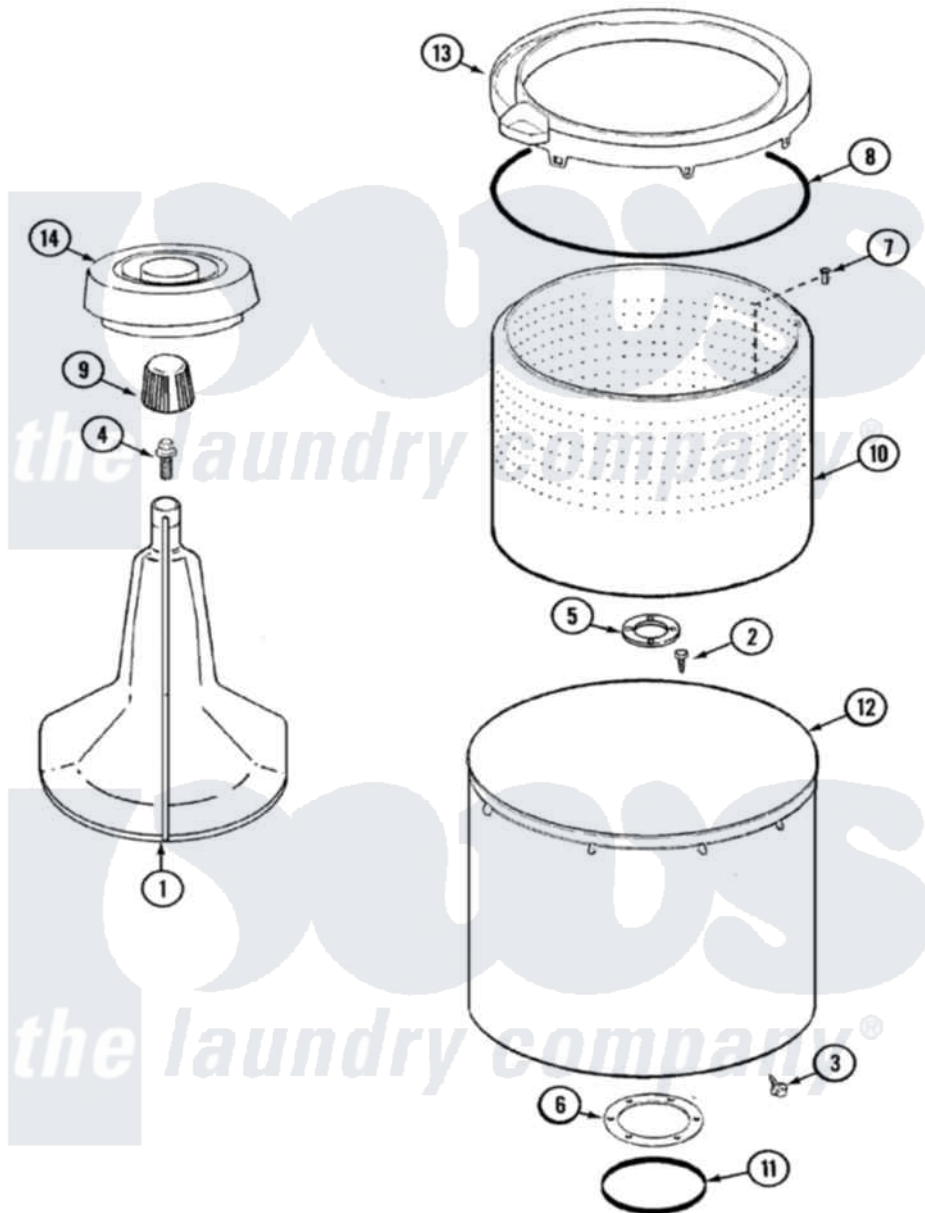

Crosley [Residential Crosley CW22B7M Washer Parts](#) Parts Diagram 07 - TUB
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|--------------------------|---------------------------|---------------|------------------------------|
| 1 | 35-3580 | | | Agitator |
| 2 | 21001063 | | | Screw, Shoulder |
| 3 | 25-7953 | 22002933 | | Screw |
| 4 | 25-7948 | W10309247 | | Screw |
| 5 | 35-3685 | | | Gasket, Basket To Centerpost |
| 6 | 35-3686 | | | Gasket, Tub To Housing |
| 7 | 25-7967 | 3400504 | | Screw |
| 8 | 35-2328 | | | Seal, Tub Top |
| 9 | 35-2733 | | | Cap, Agitator |
| 10 | 35-3687 | | Not Available | BASKET, SPIN |
| 11 | 35-2978 | | | Seal, Tub/Housing |
| 12 | 35-3700 | | | Tub Assembly |
| 13 | 35-3578 | | Not Available | TOP, TUB |
| " | 35-2262 | | Not Available | SHIELD, TUB TOP |
| 14 | 35-2550 | | | Dispenser, Rinse |