


# Magic Chef CAV1004AWW 03 - CONTROL PANEL

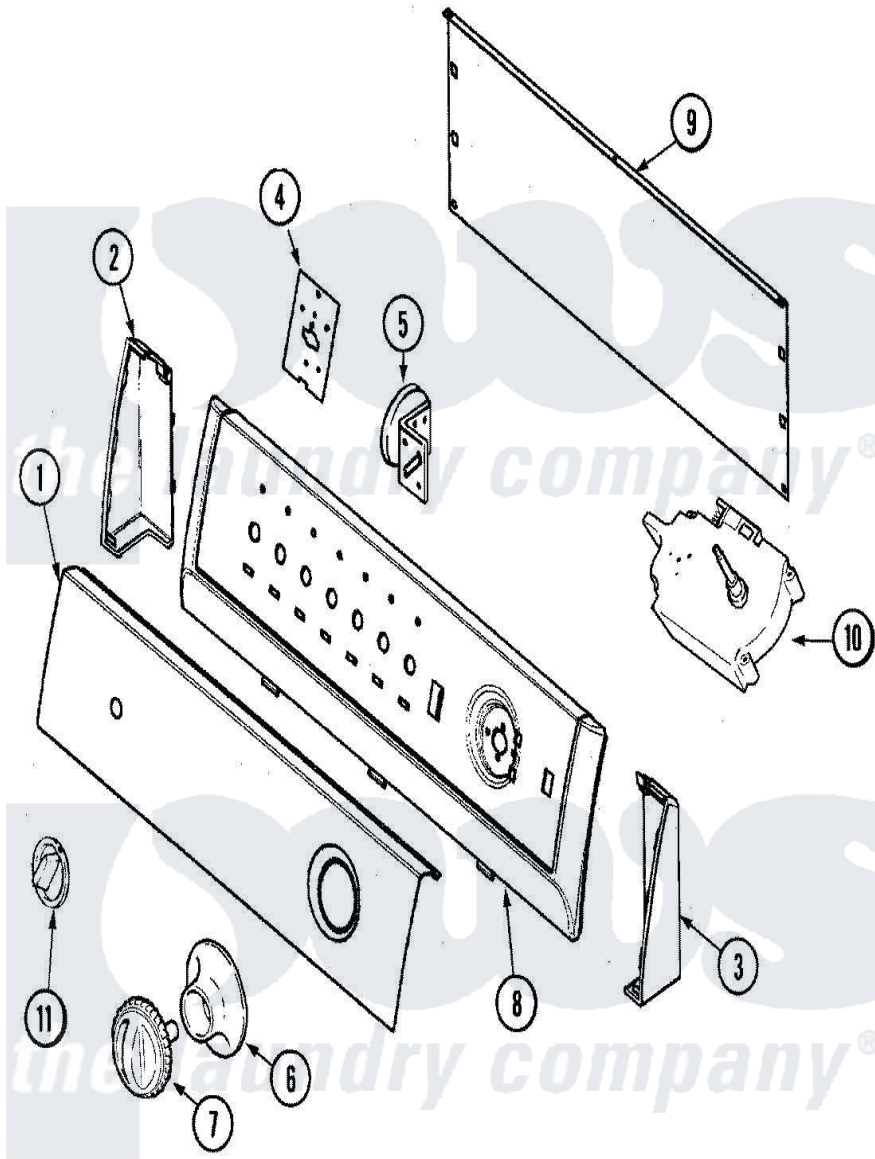

Magic Chef [Residential Magic Chef CAV1004AWW Washer Parts](#) Parts Diagram 03 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">Y2201400</a>			Panel, Control
"	<a href="#">21002163</a>			Facia
2	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">21001546</a>			Endcap, Panel
3	<a href="#">21001547</a>			Endcap, Panel
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
4	<a href="#">21001517</a>			Shield, Control
"	<a href="#">21002077</a>			Shield, Control-1 Hole/Console
5	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">21002031</a>			Switch, Water Level
"	<a href="#">Y2201474</a>			Switch, Pressure
6	<a href="#">21001520</a>			Skirt, Timer Knob
7	<a href="#">21001526</a>			Knob, Timer
8	<a href="#">21001552</a>			Frame , Control Panel

9	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">21001527</a>		Shield, Rear
10	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">21002056</a>		Timer
"	<a href="#">21001695</a>		Timer
11	<a href="#">21001544</a>		Knob, Selector

