


Magic Chef CAV2000AWA 03 - CONTROL PANEL

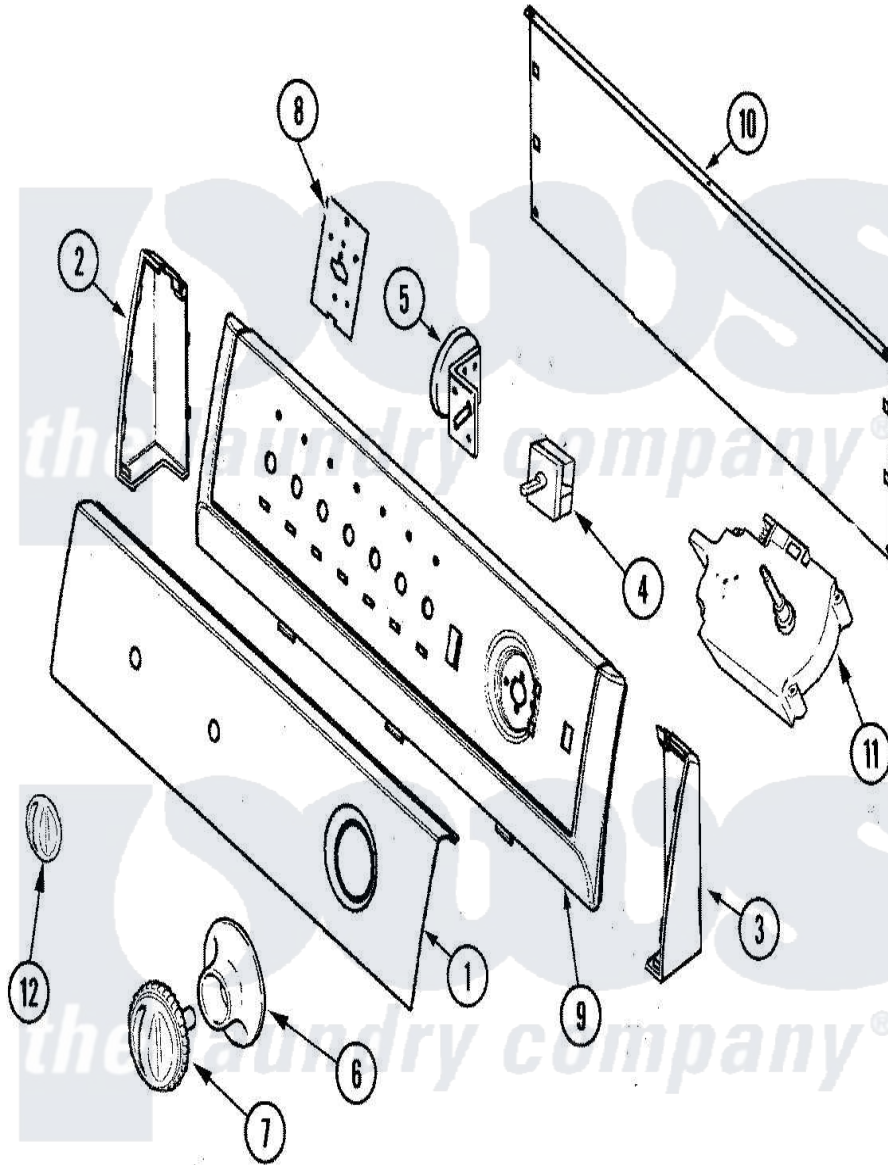

Magic Chef [Residential Magic Chef CAV2000AWA Washer Parts](#) Parts Diagram 03 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	21001584			Panel, Control
2	21001557	21001769		Endcap, Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
3	21001564	21001768		Endcap, Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001139			Switch, Water Temp. 3 Position
5	21001554			Switch, Water Level
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
6	21001563			Skirt
7	21001559	21001770		Knob, Timer
8	21001517			Shield, Control
9	21001560	21001767		Frame

10	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001527		Shield, Rear
11	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001522		Timer
12	21001556	21001772	Knob, Selector
NI	21001725	Not Available	MANUAL, USE & CARE (SPAN)
"	21001573	Not Available	MANUAL, USE & CARE
"	12002417		Wire Kit
"	21001785		Harness, Wire

