


# Magic Chef MCWP1085 02 - CONTROL PANEL

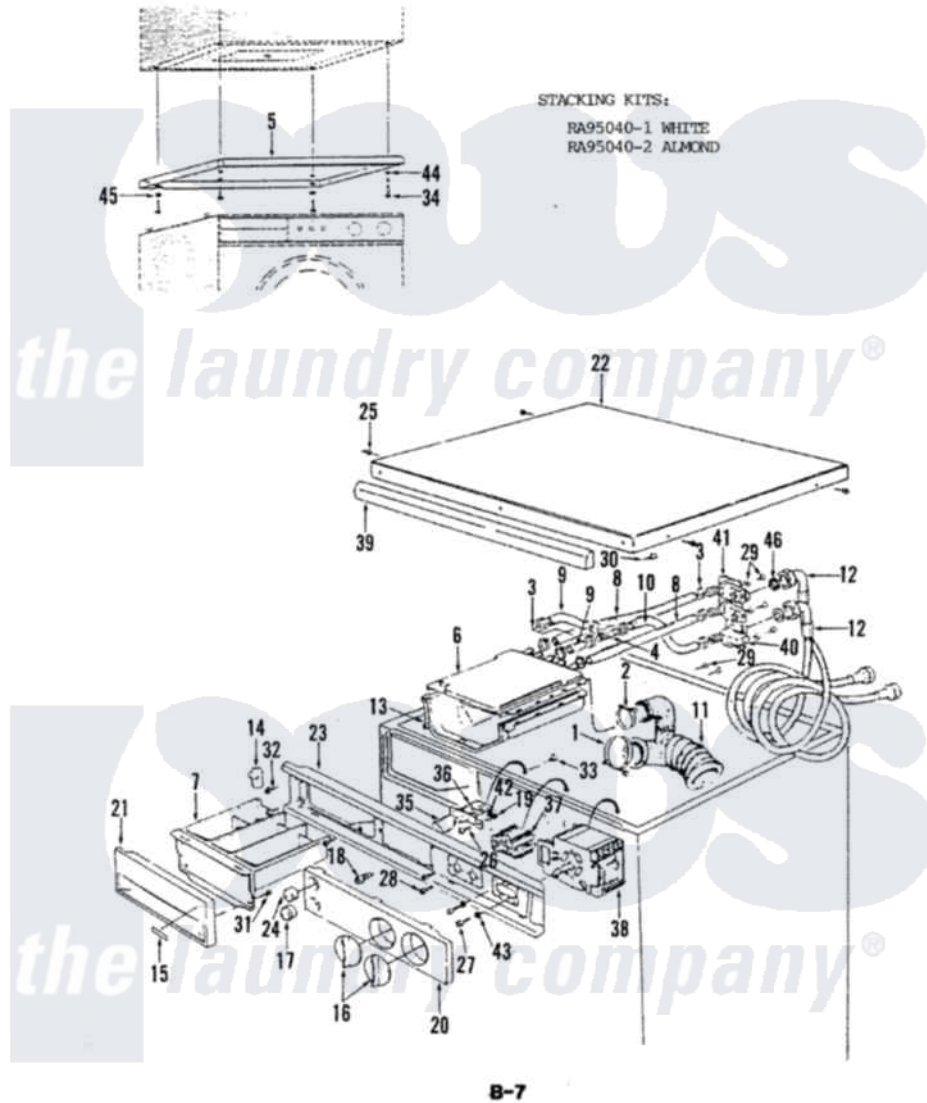

Magic Chef [Residential Magic Chef MCWP1085 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	113200164		Not Available	CLAMP
2	113200404	<a href="#">22001376</a>		Hose, Clamp
3	113200024	<a href="#">596669</a>		Clamp, Manifold
4	112901982		Not Available	T FITTING
5	111100740		Not Available	COVER
6	<a href="#">112400304</a>			Disp Outlet And Housing
7	112400392		Not Available	DISPENSER DRWR
8	114300716		Not Available	HOSE
9	114300718		Not Available	HOSE
10	114300683		Not Available	HOSE
11	114300715		Not Available	HOSE
12	119400110		Not Available	INLET HOSE
13	112400302		Not Available	DISP HOUSING
14	112400394		Not Available	LEVEL INDICATOR
15	33-9845		Not Available	NAMEPLATE
16	189990081		Not Available	KNOB

17	112902219	Not Available	INDICATOR LIGHT
18	116102567	Not Available	``ON`` LIGHT
19	920113418	Not Available	NUT
20	119802655	Not Available	CONTROL PANEL
21	112602966	Not Available	DISP FRNT PANEL
22	111100734	Not Available	TOP PANEL
23	112400396	Not Available	CNTRL MTG PLATE
24	112902035	Not Available	PUSHBUTTON
25	912344102	Not Available	SCREW
26	912133410	Not Available	SCREW
27	912131141	<a href="#">4159193</a>	Screw, Ground
28	912131137	<a href="#">488234</a>	Screw 8-32 X 1/4
29	995500001	Not Available	SCREW
30	912362330	Not Available	SCREW
31	913331132	Not Available	SCREW
32	991644512	Not Available	SCREW
33	911354239	Not Available	SCREW
34	917143112	Not Available	SCREW
35	182990081	Not Available	SPACER
36	116102537	Not Available	PUSHBUTTON ASM
37	116102530	Not Available	SELECTOR
38	<a href="#">116102529</a>		Timer
39	112902354	Not Available	TOP PANEL TRIM
40	116102549	Not Available	HOT INLET VALVE
41	116102541	Not Available	VALVE
42	930036328	Not Available	WASHER
43	930046333	Not Available	WASHER
44	993210561	Not Available	WASHER
45	993041134	Not Available	WASHER
46	114200090	Not Available	GASKET

