


# Magic Chef WCZ1050AM 03 - CYLINDER

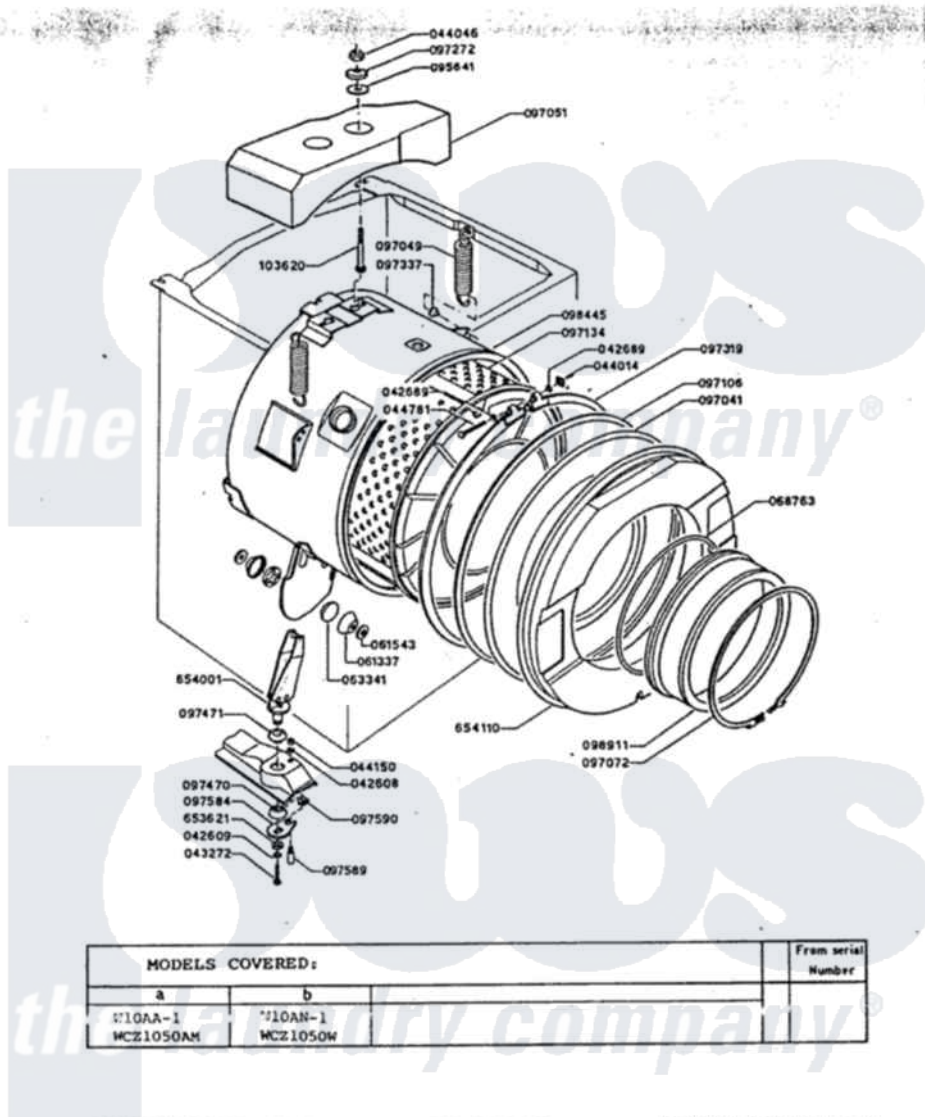

Magic Chef [Residential Magic Chef WCZ1050AM Washer Parts](#) Parts Diagram 03 - CYLINDER  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	042608		Not Available	WASHER
2	042609		Not Available	WASHER
3	042689		Not Available	FLAT WASHER
4	043272		Not Available	HEX HD BOLT
5	044014		Not Available	NUT
6	044046		Not Available	NUT
7	044150		Not Available	NUT
8	044781		Not Available	SCREW
9	061337		Not Available	SUPPORT PAD
10	061543		Not Available	SPACER WASHER
11	063341		Not Available	PAD
12	068763		Not Available	GASKET SPRING
13	095641		Not Available	WASHER
14	097041		Not Available	FRNT TUB FLANGE
15	097049		Not Available	TUB SUSP SPRING
16	097051		Not Available	UPR COUNTRWGT

17	097072	Not Available	GASKET RING
18	097106	Not Available	TUB GASKET
19	097134	Not Available	DRUM ASM
20	097272	Not Available	WASHER
21	097319	Not Available	RING
22	097337	Not Available	SPRING BUSHING
23	097470	Not Available	BOTTOM GROMMET
24	097471	Not Available	TOP GROMMET
25	097584	Not Available	SUPPORT
26	097589	Not Available	PIN
27	097590	Not Available	PLATE
28	098445	Not Available	TUB ASM
29	098911	Not Available	GASKET
30	<a href="#">103620</a>		Screw
31	653621	Not Available	BUSHING
32	654001	Not Available	SNUBR SPRNG ASM
33	654110	Not Available	COUNTERWEIGHT

