


Magic Chef YE10AA12 01 - CABINET & DOOR

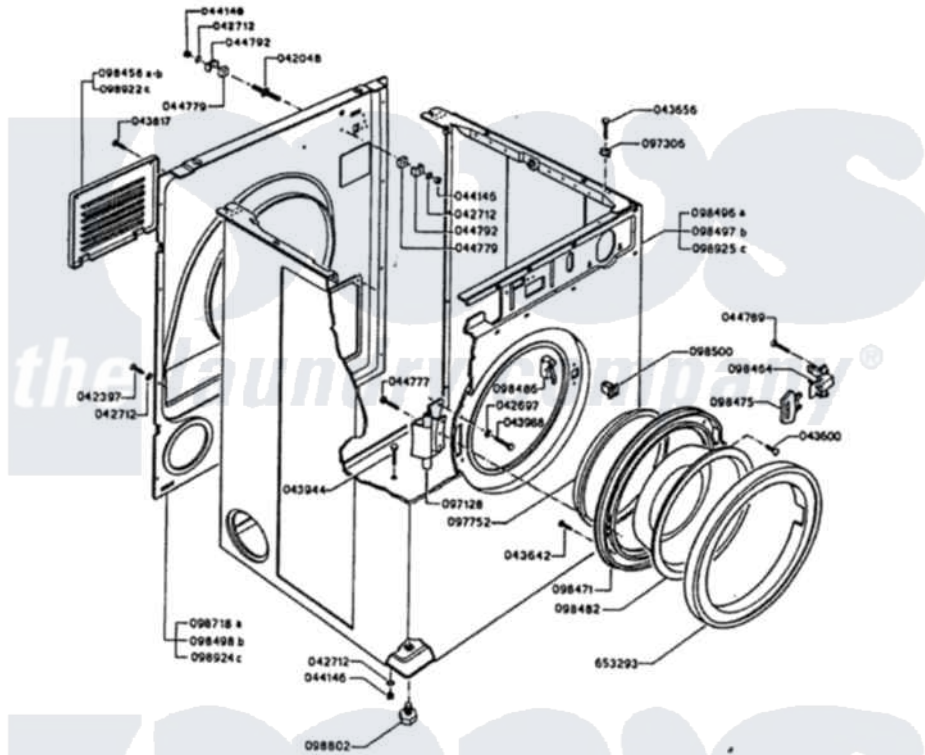

MODELS COVERED:			From serial Number
a	b	c	
YE10AN-11 DCZ1010W	YE10AN-12 DCZ1040W	YE10AA-12 DCZ1040AM	

PH-1527-00

Magic Chef [Residential Magic Chef YE10AA12 Dryer Parts](#) Parts Diagram 01 - CABINET & DOOR
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	042048		Not Available	SCREW
2	042397	8-1400-0-6		Small Round Box
3	042697		Not Available	LOCKWASHER
4	042712		Not Available	LOCKWASHER
5	043600		Not Available	SCREW
6	Y043642	414004-35		Screw
7	043656		Not Available	SCREW
8	043817		Not Available	SCREW
9	043944		Not Available	SCREW
10	043988		Not Available	SCREW
11	044146		Not Available	NUT
12	044777		Not Available	SCREW
13	044779		Not Available	NUT
14	044789		Not Available	SCREW
15	044792		Not Available	CLAMP
16	097128			Door Hinge Assembly

17	097306	Not Available	LID FRONT PIECE
18	097752	Not Available	GASKET TRIM
20	098464	Not Available	CATCH
21	098471	Not Available	DOOR FLANGE
22	098475	Not Available	DOOR HANDLE
23	098482	Not Available	DOOR
24	098486	Not Available	MICROSWITCH
28	098500	Not Available	DOOR CATCH
30	098802	Not Available	LEVELER
31	Y098922	Not Available	ACCESS DOOR
32	Y098924	Not Available	BACK PANEL
33	Y098925	Not Available	CABINET
34	653293	Not Available	DOOR FRAME

Howes
the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]