


Magic Chef YE20EN2 04 - HEATER

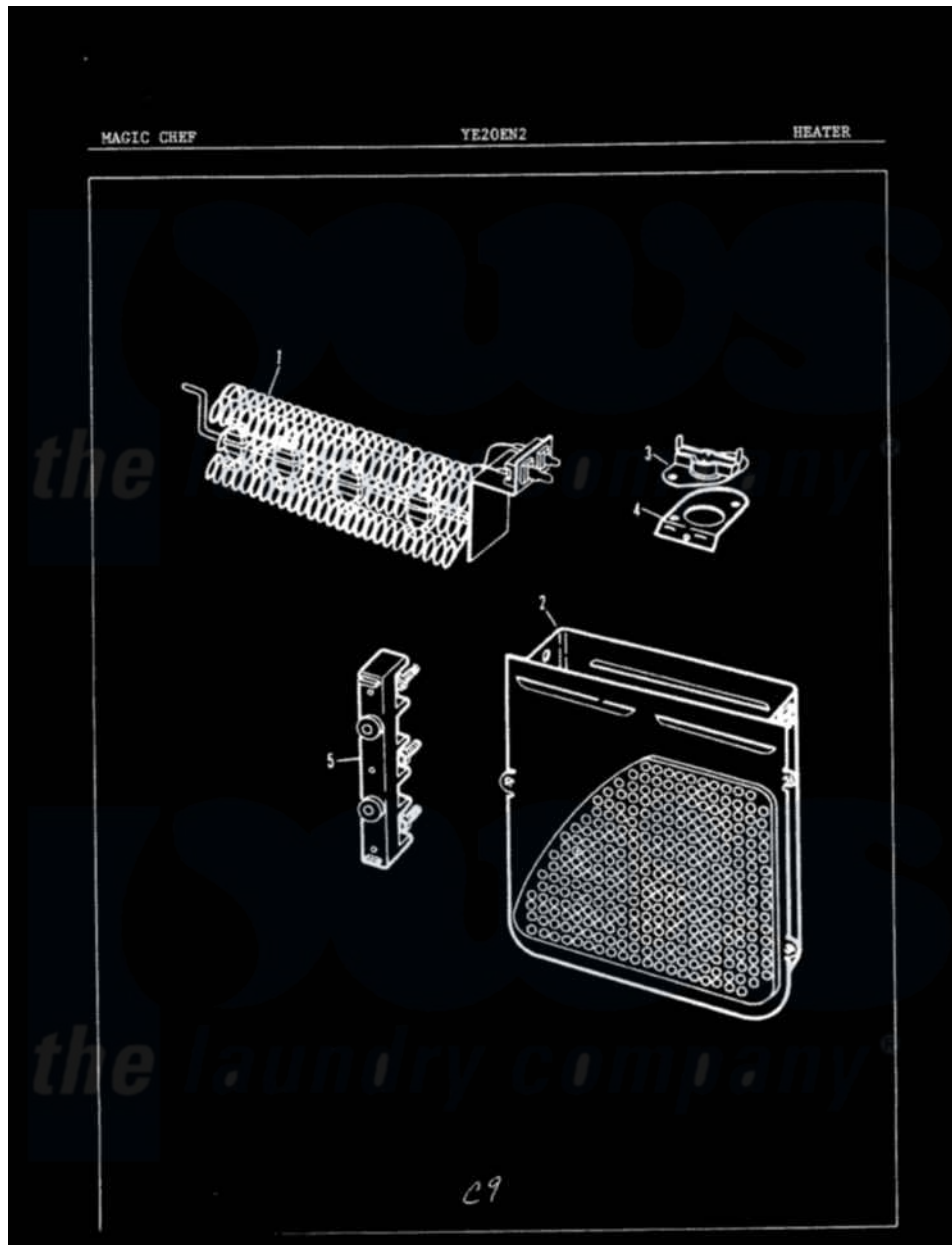

Magic Chef [Residential Magic Chef YE20EN2 Dryer Parts](#) Parts Diagram 04 - HEATER
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|---------------------------|---------------|--|
| 1 | 25-7863 | | | Screw |
| " | 53-0919 | LA-1044 | | Element |
| " | 53-0920 | LA-1044 | | Element |
| 2 | 25-7819 | M0217225 | | Screw |
| " | 53-0191 | | | Heater Housing Assembly |
| 3 | 53-0306 | 53-0771 | | Thermostat, Hi-Limit |
| " | 53-0771 | | | Thermostat, Hi-Limit |
| " | W10124350 | | Not Available | NOT REQUIRED PART OR SEE NOTE (PURCHASE LOCALLY) |
| 4 | 53-0285 | | | Bracket, Thermostat |
| " | 25-7741 | W10116760 | | Screw |
| 5 | 53-0166 | 53-1518 | | Block, Terminal |
| " | 25-6124 | | Not Available | NUT |
| " | 25-3123 | | Not Available | WASHER, CUP |
| " | 25-3122 | | | Washer, Flat |
| " | 25-0027 | 112432 | | Nut |

