



[Maytag Residential Maytag 640W Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	300290		Not Available	TIMER
2	Y300538		Not Available	FLUORESCENT LAMP
3	300541		Not Available	COVER FOR CONTROL PANEL
4	300543		Not Available	THERMOSTAT
5	310732		Not Available	CONTROL PANEL
6	<a href="#">310734</a>			Timer Dial
7	310735		Not Available	GLASS PANEL, RIGHT
8	310736		Not Available	GLASS PANEL, LEFT
9	310743		Not Available	FASTENER
10	310744		Not Available	SCREW-LAMP RECEPTACLE TO BRACK
11	310745		Not Available	SCREW, No.4 X 3/4 INCH
12	200046		Not Available	CONNECTOR, FEMALE
13	200272		Not Available	CONNECTOR, 3 WIRE
14	200860		Not Available	RECEPTACLE FOR LAMP-RIGHT

15	200862		Not Available	BALLAST
16	200866		Not Available	SOCKET-PILOT LAMP
17	201580		Not Available	SWITCH FOR FLUORESCENT LAMP
18	202807		Not Available	RECEPT FOR FLUORESCENT LAMP
19	210310	<a href="#">31001575</a>		Bulb, Cylinder Light
20	211238		Not Available	PANEL BRACKET, LEFT
21	211239		Not Available	PANEL BRACKET, RIGHT
22	211243		Not Available	TIMER KNOB
23	211244		Not Available	GASKET
24	211245		Not Available	SPRING CLIP-CONTROL COVER-REAR
25	211246		Not Available	SPRING CLIP
26	211247		Not Available	RETAINER
27	211249		Not Available	FASTENER
28	<a href="#">211250</a>			Fastener
29	<a href="#">211251</a>			Screw, Transformer
30	<a href="#">211252</a>			Screw, Ground Wire
31	211294	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping

