

Maytag 70C 04 - FRONT VIEW (70C)



[Maytag Residential Maytag 70C Dryer Parts](#) Parts Diagram 04 - FRONT VIEW (70C)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	300054	300-054		Setback Wall Tstat, 24V, Gas, Heating/Cooling, 5-Wire
2	Y300059		Not Available	MICRO SWITCH---NA
3	300134			Panel For Door W/Hinges-Outer
4	300201		Not Available	TOEBOARD
5	300254		Not Available	THERMOSTAT
6	300259		Not Available	BRACKET & SCREEN ASSY
7	300262		Not Available	TIMER
8	300284		Not Available	INSPECTION COVER
9	300402		Not Available	LINT DRAWER
10	300416		Not Available	DRUM ASSEMBLY
11	300445	675274		Washer
12	300446	W10254672		Adapter Faucet
13	301029		Not Available	DOOR HANDLE
14	302984			Baffle Assembly - Poly
15	310074	8316805		Light-Ind

16	310089	Not Available	TENSION SPRING
17	310113	Not Available	TIMER DIAL
18	310114	Not Available	TEMP CONTROL DIAL
19	310219		No. 10z Fastener
20	310419	Not Available	PANEL FOR LINT DRYER
21	310420	Not Available	SPRING CATCH FOR LINT DRYER
22	310429	Not Available	END CAP
23	310553	Not Available	ADJUSTABLE BRACKET
24	310558	Not Available	SCREW, LINT SCREEN TO PANEL
25	310578	Not Available	WASHER
26	310579	Not Available	SCREW, No. 10-24 X 1 1/16 INCH
27	Y310630		Door Seal
28	310703	Not Available	SCREW, No. 10-24 X 3/8 INCH
29	310768	Not Available	WASHER
30	310934	22003428	Leg, Adjustable
31	200490	Not Available	CONTROL KNOB
32	200522	Not Available	NAME PLATE
33	210140	Not Available	TINNERMAN CLIP FOR TOEBOARD
34	210442	Not Available	WASHER NYLON
35	210590	Not Available	SPEED NUT
36	210609		Nylon Washer
37	210674	Not Available	BALL STUD, LARGE
38	210684		Foot, Adjustable Leg
39	210837	Not Available	NAMEPLATE
40	210838	Not Available	TRIM FOR NAMEPLATE
41	210839	Not Available	SCREW, SELF-TAPPING
42	211739		Screw, Cabinet To Base
43	053111	Not Available	SET SCREW, 1/4 X 1/4 HOL. H

