



Maytag Residential Maytag A182 Washer Parts Parts Diagram 06 - TRANSMISSIONS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">Y014827</a>			Washer-Center Shaft
2	<a href="#">Y014839</a>			Collar-Drive Shaft
3	<a href="#">Y015629</a>			Bolt, Grinding Chamber
4	<a href="#">015639</a>			Dowel Pin
5	<a href="#">Y015902</a>			Spring For Agitator
6	Y052740	<a href="#">62739</a>		Nut, Lock
7	Y056080	<a href="#">6-0560800</a>		Oil
8	200730	<a href="#">22002124</a>		Shaft- Agi
9	200813		Not Available	GEAR CASE COVER ASSEMBLY
10	201463		Not Available	PITMAN WITH WRIST PIN
12	203193		Not Available	GEAR HOUSING W/STUDS & TUBE
14	203438	<a href="#">W10172457</a>		Transmison
15	<a href="#">204967</a>			Gear Kit-Power Fin Agitator
16	<a href="#">205811</a>			Counterweight
17	<a href="#">210054</a>			Pinion

18	<a href="#">210172</a>		Lock Washer
19	<a href="#">210179</a>		Retaining Ring
20	<a href="#">210183</a>		Groove Pin
21	<a href="#">210286</a>		Seal
22	<a href="#">210315</a>		Pinion
23	210632	<a href="#">22210632</a>	Gasket
24	<a href="#">210670</a>		Segment
25	<a href="#">210690</a>		Seal, Rubber
26	<a href="#">211089</a>		Lug, Stop Pulley
27	211090	<a href="#">22003555</a>	Washer, Stop Lug
28	211375	<a href="#">681582</a>	Screw
29	211483	<a href="#">6-2114830</a>	Washer- SP
30	<a href="#">211484</a>		Washer, Lug
31	<a href="#">211486</a>		Screw, 3/8-16 X 1/2 Inch
32	<a href="#">211487</a>		Groov-Pin
34	<a href="#">213044</a>		Shaft, Center
35	213068	<a href="#">204967</a>	Gear Kit-Power Fin Agitator
36	214276	Not Available	WASHER FOR GEARS

