



[Maytag Residential Maytag DE700 Dryer Parts](#) Parts Diagram 03 - CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	Y300538		Not Available	FLUORESCENT LAMP
2	300541		Not Available	COVER FOR CONTROL PANEL
3	300552		Not Available	LAMP SOCKET
4	301010			Chime
5	301130		Not Available	TIMER
6	301432		Not Available	TEMPERATURE SWITCH-GRAY
7	310744		Not Available	SCREW-LAMP RECEPTACLE TO BRACK
8	310844	W10068250		Screw
9	311179		Not Available	SWITCH BRACKET
10	311259		Not Available	SCREW, No.4-36 X 1/2 INCH
11	311387		Not Available	CONTROL KNOB
12	311503		Not Available	CONTROL PANEL
13	311504		Not Available	GLASS PANEL-LEFT HAND, GOLD
14	V311505		Not Available	GLASS PANEL-RIGHT HAND,

14	1311300	Not Available	GOL
15	311507	832840	Timer Dial Gray
16	200860	Not Available	RECEPTACLE FOR LAMP- RIGHT
17	200862	Not Available	BALLAST
18	201110	Not Available	WIRE CONNECTOR
19	201580	Not Available	SWITCH FOR FLUORESCENT LAMP
20	202807	Not Available	RECEPT FOR FLUORESCENT LAMP
21	210198		Fastener
22	210310	31001575	Bulb, Cylinder Light
23	211238	Not Available	PANEL BRACKET, LEFT
24	211239	Not Available	PANEL BRACKET, RIGHT
25	211244	Not Available	GASKET
26	211246	Not Available	SPRING CLIP
27	211247	Not Available	RETAINER
28	211249	Not Available	FASTENER
29	211250		Fastener
30	211252		Screw, Ground Wire
31	211293	Not Available	SCREW, No.8 X 1/2 INCH
32	211294	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
33	213077	Not Available	CAP FOR TIMER KNOB

