


# Maytag DG31CA 06 - DOOR SWITCH, TEMP CNTRL, & TERMINAL BLOCK

## MODEL DG31CA-CM-CT

### DOOR SWITCH, TEMPERATURE CONTROL & TERMINAL BLOCK

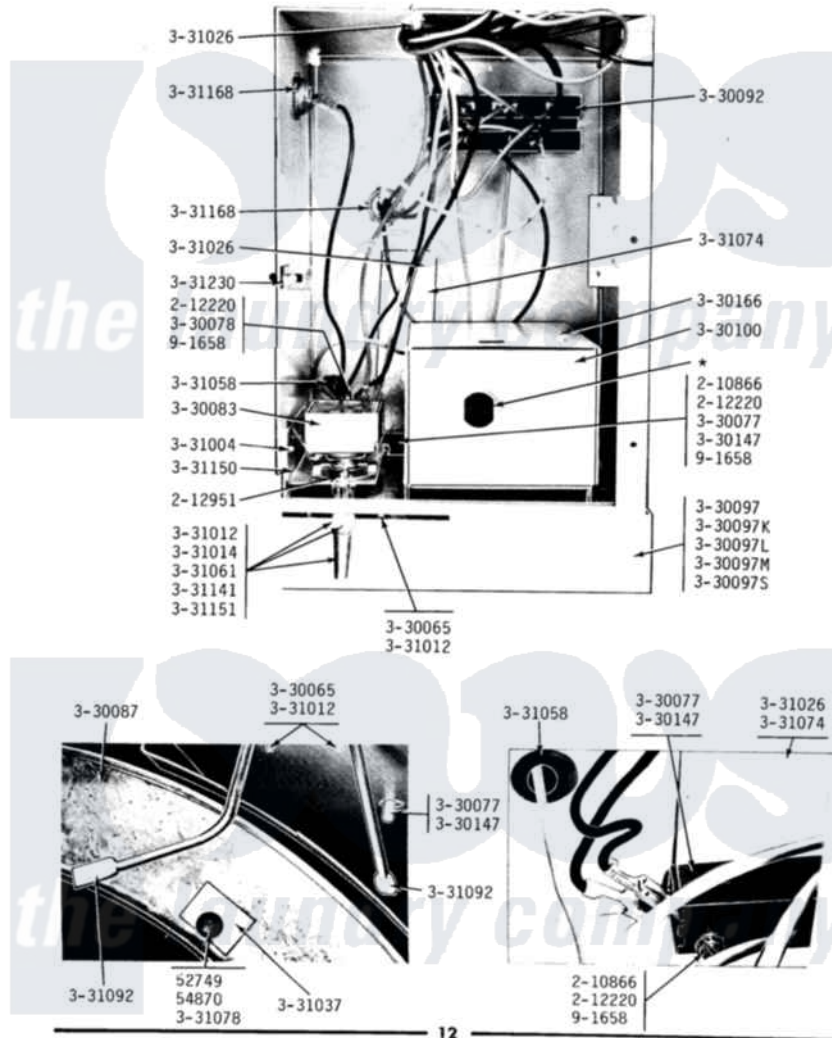

Maytag [Residential Maytag DG31CA Dryer Parts](#) Parts Diagram 06 - DOOR SWITCH, TEMP CNTRL, & TERMINAL BLOCK

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
001	Y052749	<a href="#">62739</a>		Nut, Lock
002	NLA		Not Available	LOCK WASHER, 3/8 X 1/16
003	<a href="#">210866</a>			Nut, Twin Speed
004	212220	<a href="#">213501</a>		Screw, No.6-20 X 1-1/8 Inch
005	<a href="#">212951</a>			Screw, No.6-32 X 1/4 Inch
006	NLA		Not Available	CLIP - ACTUATOR TO CABINET
007	<a href="#">Y330077</a>			Door Switch
008	<a href="#">Y330078</a>			Cool-Down Bypass Switch
009	Y330083		Not Available	CONTROL, TEMPERATURE
010	<a href="#">Y330087</a>			Drum Assembly Complete
011	<a href="#">Y330092</a>			Terminal Block
012	NLA		Not Available	FRONT PANEL-WHITE
013	NLA		Not Available	FRONT PANEL-ALMOND
014	NLA		Not Available	FRONT PANEL-HARVEST WHEAT

015	Y330100		Not Available	COIN BOX ASSEMBLY
016	<a href="#">Y330147</a>			Part Not Used
017	NLA		Not Available	VAULT ASSEMBLY
018	NLA		Not Available	SCREW - BRACKET TO VAULT
019	331012	<a href="#">400022-1</a>		Screw
020	331014	<a href="#">8281196</a>		Screw
021	331026	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
022	NLA		Not Available	SQUARE WASHER FOR DRUM ROD
023	<a href="#">331058</a>			Grommet-Temp. Control Tubin
024	<a href="#">331061</a>			Knob For Temperature Contro
025	NLA		Not Available	MOUNTING PLATE-DOOR SWITCH
026	NLA		Not Available	DRUM ROD
027	NLA		Not Available	ACTUATOR FOR DOOR SWITCH
028	NLA		Not Available	SCREW-TEMP CONTROL LEVER
029	NLA		Not Available	BRACKET-TEMPERATURE CONTROL
030	<a href="#">331151</a>			Lever-Temperature Control
031	NLA		Not Available	NUT FOR CONDUIT
032	<a href="#">331230</a>			Clip
033	NLA		Not Available	TWIN FASTENER WITH SCREWS

