


Maytag LA712 04 - CONTROL PANEL (A712)

MODEL A712 CONTROL PANEL

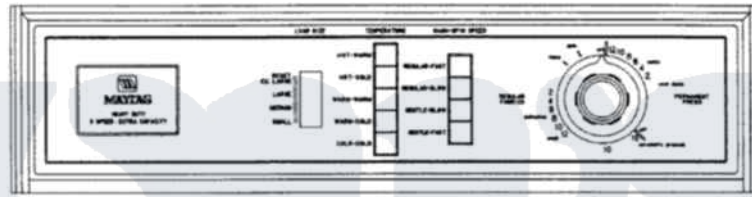


A712



2-15211
Button for the
2-6218 and 2-6219
switches

the laundry company®

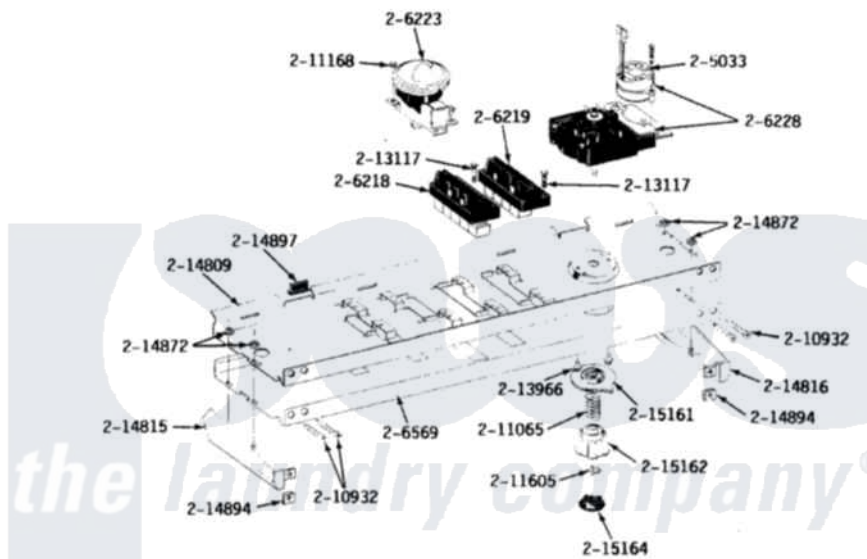

Maytag [Residential Maytag LA712 Washer Parts](#) Parts Diagram 04 - CONTROL PANEL (A712)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	205033	22205033		Motor- Tim
2	206218		Not Available	WATER TEMPERATURE SWITCH---NA
3	206219		Not Available	SPEED CONTROL SWITCH
4	206223	22206223		Switch- Wa
5	206228			Timer
6	206569		Not Available	CONTROL PANEL
7	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
8	211065			Spring, Index Wheel
9	211168	W10139210		Screw, 8-18 X 5/16
10	211605			Bezel, Timer Dial
11	213117	67006908		Screw, Ice Rack
12	213966	3400014		Screw
13	214809			Back Up Plate
14	214815			End Cap F/Control Panel-LH
15	214816			End Cap F/Control Panel-RH

the laundry company®

16	214872		Palnut, End Cap Note: Nut, Lamp Holder
17	214894		Fastener, End Cap
18	214897		Pad, Control Panel
19	215161	22001571	Bezel, Timer Dial
20	215162		Timer Knob
21	215164	Not Available	CAP FOR KNOB

