


Maytag LSE7806ADE 07 - FRONT PANEL & CONTROL PANEL

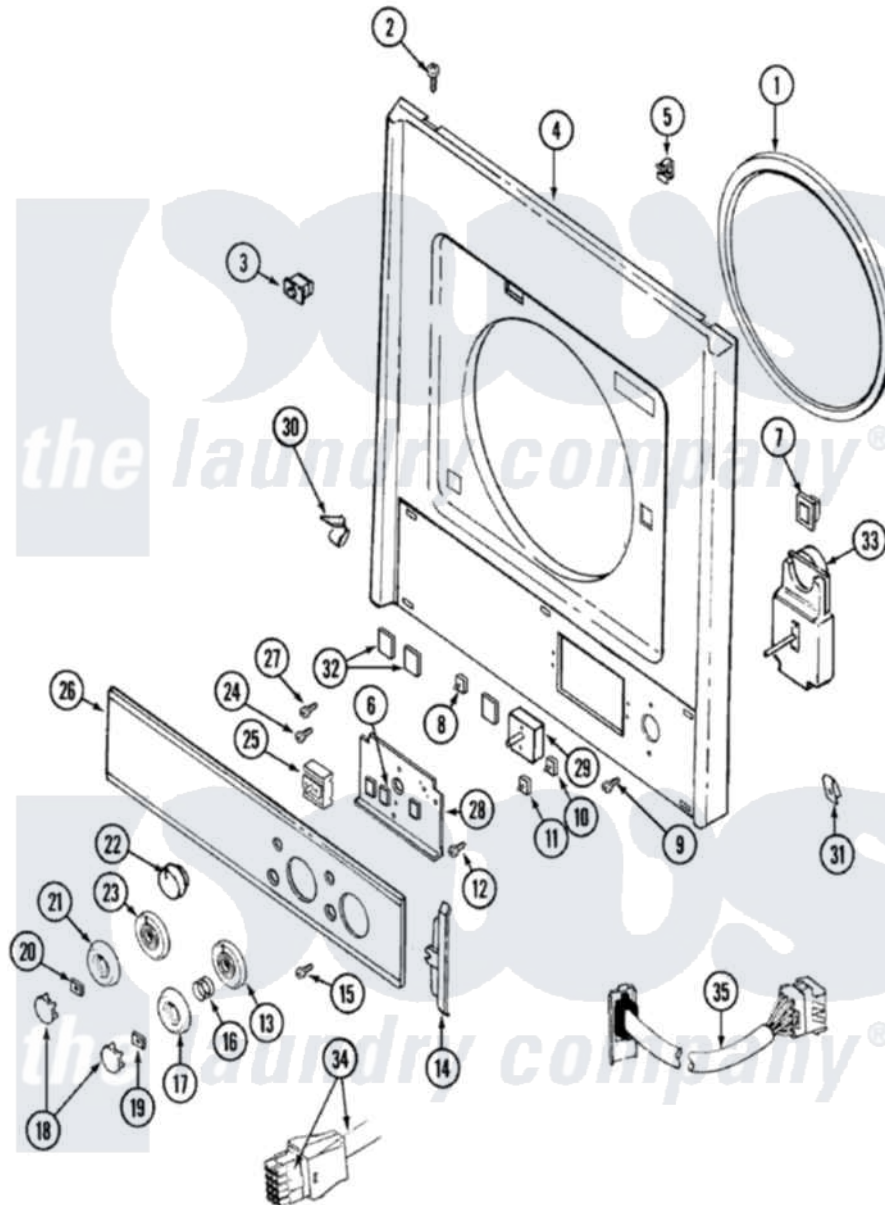

Maytag Residential Maytag LSE7806ADE Stacked Washer and Dryer Parts Parts Diagram 07 - FRONT PANEL & CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	314286			Seal For Front Panel
2	212277			Screw, No.8 X 1/2 Inch
3	33001509	W10169313		Switch-Dor
4	33001486	98008544		Screw
"	33001191			Panel, Front
5	Y310376			Clip, Door Switch Harness
6	315287			Bumper Small
7	Y304578	LA-1003		Door Catch Kit
8	308017			Switch, Dryer Temperature
9	216042	22001627		Screw
10	22001923			Switch, Water Temperature
11	22001188			Switch, Rotary
12	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
13	22001925			Dial, Washer Timer
14	315423			End Cap, Control Panel

15	211000		SCREW, BRAKE DRUM (HEX HEAD)
16	211065		Spring, Index Wheel
17	22001198	Not Available	KNOB, TIMER (WHT)
18	22001446		Cap, Knob
19	211605		Bezel, Timer Dial
20	312273		Nut, Control Knob
21	33001255		Knob, Timer
22	Y308453	22001663	Knob, Selector Switch
23	22001926	Not Available	DIAL, DRYER TIMER (WHT)
24	315317	488234	Screw 8-32 X 1/4
25	Y308449	Y308025	Switch, Push To Start
26	22001927		Panel, Control
27	215952		Screw
28	315237		Bracket For Switch And Timer
29	33001034		Timer, Dryer
30	314482		Fastener, Spring
31	33001292	488660	Nut, Speed
32	315286		Bumper Large
33	22002228	Not Available	BAG, TIMER
"	22001931		Spacer, Timer
"	22001932		Retainer, Wire
"	22001924		Timer, Washer
34	22001426	Not Available	WIRE HARNESS (UPR. CANADA)
"	33001553		Harness, Wire
35	22001584		Harness, Wire
"	22004233		Wire Harness
"	22004234		Wire Harness

the laundry company[®]

lows
the laundry company[®]