


Maytag MLG23PRFXW 11 - WIRING INFORMATION(GAS)

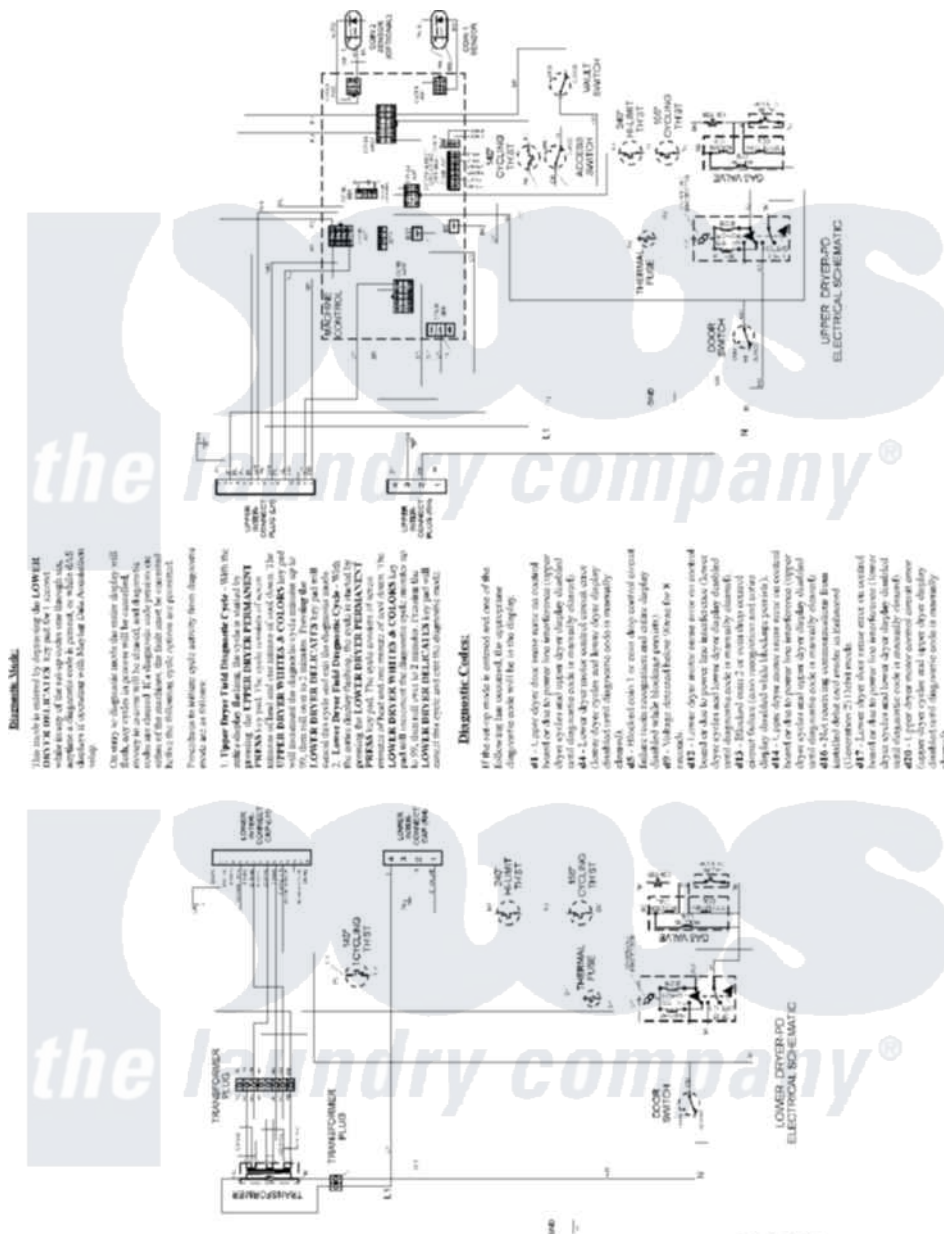

Blowdown Mode:

This mode is entered by depressing the LOWER DRYER DELICATE key pad for 1 second. While blowing of the air to the clothes through the blower is achieved with Maytag One Advantage wiring.

On 400 to diagnose mode the motor display will blink, any cycles in progress will be cancelled. The motor will run for 10 minutes. After 10 minutes the mode will exit. To diagnose mode press OK. After the mode exits, the fault must be corrected. Reset the electronic cycle system air pressure mode as follows:

1. Upper Dryer Field Diagnostic Cycle - With the motor display flashing, the cycle is entered by pressing the DELICATE key pad for 1 second. The motor will run for 10 minutes. The motor display will blink. After 10 minutes the mode will exit. To diagnose mode press OK. After the mode exits, the fault must be corrected. Reset the electronic cycle system air pressure mode as follows:
2. Lower Dryer Field Diagnostic Cycle - With the motor display flashing, the cycle is entered by pressing the DELICATE key pad for 1 second. The motor will run for 10 minutes. The motor display will blink. After 10 minutes the mode will exit. To diagnose mode press OK. After the mode exits, the fault must be corrected. Reset the electronic cycle system air pressure mode as follows:

Diagnostic Codes:

- If the set up mode is entered and one of the following has occurred, the appropriate diagnostic code will be in the display.
- #1 - Upper dryer does not spin on cooked dryer cycles and upper dryer display should blink. Diagnostic code is manually cleared.
 - #2 - Lower dryer does not spin on cooked dryer cycles and lower dryer display should blink. Diagnostic code is manually cleared.
 - #3 - Upper dryer motor sense error on cooked dryer cycles and upper dryer display should blink. Diagnostic code is manually cleared.
 - #4 - Lower dryer motor sense error on cooked dryer cycles and lower dryer display should blink. Diagnostic code is manually cleared.
 - #5 - Upper dryer motor sense error on vented dryer cycles and upper dryer display should blink. Diagnostic code is manually cleared.
 - #6 - Lower dryer motor sense error on vented dryer cycles and lower dryer display should blink. Diagnostic code is manually cleared.
 - #7 - Upper dryer motor sense error on vented dryer cycles and upper dryer display should blink. Diagnostic code is manually cleared.
 - #8 - Lower dryer motor sense error on vented dryer cycles and lower dryer display should blink. Diagnostic code is manually cleared.

6 3720400

Maytag Residential Maytag MLG23PRFXW Dryer Parts Parts Diagram 11 - WIRING INFORMATION(GAS)
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|----------------------|-------------|---------------|--------------------|
| 001 | NLA | | Not Available | WIRING INFORMATION |

