


Norge DEM204HC 01 - CONTROL PANEL (ORIG. REV. A)

SECTION: BACKGUARD
 MODEL: DEM204C

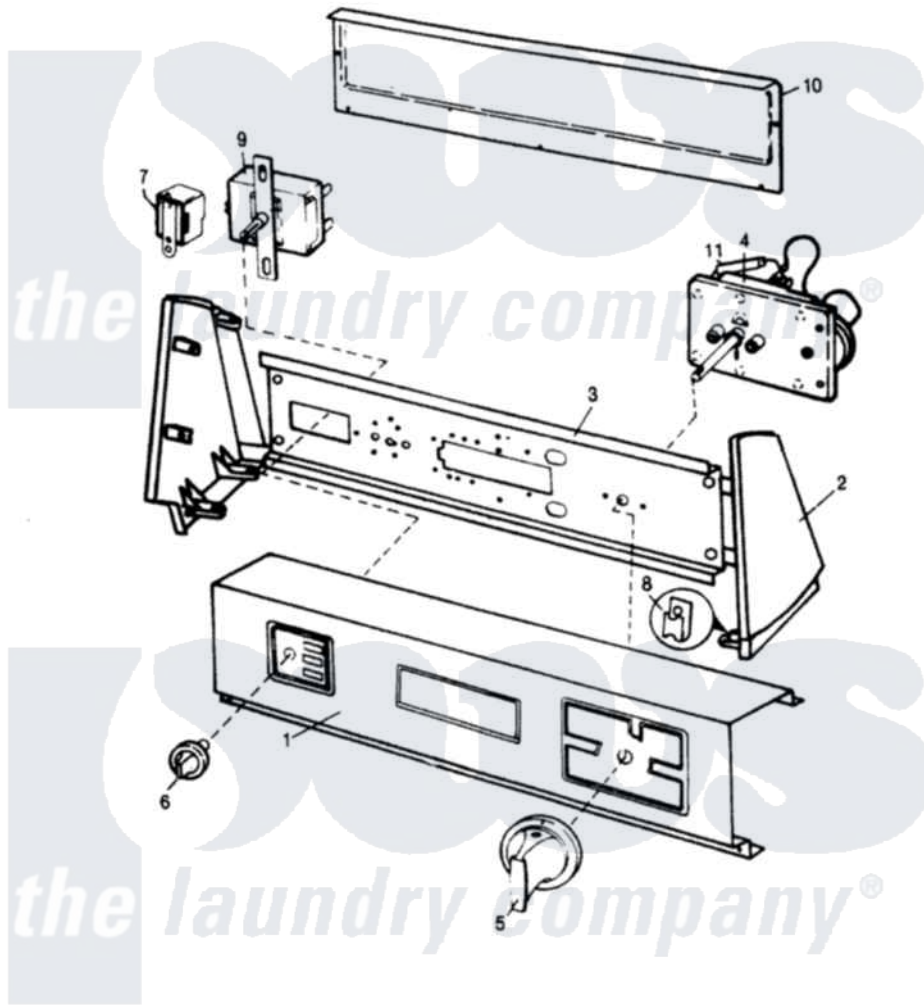

Issue Date: 6/90

Norge [Residential Norge DEM204HC Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL (ORIG. REV. A)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	53-1283		Not Available	CONTROL PANEL
2	35-2488	21001452		Cap- End
"	25-7760			Screw
"	35-2487	21001451		Cap- End
"	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
3	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7702			Speedclip, End Cap To Control Panel
"	53-1678		Not Available	CONTROL SHIELD
4	25-0088	489483		Screw 10-32 X 1/2
"	53-1362			Timer
"	63-5685	63-5613		Timer

"	25-7435	33002917	Screw, No.10-16
"	53-1816		Not Available
5	25-6044		TIMER
"	53-1530	31001219	Set Screw
6	35-2186		Not Available
7	25-3092	90767	Knob Ski
"	63-6731	53-1639	KNOB, SELECTOR
8	25-7702		Screw, 8A X 3/8 HeX Washer Head Tapping
9	25-3092	90767	Buzzer Assembly
"	53-1263		Speedclip, End Cap To Control Panel
10	25-7435	33002917	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7852		Rotary Switch
"	25-7851		Screw, No.10-16
"	34-9487		Not Available
"	35-2688	21001460	Speedclip, Rr Shld To End Cap
"	25-7697	25-2219	Speedclip, End Cap To Top
"	25-3092	90767	PLATE, REINFORCEMENT
11	25-7712		Not Available
"	33-8541		Not Available
"	63-6743	31001484	Shield, Rear
"	35-0385		Screw
"	53-1296		Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-6621		Not Available
12	53-1448		Not Available
			SCREW
			SWITCH PAD
			Resistor Assembly
			Pushbutton
			Switch
			BRACKET, SWITCH
			MANUAL, USE & CARE

the laundry company[®]

WWS
the laundry company[®]