


Whirlpool 3RLSQ8000JQ4 03 - AGITATOR, BASKET AND TUB PARTS

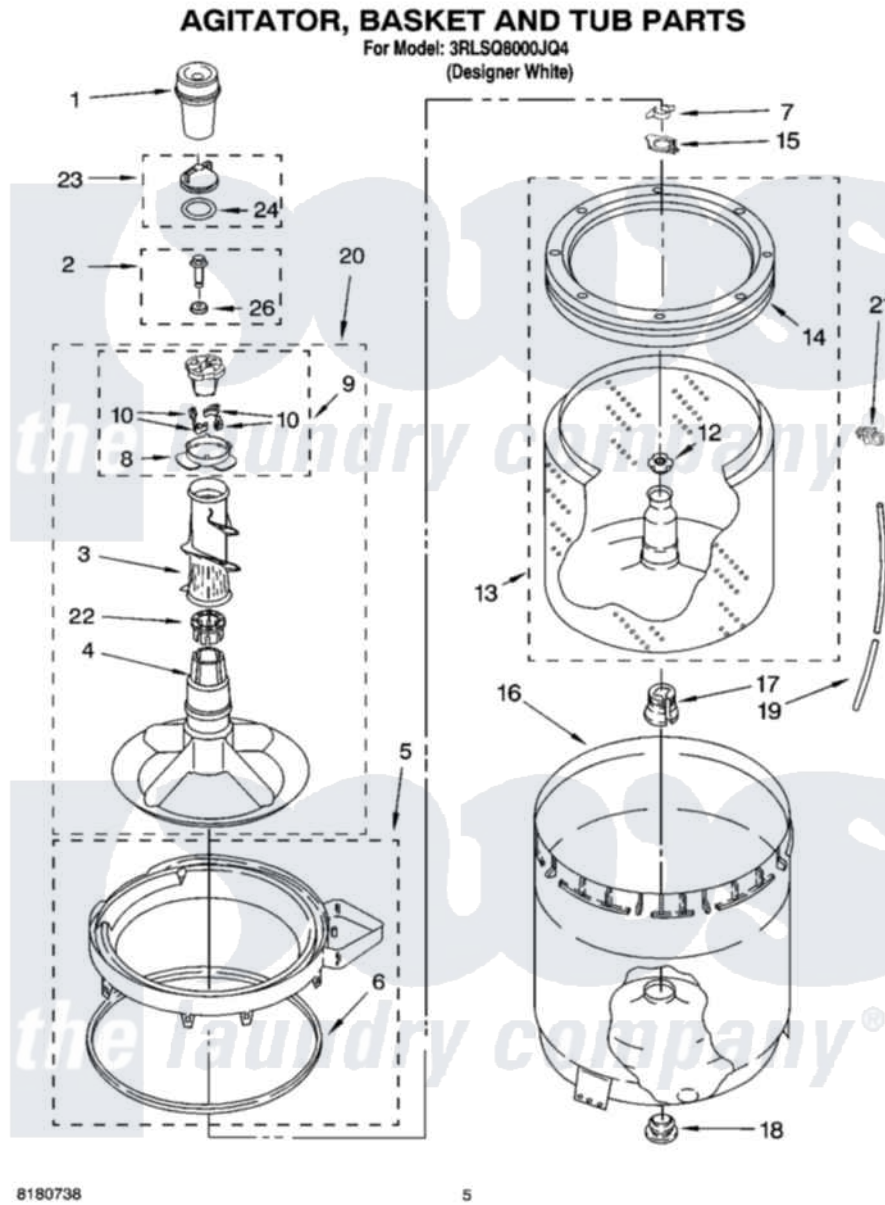

8180738

5

Whirlpool Residential Whirlpool 3RLSQ8000JQ4 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	63580			Dispenser, Fabric Softener
2	358237			Screw And Washer
3	3363003			Mover, Clothes
4	3951632			Agitator
5	8528150	W10445870		Ring-Tub
6	3976308			Gasket, Tub Ring
7	3354845			Clip, Agitator
8	3952374			Bearing, Driven Cam
9	3951682	285809		Cam-Agitator
10	3366877	80040		Dog-Agitator
12	21366			Nut, Spanner
13	8526017	W10389329		Clothes Container, Assembly
14	8519788	387240		Ring, Balance
15	8543666			Washer, Agitator
16	63849			Strain Relief, Power Cord
17	389140			Tub Block, Basket Drive

18	383727		Gasket, Centerpodt
19	3347780	353244	Hose, Pressure Switch
20	3951744		Agitator Assembly
21	2219077		Clip, Pressure Switch Hose
22	3951608		Spacer, Thrust
23	3354733	W10074580	Cap, Barrier
24	3348855	W10072840	Fabric Softener
26	3949550		Washer

