


Whirlpool 7MWG87640SW0 01 - TOP AND CONSOLE PARTS

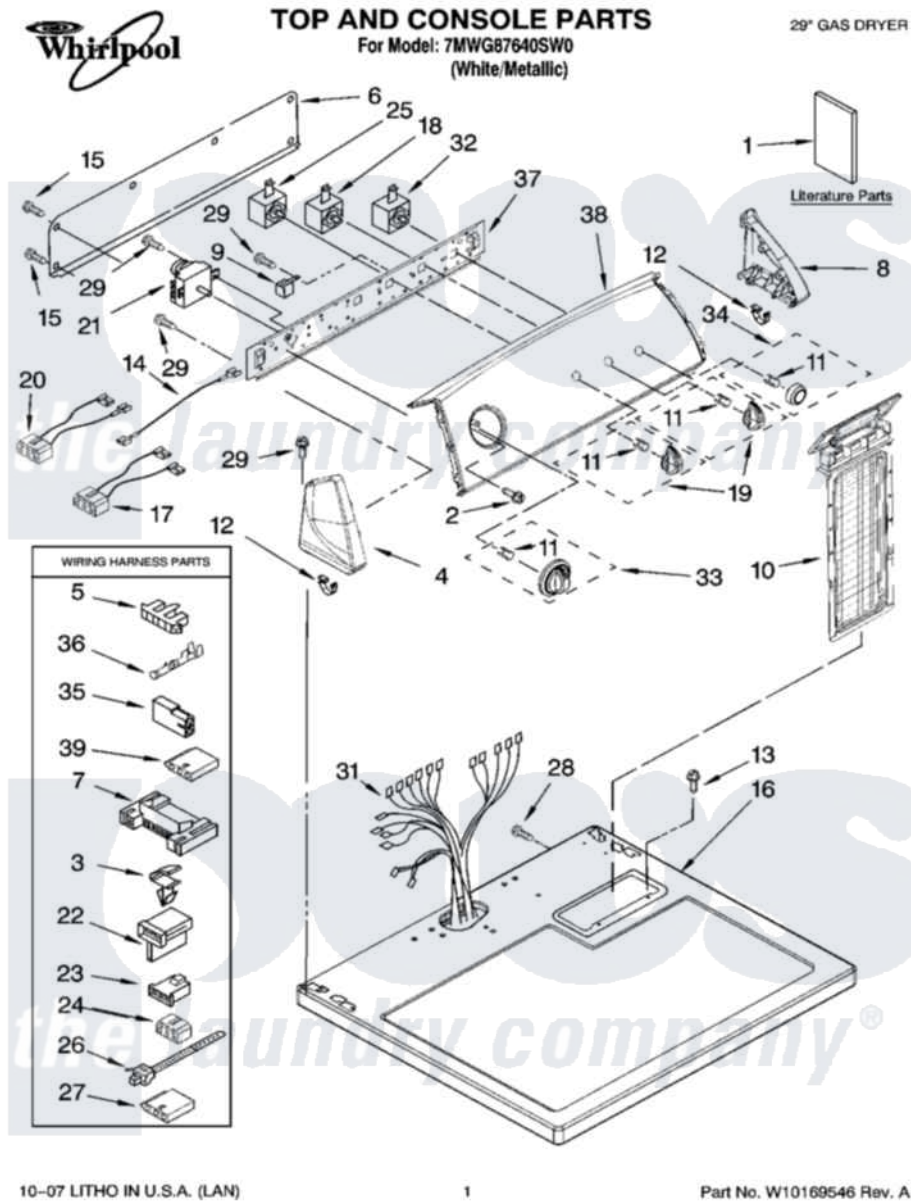

10-07 LITHO IN U.S.A. (LAN)

1

Part No. W10169546 Rev. A

Whirlpool [Residential Whirlpool 7MWG87640SW0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8564241		Not Available	Instructions, Installation
"	8579961		Not Available	Sheet, Cycle Feature
"	8565897		Not Available	Use And Care Guide
"	8576811		Not Available	Wiring Diagram
2	8533951	3400859		Screw, Grounding
3	3394427			Clip-Harness
4	8565957			Cap, End
5	3397269			Connector, Timer
6	8274261			Do-It-Yourself Repair Manuals
7	3395683			Receptacle, Multi-Terminal
8	8565954			Cap, End
9	694419			Mini-Buzzer
10	8557857			Screen, Lint
11	8536939			Clip, Knob
12	8312709			Clip-Console
13	688983	487240		Screw, For Mtg. Service Capacitor

14	3401684		Jumper, Wire
15	693995		Screw, Hex Head
16	8559800	8563663	Top
17	3396029	8539893	Wire, Jumper
18	3405156		Switch, Rotary
19	8565944		Knob, Control
20	3397695		Wire, Jumper
21	8299766		Timer Assembly
22	3403499		Connector, 2-Position
23	3403498		Connector, 3-Position
24	3347243		Block, Disconnect
25	3399639		Switch, Rotary Temperature
26	3391249		Cable Tie, Push Mount
27	3401144		Connector
28	359625	487240	Screw, For Mtg. Service Capacitor
29	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
31	8299879		Harness, Wiring
32	3398095		Switch, Push-To-Start
33	8566061		Timer Knob Assembly
34	8566073		Knob, Push-To-Start
35	717252		Receptacle, Terminal
36	94614		Terminal
37	8566052		Bracket, Console
38	W10112102		Panel, Control
39	3936144		Do-It-Yourself Repair Manuals

the laundry company[®]

the laundry company[®]