


Whirlpool IGD4400VQ1 01 - TOP AND CONSOLE PARTS

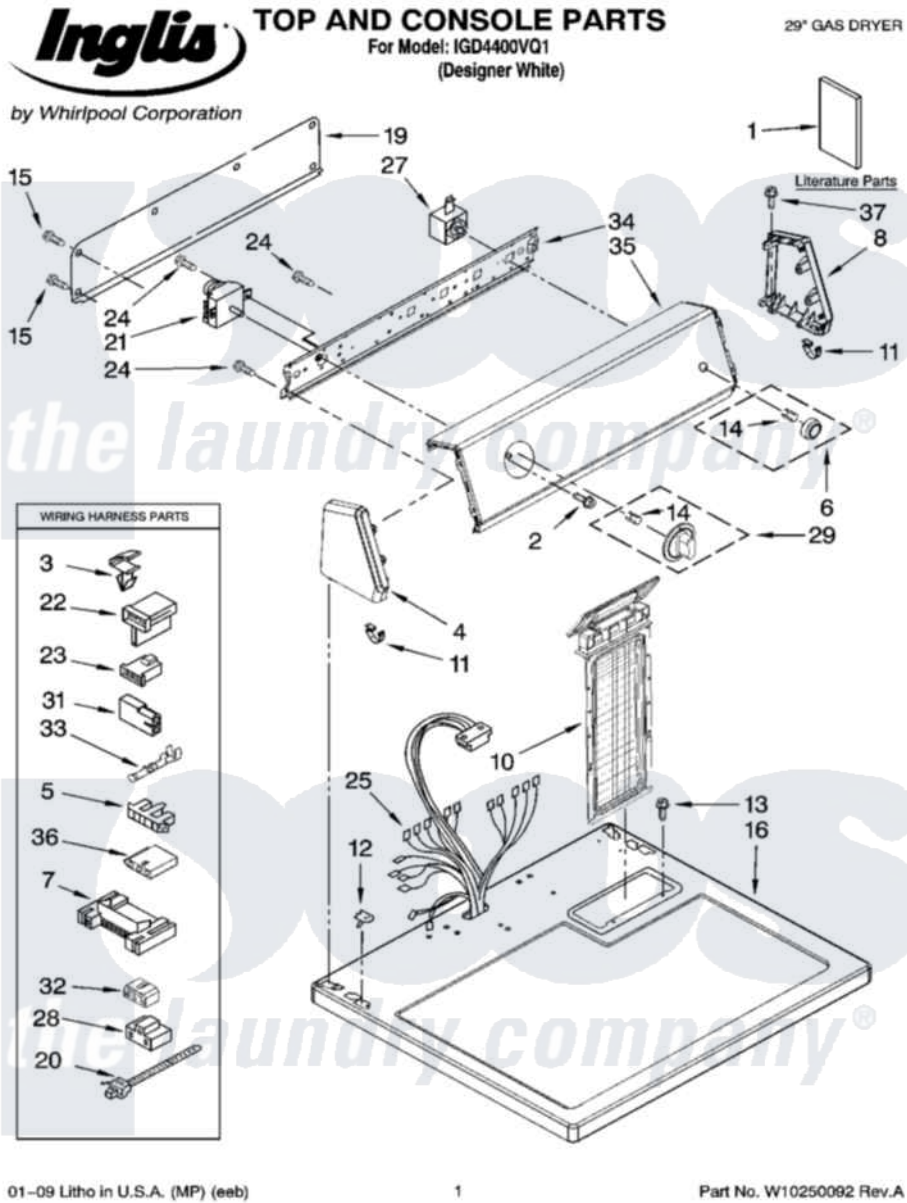

01-09 Litho in U.S.A. (MP) (eeb)

1

Part No. W10250092 Rev.A

Whirlpool Residential Whirlpool IGD4400VQ1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8562589		Not Available	Instructions, Installation
"	W10042990		Not Available	Sheet, Cycle Feature
"	W10151579		Not Available	Guide, Use & Care
"	W10185979			Wiring Diagram Cycle Feature
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
2	8533951	3400859		Screw, Grounding
3	3394427			Clip-Harness
4	8274437	279960		Endcap
5	3397269			Connector, Timer
6	8538959			Knob, Push-To-Start
7	3395683			Receptacle, Multi-Terminal
8	8274434	279960		Endcap
10	8558463			HANdle And Lint Screen Assembly
11	688805			Clip, Spring Knob

12	357213		Nut, Push-In
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8536939		Clip, Knob
15	693995		Screw, Hex Head
16	8557930	8563985	Top
19	8274261		Do-It-Yourself Repair Manuals
20	3391249		Cable Tie, Push Mount
21	W10185971		Timer Assembly, 60 Hz
22	3403499		Connector, 2-Postion
23	3403498		Connector, 3-Position
24	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
25	W10186074		Harness, Wiring
27	3977456		Switch, Push-To-Start
28	3401144		Connector
29	8538953		Timer Knob Assembly
31	717252		Receptacle, Terminal
32	3347243		Block, Disconnect
33	94614		Terminal
34	8271418		Bracket, Control
35	W10207807		Panel, Control
36	3936144		Do-It-Yourself Repair Manuals
37	388326		Screw, 8-18 X 1.25

