


Whirlpool IJ43001 02 - CONTROLS AND REAR PANEL PARTS

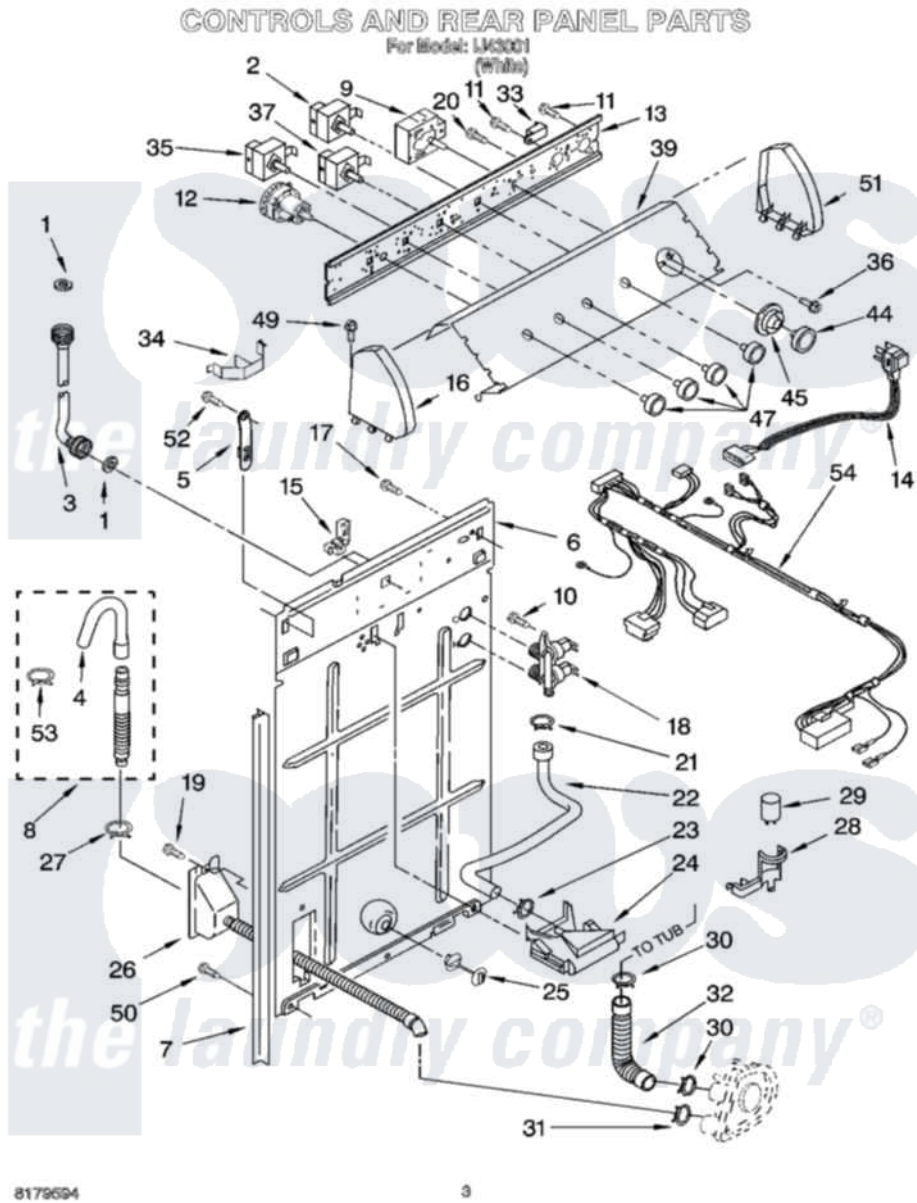

8179694

3

Whirlpool Residential Whirlpool IJ43001 Washer Parts Parts Diagram 02 - CONTROLS AND REAR PANEL PARTS
[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3976300	16123		Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
2	3949187	W10168262		Switch, Rotary
3	3949374	89503		Hose-Inlet
"	3949375	89503		Hose-Inlet
4	3357027			Nozzle, Hose Drain
5	8318255	8568314		Strap, Console
6	8528062	3357978		Panel, Rear
7	62747			Pad, Rear Panel
8	3951609	285664		Hose
"	661577	285666		Hose
"	3357090	285702		Hose
9	3954388			Timer, Control
10	9740848			Screw, Mixing Valve Mounting
11	90767			Screw, 8A X 3/8 HeX Washer Head Tapping

12	3366846	W10335056	Switch-WL
13	3948608		Bracket, Control
14	3948063	285800	Cord-Power
15	3952821	285777	Relief-Str
16	8271365	279962	Endcap
17	3351614		Screw, Gearcase Cover Mounting
18	3952164	285805	Valve-Inlet
19	90864	3351614	Screw, Gearcase Cover Mounting
20	3400073		Screw, Ground
21	370451	596669	Clamp, Manifold
22	3357328		Hose, Vacuum Break
23	371503	596669	Clamp, Manifold
24	3347034		Break, Vacuum
25	8519200		Support, Rear Panel
26	3361805	W10358149	Drain Hose Assembly
27	3366912	356138	Clamp, Hose
28	8318201	8318046	Clip, Capacitor
29	661606	8572717	Capacitor, Motor Start
30	3363366	616099	Clamp
31	660628	285655	Clamp, Hose
32	3951449	285871	Hose
33	694419		Mini-Buzzer
34	8055003		Clip, Harness And Pressure Switch
35	661614		Switch, Water Temperature
36	3400818		Screw, Timer Mounting
37	661613	W10168257	Switch, Rotary
39	3954231	Not Available	Panel, Console
44	8271345	3957824	Knob, Timer
45	8271351	3957849	Dial, Timer
47	8271339	3957799	Knob, Control
49	388326		Screw, 8-18 X 1.25
50	62863	3390631	Screw, 10-16 X 3/8
51	8271359	279962	Endcap
52	3390647	488729	Screw
53	3366913	3357331	Clamp, Drain
54	3955028		Wiring, Harness

the laundry company[®]