


Whirlpool IS41000 03 - AGITATOR, BASKET AND TUB PARTS

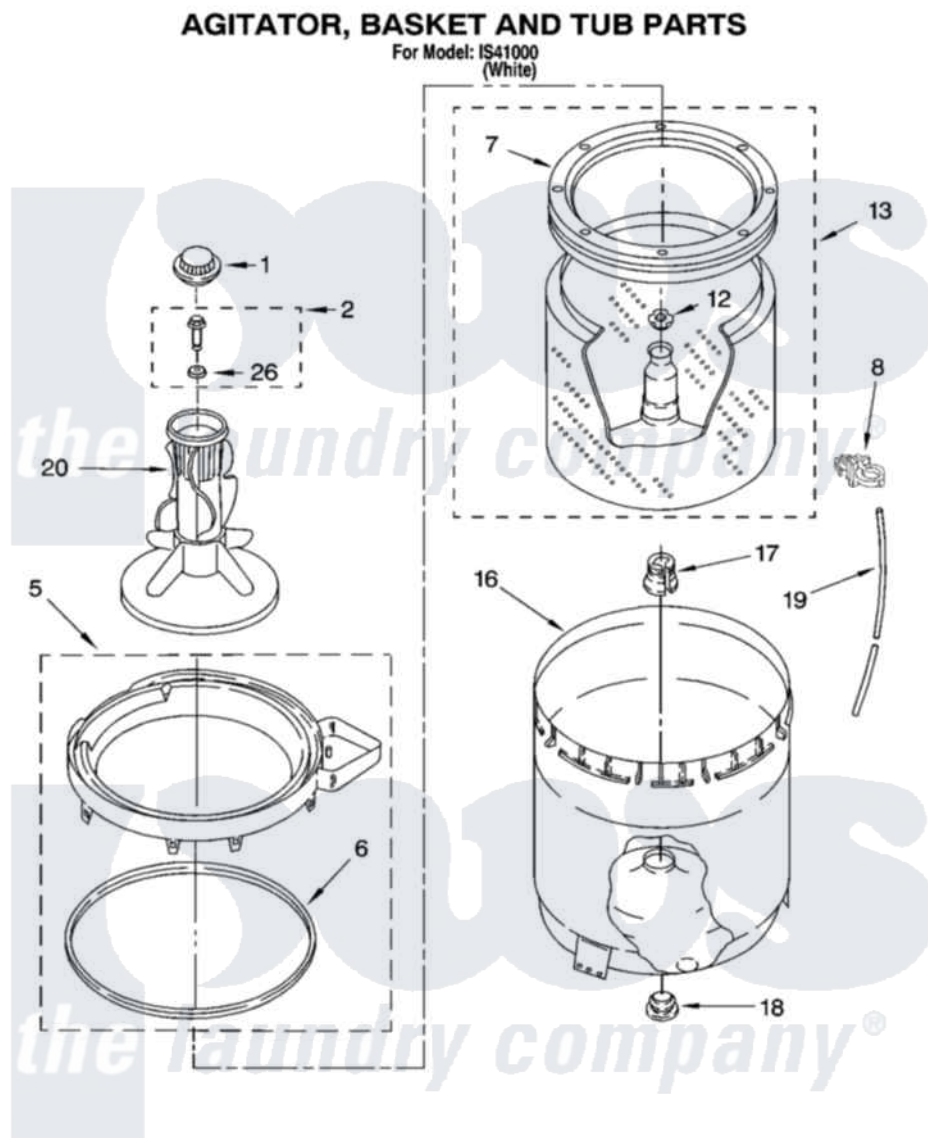

8181407

5

Whirlpool [Residential Whirlpool IS41000 Washer Parts](#) Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3355758			Cap, Agitator
2	358237			Screw And Washer
5	8528150	W10445870		Ring-Tub
6	3976308			Gasket, Tub Ring
7	8519788	387240		Ring, Balance
8	2219077			Clip, Pressure Switch Hose
12	21366			Nut, Spanner
13	8526016	W10389328		Clothes Container, Assembly
16	63849			Strain Relief, Power Cord
17	389140			Tub Block, Basket Drive
18	383727			Gasket, Centerpod
19	3347780	353244		Hose, Pressure Switch
20	63235			Agitator Assembly
26	3949550			Washer