


Whirlpool LSR6334LQ1 02 - CONTROLS AND REAR PANEL PARTS

CONTROLS AND REAR PANEL PARTS

For Model: LSR6334LQ1
(Designer White)

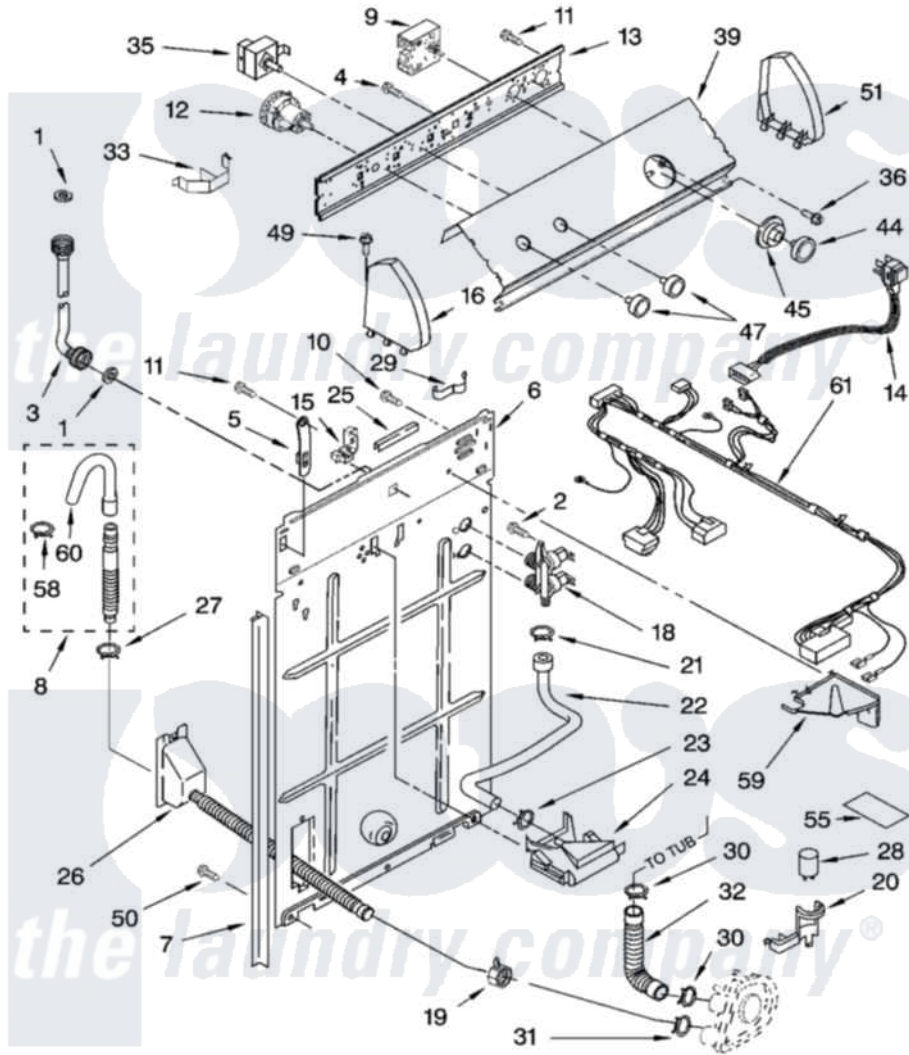

8180203

3

Whirlpool [Residential Whirlpool LSR6334LQ1 Washer Parts](#) Parts Diagram 02 - CONTROLS AND REAR PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3976300	16123		Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
2	9740848			Screw, Mixing Valve Mounting
3	3949374	89503		Hose-Inlet
"	3949375	89503		Hose-Inlet
4	3400073			Screw, Ground
5	8318255	8568314		Strap, Console
6	3357978			Panel, Rear
7	62747			Pad, Rear Panel
8	3951609	285664		Hose
"	661577	285666		Hose
"	3357090	285702		Hose
9	3955489			Timer, Control
10	3351614			Screw, Gearcase Cover Mounting
11	90767			Screw, 8A X 3/8 HeX Washer Head Tapping

12	3366847	W10337780	Switch-WL
13	3948608		Bracket, Control
14	661661	285800	Cord-Power
15	3952821	285777	Relief-Str
16	8271365	279962	Endcap
18	3952164	285805	Valve-Inlet
19	3976395		Restraint, Hose
20	8318201	8318046	Clip, Capacitor
21	301958	596669	Clamp, Manifold
22	8541607	3357328	Hose, Vacuum Break
23	370450	596669	Clamp, Manifold
24	387606	3360977	Break-Vac
25	303294	3367669	Protector, Edge
26	8317940	W10358149	Drain Hose Assembly
27	3366912	356138	Clamp, Hose
28	661606	8572717	Capacitor, Motor Start
29	3347812	8528351	Clip
30	3363366	616099	Clamp
31	8317496	285655	Clamp, Hose
32	3951449	285871	Hose
33	8055003		Clip, Harness And Pressure Switch
35	661612	W10168256	Switch, Water Temperature
36	3400818		Screw, Timer Mounting
39	3955402		Panel, Console
44	8271345	3957824	Knob, Timer
45	8271351	3957849	Dial, Timer
47	8271339	3957799	Knob, Control
49	388326		Screw, 8-18 X 1.25
50	62863	3390631	Screw, 10-16 X 3/8
51	8271359	279962	Endcap
55	3976286		Shield, Capacitor
58	3366913	3357331	Clamp, Drain
59	8539874		Shield, Suds
60	3357027		Nozzle, Hose Drain
61	3955491		Wiring Harness

