


Whirlpool LXR7244PT3 03 - AGITATOR, BASKET AND TUB PARTS

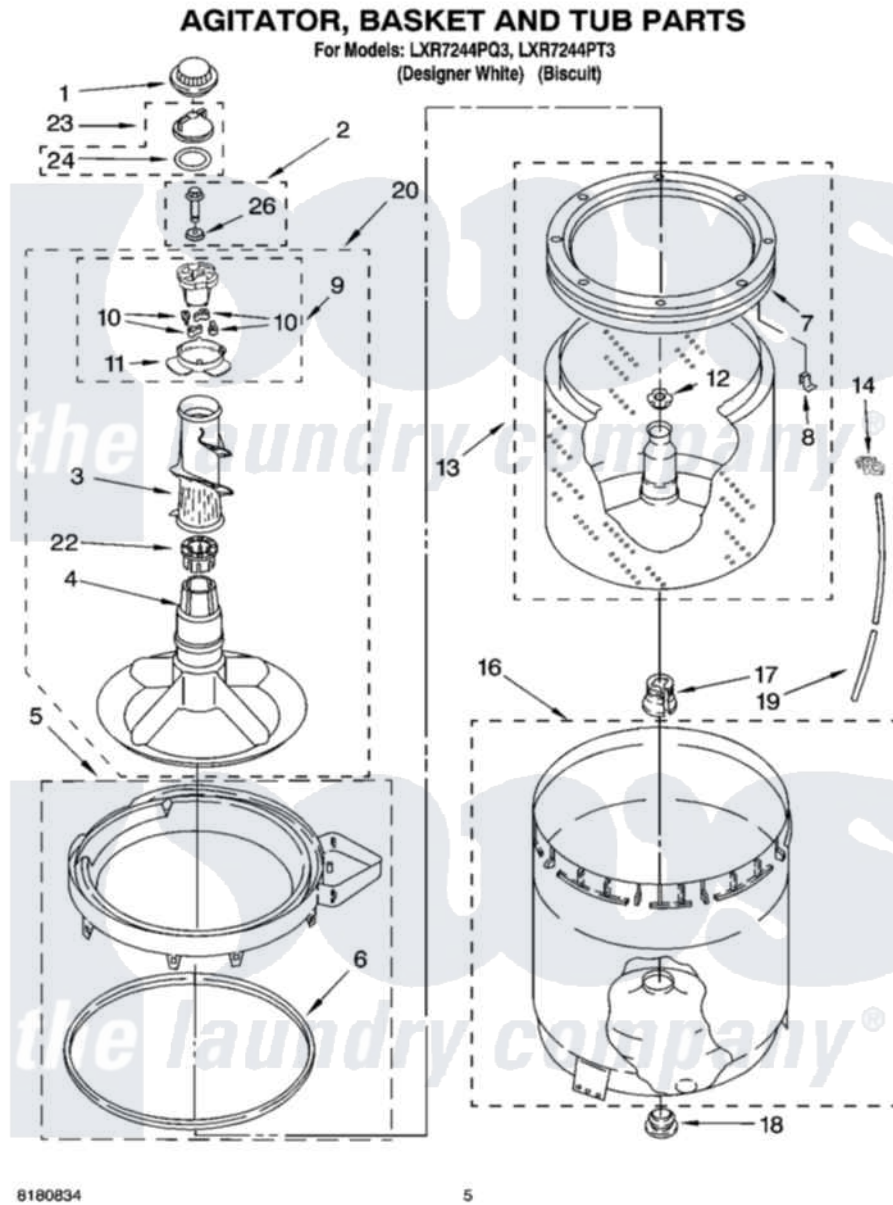

Whirlpool Residential Whirlpool LXR7244PT3 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3355758			Cap, Agitator
2	358237			Screw And Washer
3	3349019			Auger, Agitator
4	3350830			Agitator
5	3360611			Tub Ring And Gasket Assembly
6	3359586			Gasket, Tub Ring
7	3956205			Balance Ring
8	8519815			Clip, Balance Ring
9	3363663	285811		Cam-Agitator
10	3366877	80040		Dog-Agitator
11	3363661			Bearing, Driven Cam
12	21366			Nut, Spanner
13	3956206	3956207		Basket And Balance Ring
14	2219077			Clip, Pressure Switch Hose
16	63125			Tub
17	389140			Tub Block, Basket Drive

18	383727		Gasket, Centerpodt
19	3347780	353244	Hose, Pressure Switch
20	3350829	285574	Large Ring
22	3350389	285587	Washer
23	3354733	W10074580	Cap, Barrier
24	3348855	W10072840	Fabric Softener
26	3949550		Washer

