


Whirlpool RAB2121PW2 02 - CONTROL AND REAR PANEL PARTS

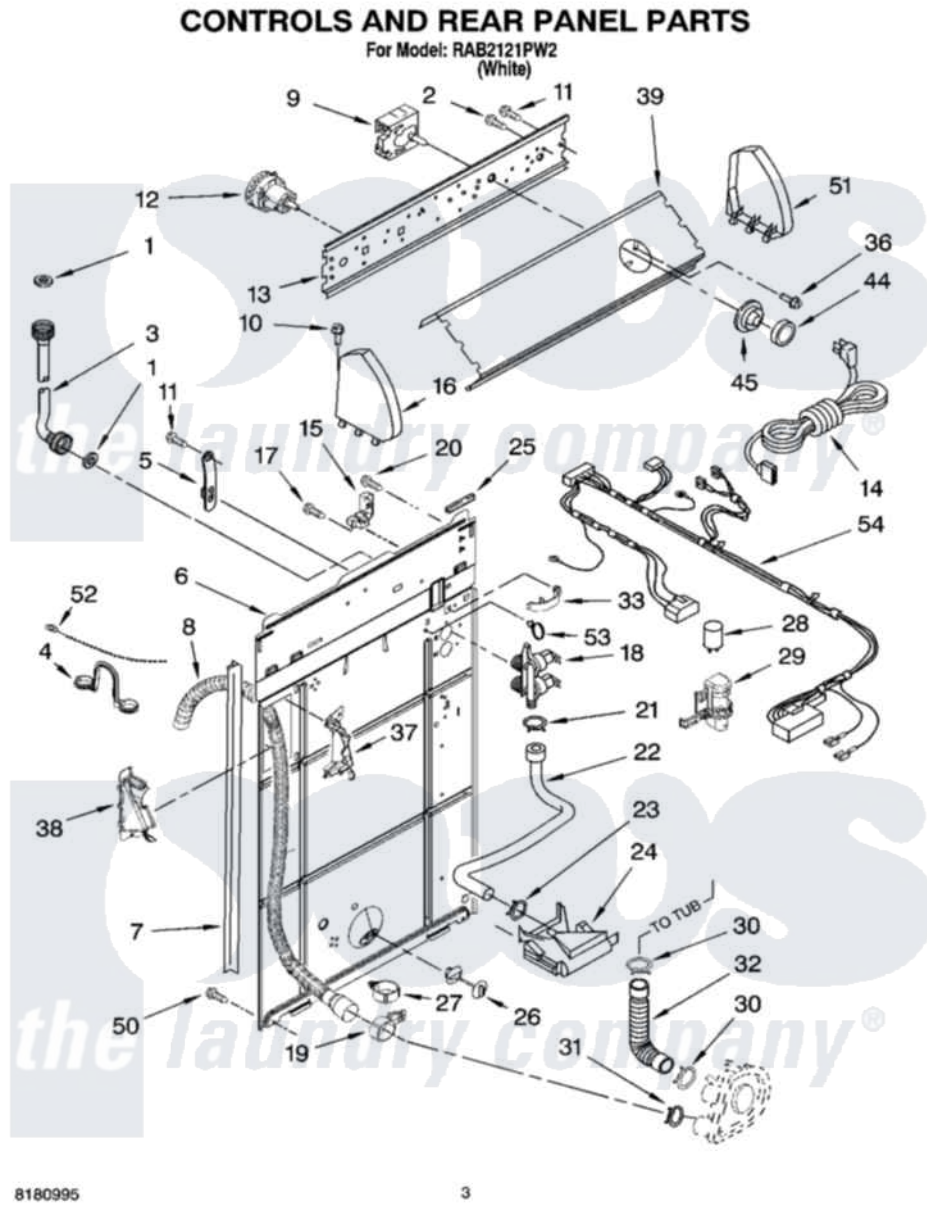

Whirlpool Residential Whirlpool RAB2121PW2 Washer Parts Parts Diagram 02 - CONTROL AND REAR PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3976300	16123		Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
2	3400073			Screw, Ground
3	8571377	89503		Hose-Inlet
"	8571378	89503		Hose-Inlet
4	8541672	8577378		U-Bend, Drain Hose
5	8568314			Strap, Console
6	8541686			Panel, Rear
7	62747			Pad, Rear Panel
8	8559373	W10096921		Drain Hose Assembly
9	8546681			Timer, Control
10	388326			Screw, 8-18 X 1.25
11	90767			Screw, 8A X 3/8 HeX Washer Head Tapping
12	3366850	W10339316		Switch-WL
13	3948814			Bracket, Control

14	661661	285800	Cord-Power
15	8559349	285777	Relief-Str
16	8274438	279961	Endcap
17	9740848		Screw, Mixing Valve Mounting
18	3955673	285805	Valve-Inlet
19	8541668		Clamp, Hose
20	3351614		Screw, Gearcase Cover Mounting
21	301958	596669	Clamp, Manifold
22	8541607	3357328	Hose, Vacuum Break
23	370450	596669	Clamp, Manifold
24	3347034		Break, Vacuum
25	303294	3367669	Protector, Edge
26	8519200		Support, Rear Panel
27	8541667		Clamp, Hose
28	8318046		Clip, Capacitor
29	8572717		Capacitor, Motor Start
30	3363366	616099	Clamp
31	8317496	285655	Clamp, Hose
32	3951449	285871	Hose
33	3349557		Retainer, Harness
36	3400818		Screw, Timer Mounting
37	8541669		Bucket, Drain Hose
"	BLANK	Not Available	(Left Half)
38	8541658		Bucket, Drain Hose
"	BLANK	Not Available	(Right Half)
39	3956972		Panel, Console
44	3957823		Knob, Timer
45	3957843		Dial, Timer
50	62863	3390631	Screw, 10-16 X 3/8
51	8274435	279961	Endcap
52	3347868	W10339879	Tie, Cable
53	8559320		Restraint, Hose
54	3957027		Harness, Wiring
"	N/A	Not Available	FOLLOWING PARTS NOT ILLUSTRATED
"	3957361		Miscellaneous Parts Bag

