


# Whirlpool TEDX640PQ1 01 - TOP AND CONSOLE PARTS



## TOP AND CONSOLE PARTS

For Model: TEDX640PQ1  
(Designer White)

29" ELECTRIC  
DRYER

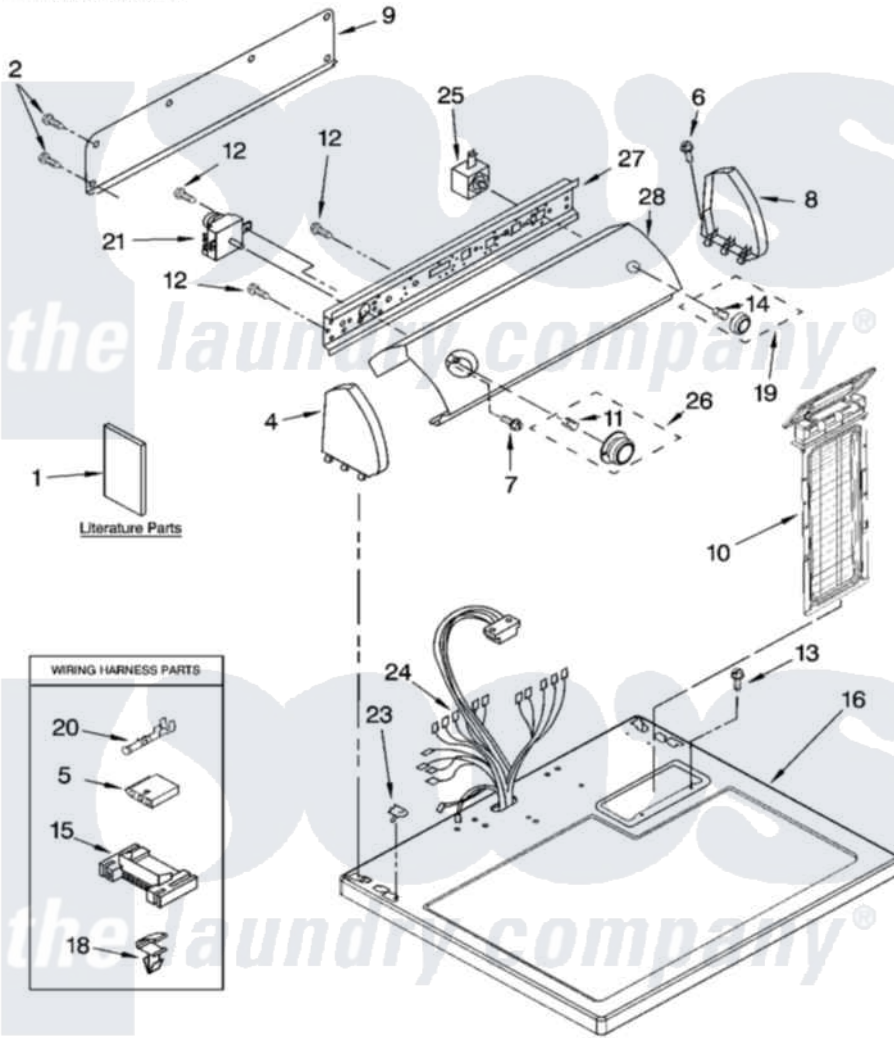

11-05 Litho in U.S.A. (LT)

1

Part No. 8180998

Whirlpool Residential Whirlpool TEDX640PQ1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8578193		Not Available	Guide, Use & Care
"	8577187		Not Available	Instructions, Installation
"	8533781		Not Available	Sheet, Cycle Feature
"	<a href="#">8528187</a>			Wiring Diagram
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	<a href="#">693995</a>			Screw, Hex Head
4	8274437	<a href="#">279960</a>		Endcap
5	<a href="#">3936144</a>			Do-It-Yourself Repair Manuals
6	<a href="#">388326</a>			Screw, 8-18 X 1.25
7	8533951	<a href="#">3400859</a>		Screw, Grounding
8	8274434	<a href="#">279960</a>		Endcap
9	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
10	<a href="#">8558467</a>			Screen, Lint

11	<a href="#">688805</a>		Clip, Spring Knob
12	8533971	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	<a href="#">8536939</a>		Clip, Knob
15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
16	8557930	<a href="#">8563985</a>	Top
18	<a href="#">3394427</a>		Clip-Harness
19	<a href="#">8557462</a>		Knob, Push-To-Start
20	<a href="#">94614</a>		Terminal
21	<a href="#">8299781</a>		Timer, 60 Hz
23	<a href="#">357213</a>		Nut, Push-In
24	8299867	<a href="#">W10450292</a>	Harness, Wiring
25	<a href="#">3977456</a>		Switch, Push-To-Start
26	<a href="#">8557456</a>		Timer Knob Assembly
27	<a href="#">8271418</a>		Bracket, Control
28	<a href="#">3977947</a>		Panel, Control

