


# Whirlpool TGDS840PQ1 01 - TOP AND CONSOLE PARTS

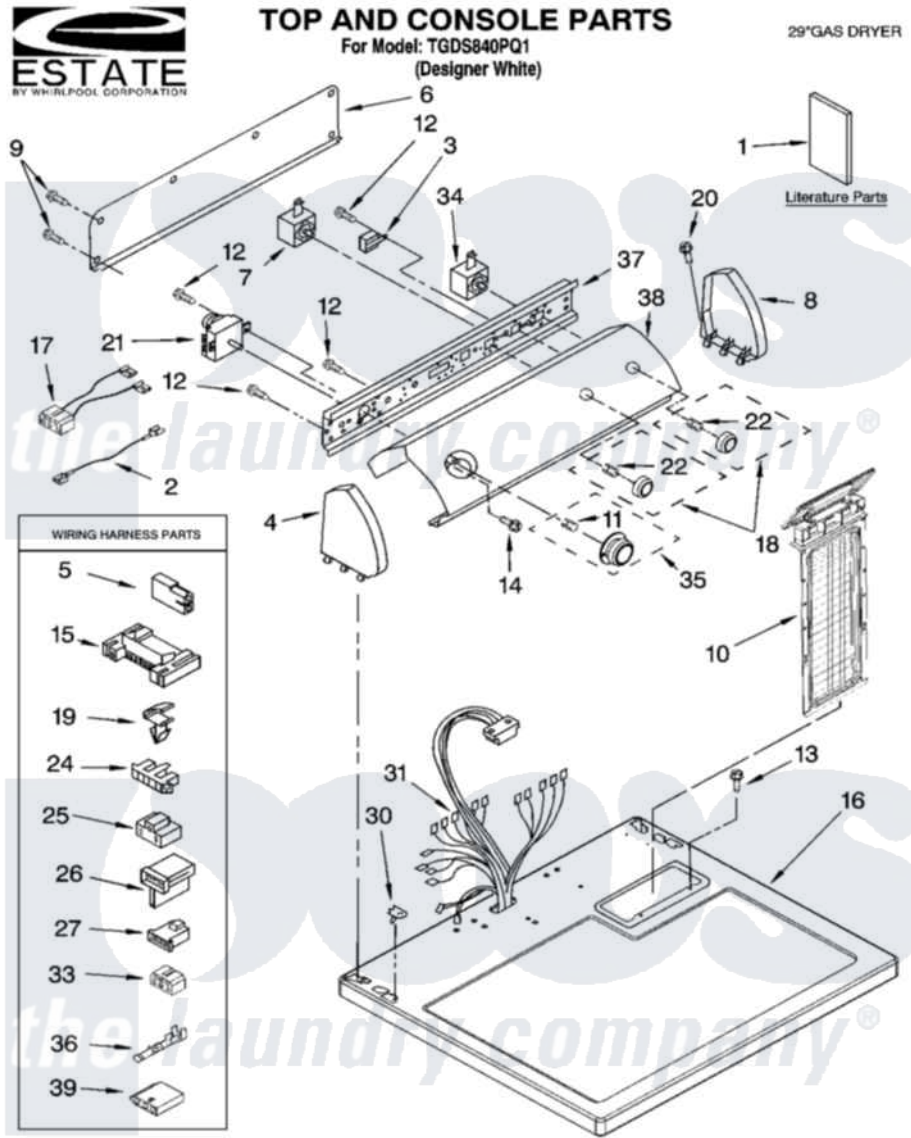

11-05 Litho in U.S.A. (LT)

1

Part No. 8180982

Whirlpool [Residential Whirlpool TGDS840PQ1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8562589		Not Available	Instructions, Installation
"	8578193		Not Available	Guide, Use & Care
"	8528190		Not Available	Wiring Diagram
"	8533781		Not Available	Sheet, Cycle Feature
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	<a href="#">3401684</a>			Jumper, Wire
3	<a href="#">694419</a>			Mini-Buzzer
4	8274437	<a href="#">279960</a>		Endcap
5	<a href="#">717252</a>			Receptacle, Terminal
6	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
7	<a href="#">3399639</a>			Switch, Rotary Temperature
8	8274434	<a href="#">279960</a>		Endcap
9	<a href="#">693995</a>			Screw, Hex Head

10	<a href="#">8558463</a>		Handle And Lint Screen Assembly
11	<a href="#">688805</a>		Clip, Spring Knob
12	8533971	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	8533951	<a href="#">3400859</a>	Screw, Grounding
15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
16	8557930	<a href="#">8563985</a>	Top
17	<a href="#">8539893</a>		Wire, Jumper
18	<a href="#">8557460</a>		Knob, Control
19	<a href="#">3394427</a>		Clip-Harness
20	<a href="#">388326</a>		Screw, 8-18 X 1.25
21	<a href="#">8299765</a>		Timer Assembly
22	<a href="#">8536939</a>		Clip, Knob
24	<a href="#">3397269</a>		Connector, Timer
25	<a href="#">3401144</a>		Connector
26	<a href="#">3403499</a>		Connector, 2-Postion
27	<a href="#">3403498</a>		Connector, 3-Position
30	<a href="#">357213</a>		Nut, Push-In
31	<a href="#">8299879</a>		Harness, Wiring
33	<a href="#">3347243</a>		Block, Disconnect
34	<a href="#">3398095</a>		Switch, Push-To-Start
35	<a href="#">8557456</a>		Timer Knob Assembly
36	<a href="#">94614</a>		Terminal
37	<a href="#">8271418</a>		Bracket, Control
38	<a href="#">3977949</a>		Panel, Control
39	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>