


Whirlpool WED5700VW0 01 - TOP AND CONSOLE PARTS

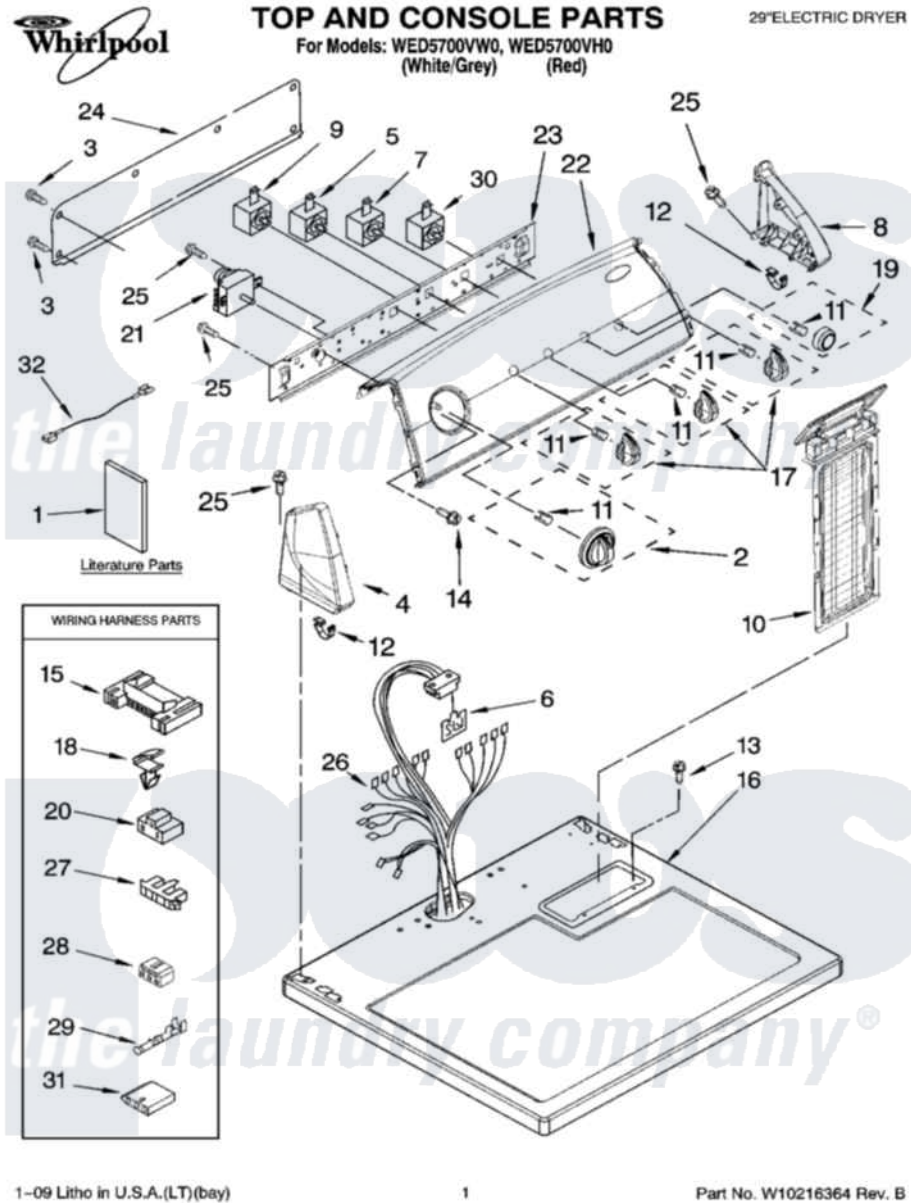

1-09 Litho in U.S.A.(LT)(bay)

1

Part No. W10216364 Rev. B

Whirlpool [Residential Whirlpool WED5700VW0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
"	W10150612		Not Available	Instructions, Installation
"	W10042950		Not Available	Sheet, Cycle Feature
"	W10150610		Not Available	Use & Care Guide
"	8299791		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
2	W10034750			Timer Knob Assembly
3	693995			Screw, Hex Head
4	8566035	8565957		Cap, End
"	W10205959			Cap, End
5	3405154			Switch Rotary
6	8558178			Control, Electronic
7	3398093			Buzzer, Adjustable
8	8566032	8565954		Cap, End
"	W10205953			Cap, End

9	8528330		Switch, Temperature
10	8557857		Screen, Lint
"	W10205825		Screen, Lint
11	8536939		Clip, Knob
12	8312709		Clip-Console
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8533951	3400859	Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	8559800	8563663	Top
"	W10214597		Top
17	W10034380		Knob, Control
18	3394427		Clip-Harness
19	W10034770		Knob, Push-To-Start
20	3401144		Connector
21	3406725		Timer Assembly
22	W10167873		Panel, Control
23	8566052		Bracket, Console
24	8274261		Do-It-Yourself Repair Manuals
25	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
26	8576506		Harness, Wiring
27	3397269		Connector, Timer
28	3347243		Block, Disconnect
29	94614		Terminal
30	3398094		Switch, Push To Start
31	3936144		Do-It-Yourself Repair Manuals
32	3401668		Wire, Jumper

the laundry company[®]

the laundry company[®]