


Whirlpool WFW9400SB01 03 - CONTROL PANEL PARTS

CONTROL PANEL PARTS

For Models: WFW9400SW01, WFW9400SB01, WFW9400ST01, WFW9400SZ01, WFW9400SU01
(White/Chrome) (Black/Chrome) (Biscuit/Gold) (White/Blue) (Ultimate Silver)

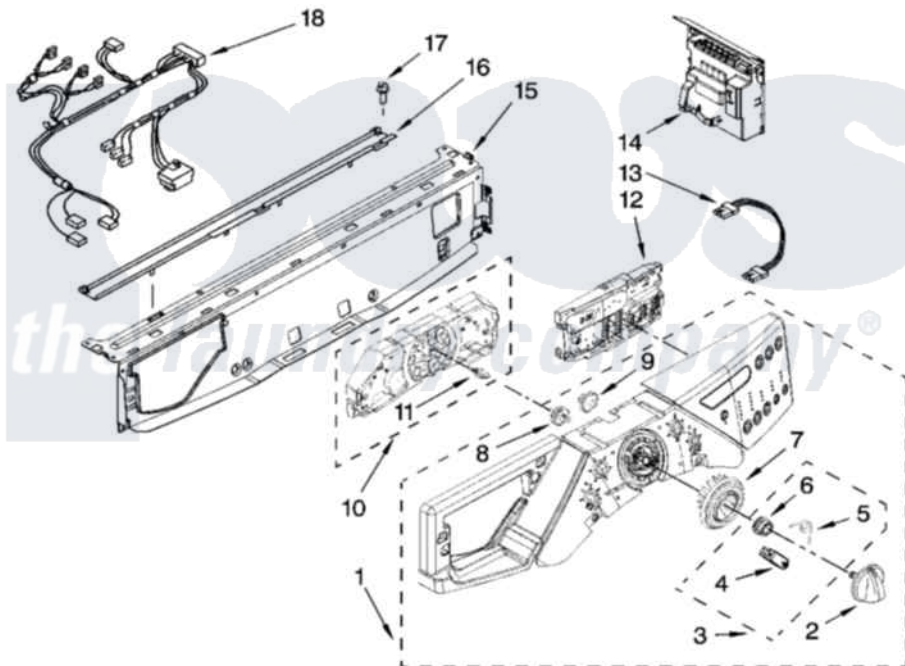

4

W10169558

Whirlpool [Residential Whirlpool WFW9400SB01 Washer Parts](#) Parts Diagram 03 - CONTROL PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8183229			Panel, Control
"	8183230			Panel, Control
"	8183231			Panel, Control
"	8183232			Panel, Control
"	8183233			Panel, Control
2	W10131369			Knob, Control
"	W10131370			Knob, Control
"	W10131372			Knob, Control
"	W10131373			Knob, Control
"	W10131371			Knob, Control
3	W10133927			Wheel, Detent Kit
4	W10131661	W10133927		Wheel, Detent Kit
5	W10131377	W10133927		Wheel, Detent Kit
6	W10131378	W10133927		Wheel, Detent Kit
7	W10131376	W10012410		Knob, Light Ring
8	W10131381			Wheel, Encoder

9	W10131382	W10012440	Retainer-Snap
10	W10164402		User Interface, Center
11	8183177		Adapter, Encoder Wheel
12	W10168598	W10319813	Control-Elec
13	W10168511	8183254	Harness, Wiring
14	8183259		Microcomputer, Machine Control
15	8183203	W10059240	Brace, Front Top
16	8183204		Channel, Water
17	8181756	488729	Screw
18	8183266		Harness, Wiring

