


Whirlpool YLEN1000PQ1 02 - TOP AND CONSOLE PARTS

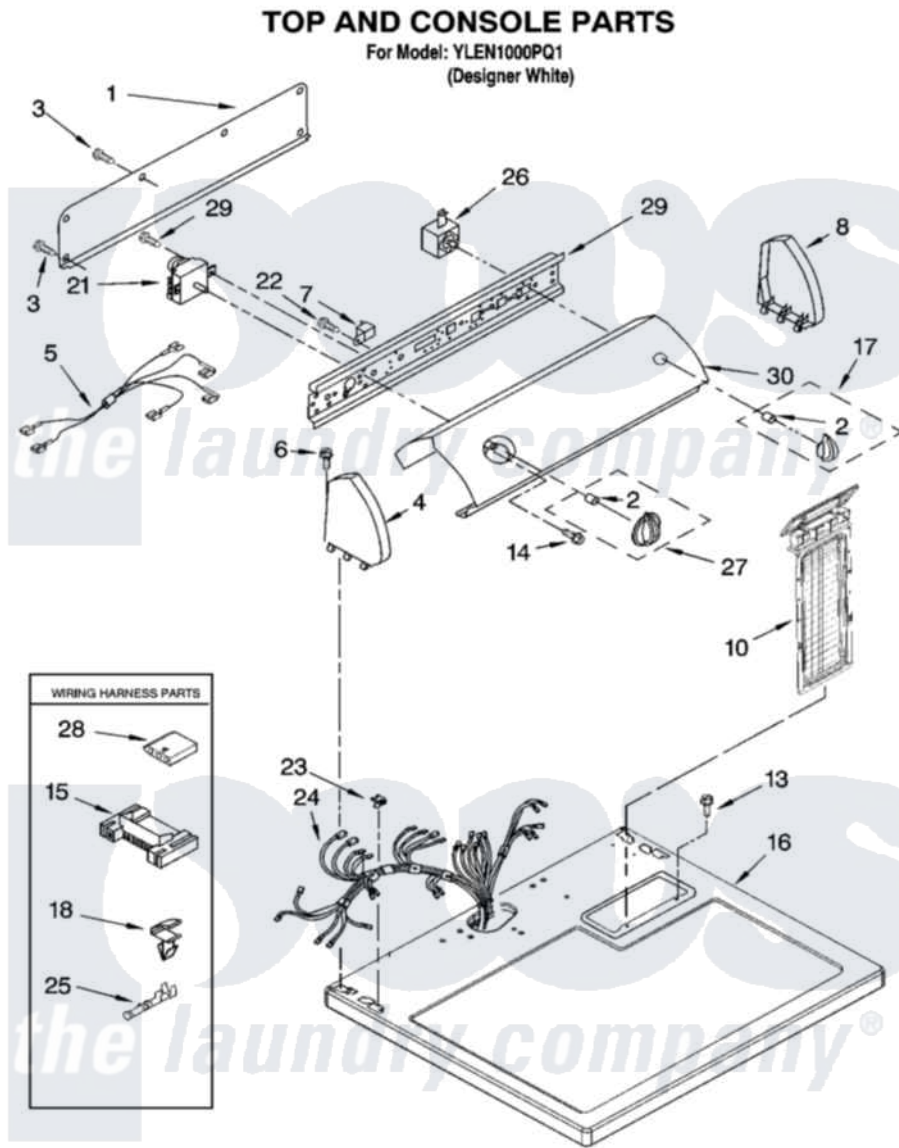

8181020

3

Whirlpool [Residential Whirlpool YLEN1000PQ1 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	8536939			Clip, Knob
3	693995			Screw, Hex Head
4	8271365	279962		Endcap
5	8539888			Jumper, Wire
6	388326			Screw, 8-18 X 1.25
7	694419			Mini-Buzzer
8	8271359	279962		Endcap
10	8557857			Screen, Lint
13	688983	487240		Screw, For Mtg. Service Capacitor
14	8533951	3400859		Screw, Grounding
15	3395683			Receptacle, Multi-Terminal
16	8557930	8563985		Top
17	8544935			Knob, Control
18	3394427			Clip-Harness
21	8299778			Timer, 60 Hz

22	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
23	357213		Nut, Push-In
24	8299870	Not Available	Harness, Wiring
25	94614		Terminal
26	8543274		Switch, Push-To-Start
27	8544955		Timer Knob Assembly
28	3936144		Do-It-Yourself Repair Manuals
29	8271418		Bracket, Control
30	8545971		Panel, Control

