


Whirlpool YLEQ5000KQ1 02 - TOP AND CONSOLE PARTS

TOP AND CONSOLE PARTS

For Models: YLEQ5000KQ1, YLEQ5000KW1
(Designer White) (White/Grey)

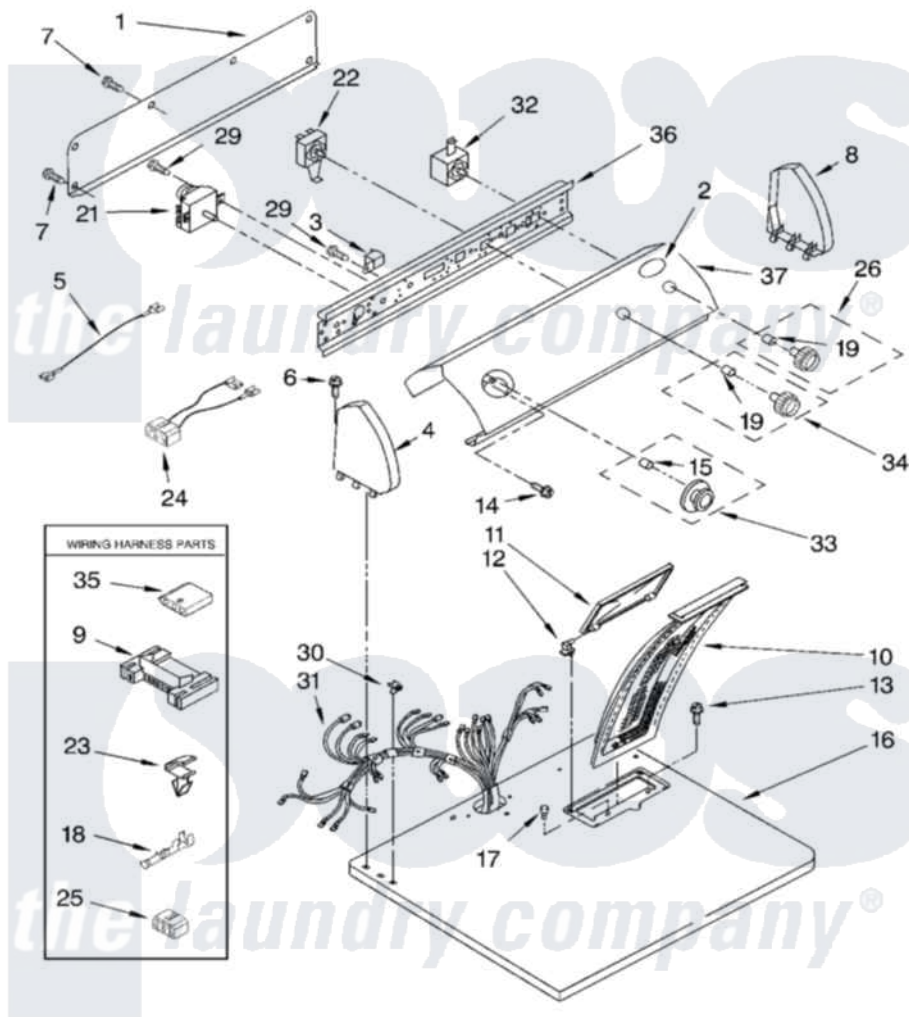

4377994

3

Whirlpool [Residential Whirlpool YLEQ5000KQ1 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	3955775	8303811		Badge, Assembly
3	694419			Mini-Buzzer
4	8271365	279962		Endcap
5	3401674			Wire, Jumper
6	388326			Screw, 8-18 X 1.25
7	693995			Screw, Hex Head
8	8271359	279962		Endcap
9	3395683			Receptacle, Multi-Terminal
10	349639			HANDLE AND LINT SCREEN ASSEMBLY
11	8283378			Cover, Lint Screen
12	3978605	W10044470		Hinge, RH
"	3978606			Hinge, Lint Lid
13	688983	487240		Screw, For Mtg. Service Capacitor
14	3400859			Screw, Grounding

15	688805		Clip, Spring Knob
16	8271390	8521918	Top
17	297535	17258	Bumper
18	94614		Terminal
19	8536939		Clip, Knob
21	8299778		Timer, 60 Hz
22	3405152		Switch, Wrinkle Shield
23	3394427		Clip-Harness
24	8283292	8283276	Wire, Jumper
25	3347243		Block, Disconnect
26	8271341	3957804	Knob, Push-To-Start
"	8538959		Knob, Push-To-Start
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299870	Not Available	Harness, Wiring
32	3977456		Switch, Push-To-Start
33	8312687	3957754	Timer Knob Assembly
"	8538953		Timer Knob Assembly
34	8271339	3957799	Knob, Control
"	8538957		Knob, Control
35	3936144		Do-It-Yourself Repair Manuals
36	8271418		Bracket, Control
37	3977849		Panel, Control
"	8532637		Panel, Control
"	N/A	Not Available	ACCESSORY PARTS
"	3404351		Accessory Parts
"	8522199		Accessory Parts
"	279948	4392065	Kit, Dryer Repair
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

