Magic Chef CAV1004AWW 01 - BASE

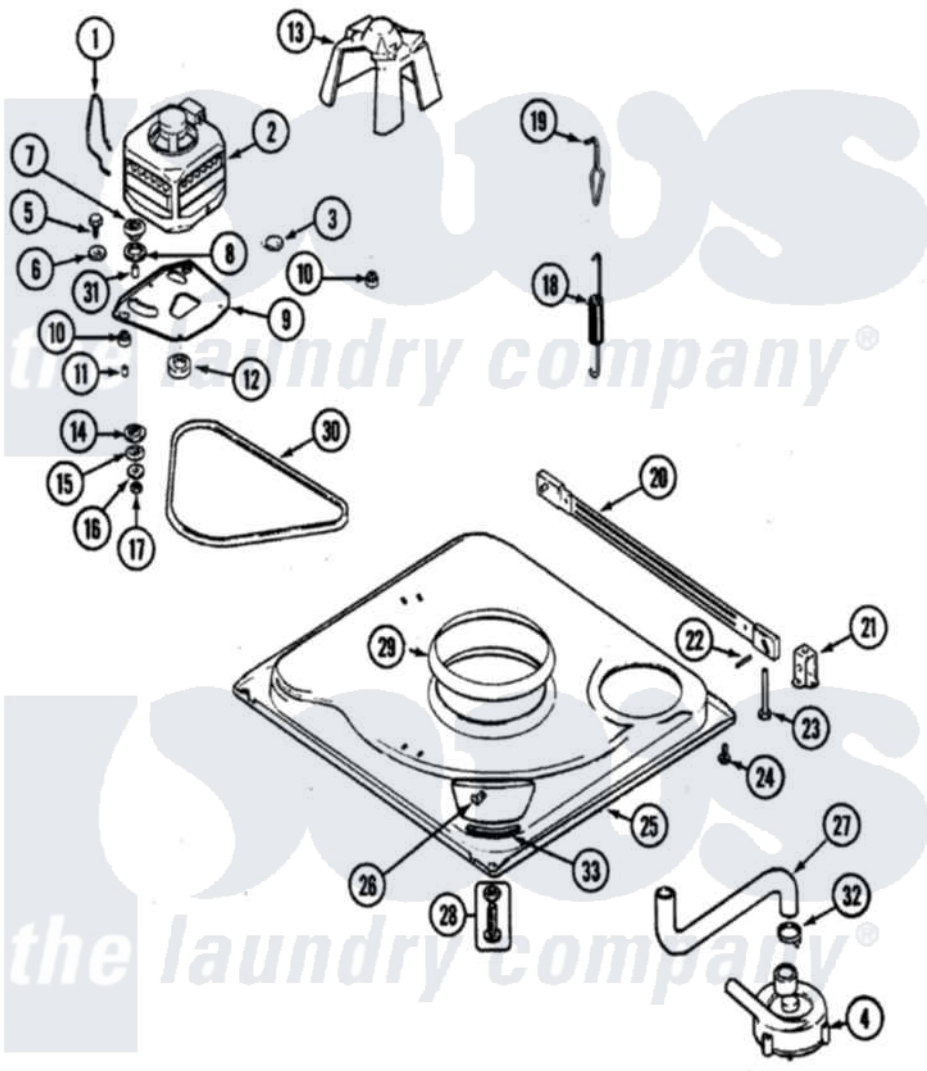

Magic Chef Residential Magic Chef CAV1004AWW Washer Parts Parts Diagram 01 - BASE
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	21001110	22004376		Spring, Motor Pivot
2	21001922	21001950		MoTor, 2SP 1/2hp 120V/60Hz Hi-Tor
3	21001486			Foot Slide, Isolator
4	21001873	35-6780		Pump-Water
"	21002219	35-6780		Pump-Water
5	25-7833	21001977		Screw
6	25-7834			Washer, Motor/Base Screw
7	33-9946			Isolator, Motor
8	35-3570			Washer, Motor Pivot
9	21001783			Plate And Screw Assembly
10	35-3646			Isolator, Motor Plate
11	25-7831			Spacer, Mounting
12	21001506	21001950		MoTor, 2SP 1/2hp 120V/60Hz Hi-Tor
13	21002077			Shield, Control-1 Hole/Console
"	22002721			Shield, Motor

14	35-3571		Slide, Motor Pivot
15	33-9967		Washer, Motor Isolator
16	25-7047		Washer, Flat
17	25-7325	Y707702	Locknut
18	21002065	12002773	Spring
"	12002102	12002773	Spring
19	21001166		Hook, Suspension Spring
20	21001754	21001881	Bar, Stabilizer
21	35-2046		Bracket, Stabilizer
22	35-2052		Pin, Stabilizer
23	35-3020	22004469	Leg And Foot Self Stabalizing
24	25-7828	489483	Screw 10-32 X 1/2
25	21001893	12002701	Base Kit
26	25-7845		Speednut, Motor
27	21001915		Hose, Tub To Pump
28	35-3507	25001119	Foot And Pad Assembly
29	21002026		Snubber
30	35-2279		Belt, Drive
"	21352320		Belt, Drive
31	25-7830		Spacer
32	21002254	285655	Clamp, Hose
"	25-6068	285655	Clamp, Hose
33	35-2065		Pad, Motor Plate

the laundry company®