# Magic Chef YG20EY1 01 - CONTROL PANEL

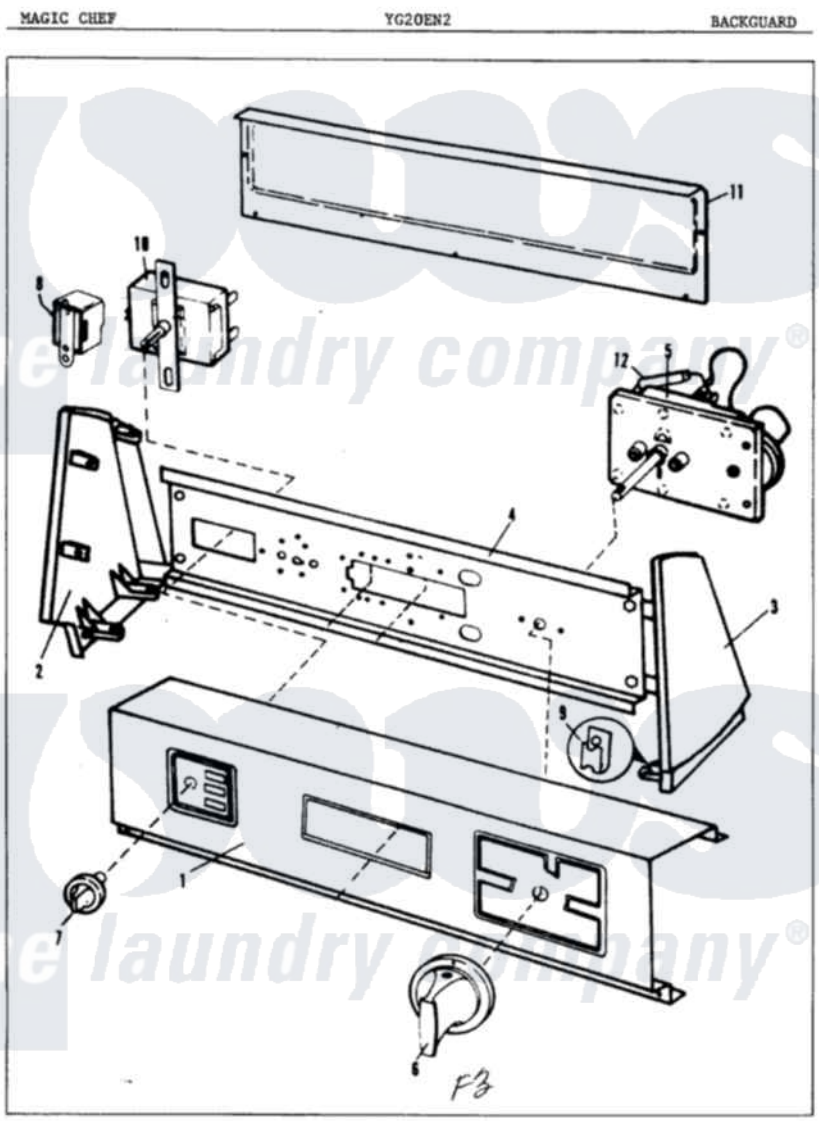


Magic Chef Residential Magic Chef YG20EY1 Dryer Parts Parts Diagram 01 - CONTROL PANEL
Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|---|---|---|---|---|
| 1 | 25-7649 | 910187 | | Screw |
| " | 25-7702 | | | Speedclip, End Cap To Control Panel |
| " | 53-0829 | | Not Available | CONTROL PANEL |
| 2 | 53-0265 | | | LH Endcap |
| 3 | 25-7760 | | | Screw |
| " | 53-0264 | | | RH Endcap |
| " | 53-0277 | | Not Available | TRIM, END CAP (RT) |
| " | 53-0278 | | Not Available | TRIM, END CAP (LT) |
| 4 | 25-3092 | 90767 | | Screw, 8A X 3/8 HeX Washer Head Tapping |
| " | 25-7702 | | | Speedclip, End Cap To Control Panel |
| " | 53-0365 | 53-1676 | | Shield, Control |
| 5 | 25-0289 | | Not Available | SCREW |
| " | 53-0662 | | | Timer |
| " | 53-0635 | | Not Available | TIMER MOTOR |

| | | | | |
|---|---|---|---|---|
| " | 53-0496 | | Not Available | TIMER |
| 6 | 25-6044 | | | Set Screw |
| " | 53-0495 | | Not Available | TIMER KNOB |
| " | 53-0653 | 31001219 | | Knob Ski |
| 7 | 35-0280 | | Not Available | SELECTOR KNOB |
| 8 | 25-7702 | | | Speedclip, End Cap To Control Panel |
| 9 | 53-0456 | | | Switch, Selector |
| " | 25-3092 | 90767 | | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 10 | 34-9487 | | Not Available | PLATE, REINFORCEMENT |
| " | 25-3092 | 90767 | | Screw, 8A X 3/8 HeX Washer Head Tapping |
| " | 25-3457 | | | Screw, Sems |
| " | 25-7435 | 33002917 | | Screw, No.10-16 |
| " | 25-7697 | 25-2219 | | Screw |
| " | 25-7852 | | | Speedclip, Rr Shld To End Cap |
| " | 53-0268 | 21001460 | | Shield, Rear |
| " | 25-7851 | | | Speedclip, End Cap To Top |

the laundry company®
the laundry company®