Whirlpool RAS7133KQ1 02 - CONTROLS AND REAR PANEL PARTS

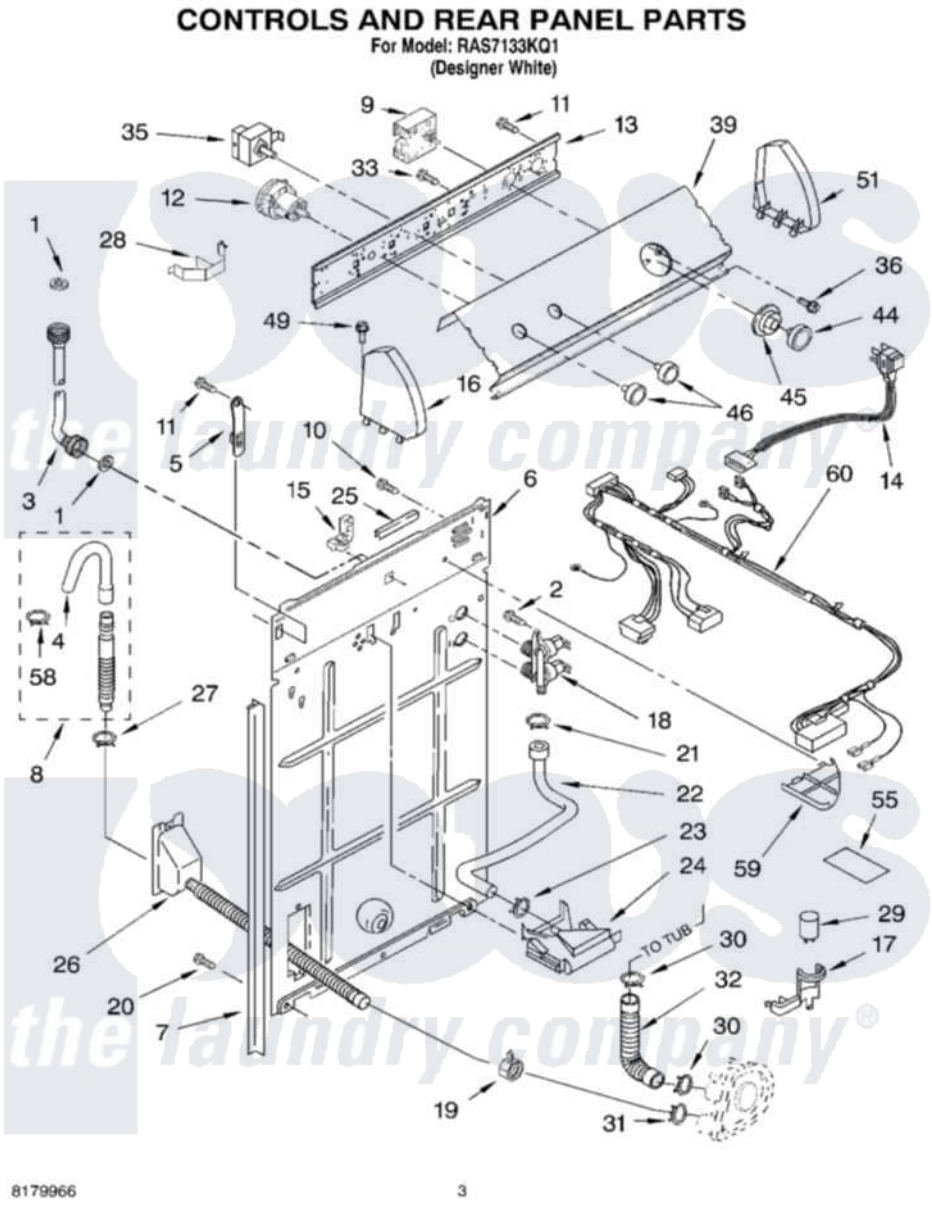

Whirlpool Residential Whirlpool RAS7133KQ1 Washer Parts Parts Diagram 02 - CONTROLS AND REAR PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3976300	16123		Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
2	9740848			Screw, Mixing Valve Mounting
3	3949374	89503		Hose-Inlet
"	3949375	89503		Hose-Inlet
4	3357027			Nozzle, Hose Drain
5	8318255	8568314		Strap, Console
6	3357978			Panel, Rear
7	62747			Pad, Rear Panel
8	3951609	285664		Hose
"	661577	285666		Hose
"	3357090	285702		Hose
9	3948323			Timer, Control
10	3351614			Screw, Gearcase Cover Mounting
11	90767			Screw, 8A X 3/8 HeX Washer Head Tapping

12	3366848	W10339229		Switch-WL
13	3948608			Bracket, Control
14	661661	285800		Cord-Power
15	3952821	285777		Relief-Str
16	8274437	279960		Endcap
17	8318201	8318046		Clip, Capacitor
18	3952164	285805		Valve-Inlet
19	3976395			Restraint, Hose
20	62863	3390631		Screw, 10-16 X 3/8
21	370451	596669		Clamp, Manifold
22	3357328			Hose, Vacuum Break
23	371503	596669		Clamp, Manifold
24	387606	3360977		Break-Vac
25	303294	3367669		Protector, Edge
26	8317940	W10358149		Drain Hose Assembly
27	3366912	356138		Clamp, Hose
28	8055003			Clip, Harness And Pressure Switch
29	661606	8572717		Capacitor, Motor Start
30	3363366	616099		Clamp
31	8317496	285655		Clamp, Hose
32	3951449	285871		Hose
33	3400073			Screw, Ground
35	661612	W10168256		Switch, Water Temperature
36	3400064			Screw, Timer Mounting
39	3955682		Not Available	Panel, Console
44	8274392			Knob, Timer
45	8274369		Not Available	Dial, Timer
46	8274378			Knob, Control
49	388326			Screw, 8-18 X 1.25
51	8274434	279960		Endcap
55	3976286			Shield, Capacitor
58	3366913	3357331		Clamp, Drain
59	3348424	8539874		Shield, Suds
60	3954932			Harness, Wiring

the laundry company®