Crosley CAW12444XW1 04 - GEARCASE, MOTOR AND PUMP PARTS

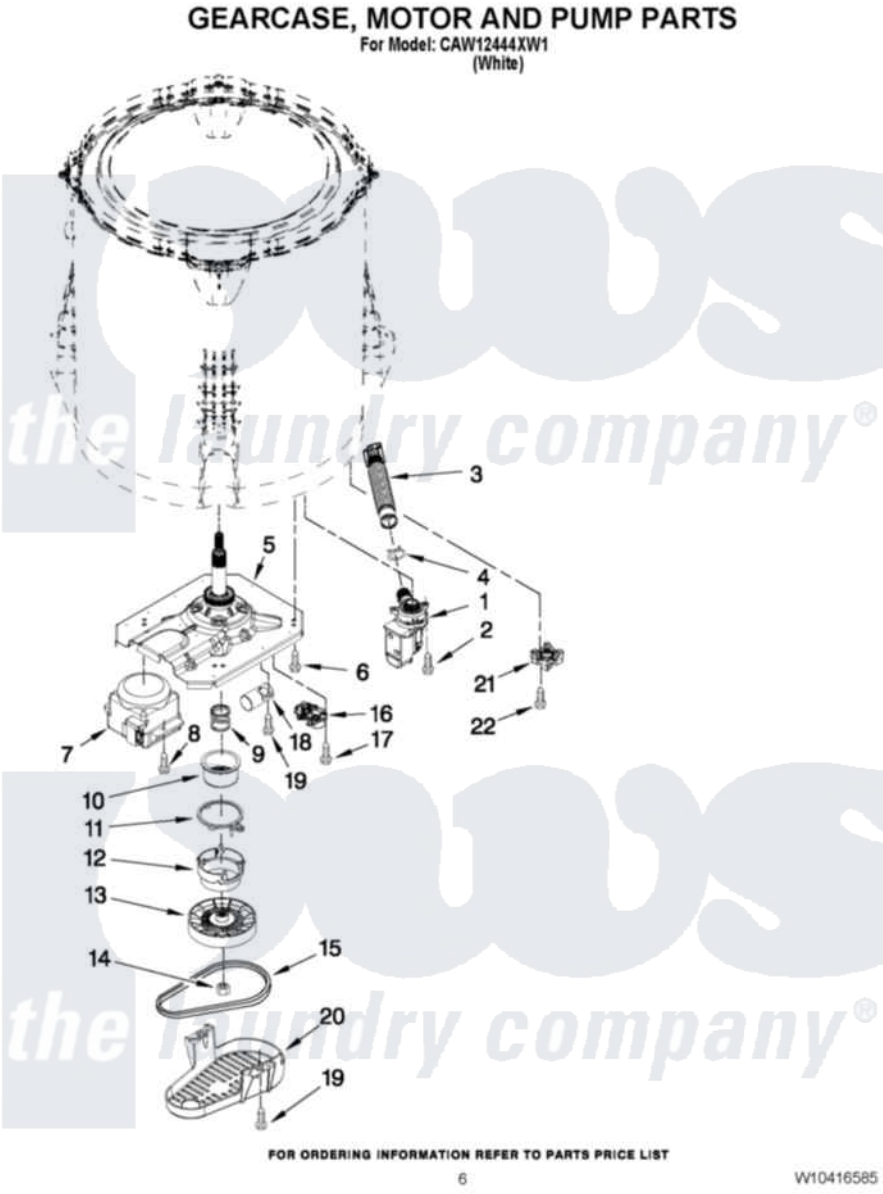

Crosley Residential Crosley CAW12444XW1 Washer Parts Parts Diagram 04 - GEARCASE, MOTOR AND PUMP PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10276397			Pump Assembly, Drain
2	W10004910			Screw, 12-16 X 1-1/4
3	W10215091			Hose, Inner Drain Assembly
4	8317496	285655		Clamp, Hose
5	W10006379	W10324649		Gearcase
6	W10249633			Screw, 7.2-1.6 X 30
7	W10249628			Motor, Drive
8	W10094780	W10182109		Screw-Kit
9	W10006382	W10315818		Cam
10	W10006352	W10315818		Cam
11	W10006353	W10315818		Cam
12	W10006354	W10315818		Cam
13	W10006356			Pulley
14	W10163336			Nut, Pulley
15	W10006384			Belt, Drive
16	W10006355			Actuator, Shift

17	9741052	Screw, 6-32 X 1.00
18	W10278117	Capacitor, Motor Run
19	357640	Screw And Washer
20	W10006383	Shield, Pulley Cover
21	W10238318	Counterweight
22	W10238319	Screw, 8-18 X 1.00

the laundry company®
the laundry company®
the laundry company®