# Maytag GDG31CM 15 - CONTROL CENTER & COMPONENTS

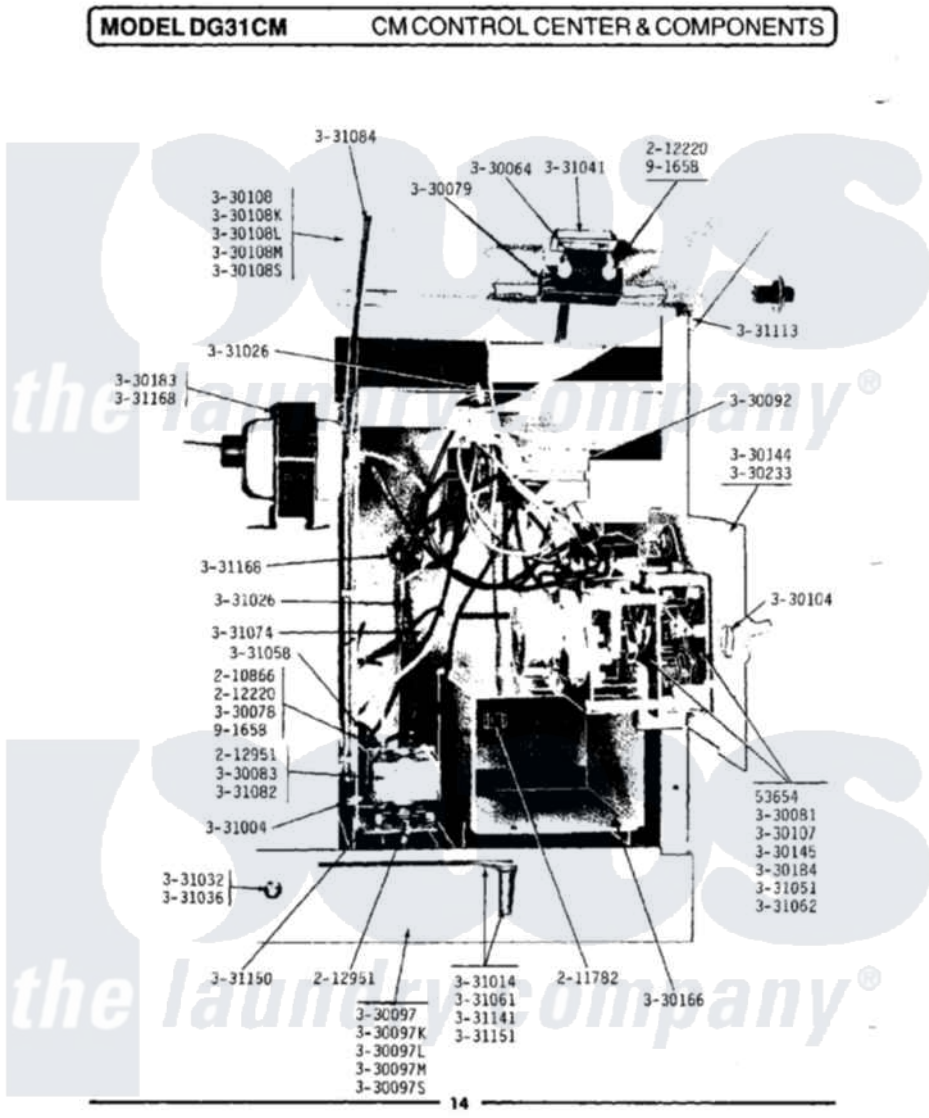


Maytag Residential Maytag GDG31CM Dryer Parts Parts Diagram 15 - CONTROL CENTER & COMPONENTS
Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|---|---|---|---|---|
| NI | NLA | | Not Available | SCREW, No.5-40 X 3/8 |
| " | 210866 | | | Nut, Twin Speed |
| " | NLA | | Not Available | CAGE NUT |
| 004 | 212220 | 213501 | | Screw, No.6-20 X 1-1/8 Inch |
| NI | 212951 | | | Screw, No.6-32 X 1/4 Inch |
| 006 | Y330064 | | | Pilot Light |
| NI | Y330078 | | | Cool-Down Bypass Switch |
| 008 | Y330079 | | Not Available | SWITCH, PUSH-TO-START |
| 009 | 330081 | | | Timer - CA 60 Minutes |
| NI | Y330083 | | Not Available | CONTROL, TEMPERATURE |
| " | Y330092 | | | Terminal Block |
| " | NLA | | Not Available | FRONT PANEL-WHITE |
| " | NLA | | Not Available | FRONT PANEL-SHADED AVOCADO |
| " | NLA | | Not Available | FRONT PANEL-ALMOND |
| " | NLA | | Not Available | FRONT PANEL-HARVEST WHEAT |

| | | | | |
|---|---|---|---|---|
| " | NLA | | Not Available | FRONT PANEL-SUNSET CORAL |
| " | Y330100 | | Not Available | COIN BOX ASSEMBLY |
| " | NLA | | Not Available | LOCK |
| " | NLA | | Not Available | TIMER ACCUMULATOR - CM |
| " | NLA | | Not Available | FRONT PANEL-WHITE |
| " | NLA | | Not Available | FRONT PANEL-SHADED AVOCADO |
| 022 | 330108L | | Not Available | FRONT PANEL-ALMOND |
| 023 | 330108M | | Not Available | FRONT PANEL-HARVEST WHEAT |
| NI | NLA | | Not Available | FRONT PANEL-SUNSET CORAL |
| " | NLA | | Not Available | MOUNTING PLATE (ACCUMULATOR) |
| 026 | Y330145 | | Not Available | CONTA ACCUMULATOR ASSEMBLY |
| NI | NLA | | Not Available | VAULT ASSEMBLY |
| 028 | 330183 | | Not Available | TRANSFORMER |
| 029 | 330184 | | | Timer Accumulator-25 |
| 030 | Y330233 | | | Mounting Plt, Cm Timer Accum. |
| NI | NLA | | Not Available | SCREW - BRACKET TO VAULT |
| 032 | 331014 | 8281196 | | Screw |
| 033 | 331026 | 90767 | | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 034 | 331032 | 61002031 | | Screw, Handle |
| 035 | 331036 | | | Washer-Front Panel Screws |
| 036 | 331041 | | | Button-Push-To-Start Switch |
| NI | NLA | | Not Available | PART NOT USED |
| 038 | 331058 | | | Grommet-Temp. Control Tubin |
| 039 | 331061 | | | Knob For Temperature Contro |
| NI | NLA | | Not Available | PART NOT USED |
| " | NLA | | Not Available | MOUNTING PLATE-DOOR SWITCH |
| " | NLA | | Not Available | SPACER - TEMP CONTROL COVER |
| 043 | 331084 | | Not Available | SUPPORT ROD FOR UPPER DOOR |
| NI | NLA | | Not Available | HINGE RIVET |
| " | NLA | | Not Available | SCREW-TEMP CONTROL LEVER |
| " | NLA | | Not Available | BRACKET-TEMPERATURE CONTROL |
| " | 331151 | | | Lever-Temperature Control |
| " | NLA | | Not Available | NUT FOR CONDUIT |
| " | NLA | | Not Available | LIGHTING INSTRUCTIONS LABEL |
| " | NLA | | Not Available | TWIN FASTENER WITH SCREWS |